

Lely Juno

Feed Pusher



Operator Manual

en-US - English Original

5.4303.8558.0 A





INTENTIONALLY BLANK

Trademarks, Copyright and Disclaimer

The information given in this publication is provided for information purposes only and does not constitute an offer for sale. Certain products may not be available in individual countries and products supplied may differ from those illustrated.

No part of this publication may be copied or published by means of printing, photocopying, microfilm or any other process whatsoever without prior permission in writing by Lely Holding b.v. Although the contents of this publication have been compiled with the greatest possible care, Lely cannot accept liability for any damage that might arise from errors or omissions in this publication.

For more information on the right on exclusive use please refer to our trademark notice on www.Lely.com.

App Store and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

The trademark "iPhone" is used in Japan with a license from Aiphone K.K.

Google Play and Android are trademarks of Google Inc.

Copyright © 2024 Lely Holding B.V..
All rights reserved

Lely Industries N.V.
Cornelis van der Lelylaan 1
3147 PB Maassluis
the Netherlands
Phone: +31 (0)88 1228221
Fax: +31 (0)88 1228222
Website: www.Lely.com



INTENTIONALLY BLANK

5.4303.8558.0 A

List of included Amendments

| Issue Date (yyyy/mm) | Revision | Chapter(s) | Remarks |
|-------------------------|----------|------------|---|
| 2022/06 | – | | Initial issue. |
| 2024/03 | A | | <ul style="list-style-type: none"> Machine 5.4303.0855.X added. Requirements for minimum free space around the machine changed. Requirements for slopes and feed alley width changed. LED beacon description changed. |



INTENTIONALLY BLANK

5.4303.8558.0 A

Preface

Manual Contents

This manual contains the information necessary to operate the Juno feed pusher.

The information in this manual is for operators.



Study and understand this information thoroughly before you operate the machine. Failure to do so could result in damage to equipment or personal injury. Please consult your local Lely service provider if you do not understand the information in this manual, or if you need additional information. Store this manual in a safe place for future reference.

All information in this manual has been compiled with care. Lely shall not be liable for errors or faults in this manual. The recommendations are meant to serve as guidelines. All instructions, pictures and specifications in this manual are based on the latest information that was available at the time of publication. Your machine may comprise improvements, features or options that are not covered in this manual.

Applicability

The table below shows the machine type numbers for which this manual is applicable.

Model designation

| Model | Type number |
|---|---------------|
| Juno Feed Pusher with Flex Package: <ul style="list-style-type: none"> • Led Beacon. • Shock system. • Left and right feed pushing, skirt lifting, second ultrasound sensor. | 5.4303.0860.X |
| Juno Feed Pusher double-sided: <ul style="list-style-type: none"> • Left and right feed pushing, skirt lifting, second ultrasound sensor. | 5.4303.0855.X |
| Juno Feed Pusher one-sided: <ul style="list-style-type: none"> • Left or right feed pushing, single ultrasound sensor. | 5.4303.0850.X |

Standard Torque Loading of Parts

All the nuts, bolts and screws used on the machine are torque tightened to standard torque loadings applicable to the construction materials used.

If a part has a non-standard torque loading, it is specified in the applicable part of the manual.

Registration


The type and serial number plate of the machine is attached to the mechanism underneath the cover. Always include the type and serial number of your machine when you contact your local Lely service provider or when you order spare parts.



Figure 1. Type and serial number plate

We suggest that you complete the table below with the type and serial numbers of your machine. This makes sure that you can easily find the information.
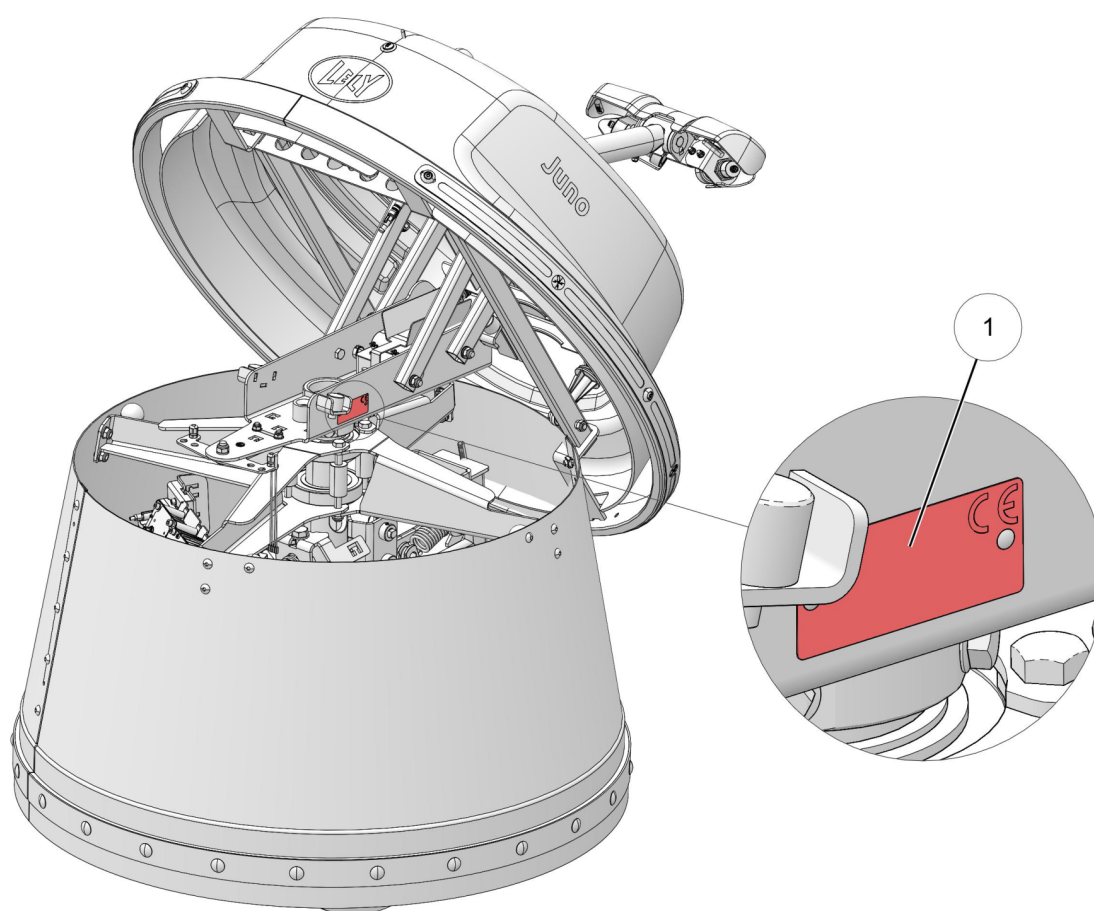
| | |
|---------------|--|
| Type number | |
| Serial number | |



J2_2022_Tech_DOC_OPEN-01-016

Figure 2. Location type and serial number plate

KEY: 1. Type and serial number plate

Personnel Requirements



***Risk of accident from insufficiently qualified personnel.
Unqualified personnel working on the machine can be the cause of serious injuries and considerable damage to material.***

- ***All activities must only be carried out by qualified personnel.***
- ***Keep unqualified personnel away from the machine.***
- ***Only persons who can be expected to carry out their job reliably are authorized as personnel. Persons whose reactions are impaired, e.g. by drugs, alcohol, medications are not authorized to work with the machine.***

Maintenance Authorization



***Risk of accident from uncertified technicians.
Uncertified technicians doing maintenance on the machine can be the cause of serious injuries and considerable damage to material.
Only technicians certified by Lely Industries are authorized to do maintenance on the machine, except for the maintenance done by the operator as indicated in the operator manual. If people who are not certified by Lely Industries do maintenance on the machine, the warranty on the machine becomes invalid.***

Technician Training

All the technicians certified by Lely Industries have completed an approved training program, and passed written and practical examinations during and at the end of the training program. The training is given by Lely International or a specialist from the LSO and includes troubleshooting and corrective maintenance of the machine.

During training, a trainee is permitted to work for up to a maximum of six months under close supervision of a certified technician. A trainee can do work on the machine only in the presence of a certified technician.

Contact Number Local Service Provider

We suggest you write the telephone number and email address of your local service provider contact in the table below. This makes sure you can easily find the information.

| | |
|------------------|--|
| Telephone number | |
| email address | |

Left, Right, Rear and Front

The positions left, right, rear and front in this manual refer to either:

- The machine, as seen in the driving direction.
- The particular component, as seen when standing in front of it.



INTENTIONALLY BLANK

5.4303.8558.0 A

Table of Contents

| | | |
|----------|-------------------------------------|------------|
| 1 | Lely Juno | 1-1 |
| 1.1 | The Lely Juno Feed Pusher | 1-1 |
| 1.2 | Intended Use | 1-1 |
| 2 | Safety | 2-1 |
| 2.1 | Introduction | 2-1 |
| 2.2 | Signal Icons | 2-1 |
| 2.3 | Safety Instructions | 2-2 |
| 2.3.1 | General Safety | 2-2 |
| 2.3.2 | Electrical Safety | 2-3 |
| 2.3.3 | Operating Safety | 2-3 |
| 2.4 | Safety Decals | 2-7 |
| 2.4.1 | Position of the Safety Decals | 2-7 |
| 2.4.2 | Explanation of Safety Decals | 2-7 |
| 2.4.3 | Installation of Safety Decals | 2-8 |
| 2.4.4 | Maintenance of Safety Decals | 2-8 |
| 2.5 | Safety Devices | 2-9 |
| 2.5.1 | Emergency Stop Button | 2-9 |
| 2.5.2 | Pause Button | 2-9 |
| 2.5.3 | Bumper | 2-10 |
| 2.5.4 | Bumper Sensors | 2-10 |
| 2.5.5 | Buzzer | 2-10 |
| 2.5.6 | Software Controlled Charging System | 2-10 |
| 2.5.7 | Overload Protection | 2-10 |
| 2.5.8 | Barn Door Control (optional) | 2-11 |
| 2.5.9 | Shock System (optional) | 2-11 |
| 2.5.10 | LED Beacon (optional) | 2-12 |
| 3 | Specifications | 3-1 |
| 3.1 | Feed Pusher | 3-1 |
| 3.1.1 | Dimensions and Weight | 3-1 |
| 3.1.2 | Battery | 3-1 |
| 3.1.3 | Operation | 3-1 |
| 3.1.4 | Miscellaneous | 3-2 |
| 3.2 | Charging Station | 3-2 |
| 3.2.1 | Dimensions and Weight | 3-2 |
| 3.2.2 | Battery Charger | 3-2 |
| 3.2.3 | Smartphone Requirements | 3-3 |
| 4 | Description and Operation | 4-1 |
| 4.1 | Introduction | 4-1 |
| 4.2 | Component Description | 4-1 |

| | | |
|----------|--|------|
| 4.2.1 | Feed Pusher Vehicle | 4-1 |
| 4.2.2 | Covers | 4-2 |
| 4.2.3 | Carriage | 4-3 |
| 4.2.4 | Driving Mechanism | 4-3 |
| 4.2.5 | Power System | 4-4 |
| 4.2.6 | Safety System | 4-5 |
| 4.2.7 | Control System | 4-6 |
| 4.2.8 | Shock System (optional) | 4-7 |
| 4.2.9 | Skirt Lift and Rotation System | 4-9 |
| 4.2.10 | Charging Station | 4-10 |
| 4.3 | User Interface | 4-11 |
| 4.3.1 | Main Menu | 4-11 |
| 4.3.2 | Home | 4-14 |
| 4.3.3 | Testing | 4-14 |
| 4.3.3.1 | Power Management | 4-16 |
| 4.3.3.2 | Motors | 4-17 |
| 4.3.3.3 | Ultrasound Sensors | 4-18 |
| 4.3.3.4 | Induction Sensors | 4-19 |
| 4.3.3.5 | Gyroscope | 4-20 |
| 4.3.3.6 | Pause Button | 4-21 |
| 4.3.3.7 | Electric Actuator | 4-22 |
| 4.3.3.8 | Buzzer | 4-23 |
| 4.3.3.9 | Wheels | 4-24 |
| 4.3.3.10 | Safety Bumper | 4-25 |
| 4.3.3.11 | Emergency Button | 4-26 |
| 4.3.3.12 | Temperatures | 4-27 |
| 4.3.3.13 | Statistics | 4-28 |
| 4.3.3.14 | Barn Door | 4-29 |
| 4.3.4 | Machine Info | 4-30 |
| 4.3.5 | Manual Control | 4-30 |
| 4.3.6 | Routes | 4-33 |
| 4.3.7 | Feed Options | 4-33 |
| 4.3.8 | Day Planning | 4-36 |
| 4.3.9 | Alarms | 4-37 |
| 4.3.10 | Settings | 4-39 |
| 4.3.10.1 | Machine Configuration | 4-41 |
| 4.3.10.2 | Machine Settings | 4-41 |
| 4.3.10.3 | Wheels | 4-42 |
| 4.3.10.4 | Wifi Configuration | 4-42 |
| 4.3.10.5 | Backup | 4-43 |
| 4.3.10.6 | Logs | 4-44 |
| 4.3.10.7 | Software Restart | 4-44 |
| 4.3.10.8 | Language | 4-45 |
| 4.3.10.9 | About | 4-46 |
| 4.3.11 | Logout | 4-46 |
| 4.4 | Operation | 4-46 |
| 4.4.1 | Actions, Routes, Day Planning and Manual Control | 4-46 |
| 4.4.2 | Control System | 4-47 |

| | | |
|----------|------------------|------------|
| 5 | First use | 5-1 |
|----------|------------------|------------|

| | | |
|----------|-------------------------------|------------|
| 6 | Operating Instructions | 6-1 |
|----------|-------------------------------|------------|

| | | |
|----------|---|------------|
| 6.1 | Preparation | 6-1 |
| 6.2 | Install the Lely Control Plus App on the Smartphone | 6-2 |
| 6.3 | Rename the Machine on the Smartphone | 6-2 |
| 6.4 | Set the Farmer Password | 6-2 |
| 6.5 | Open or Close the Cover | 6-2 |
| 6.6 | Switch the Machine ON or OFF | 6-3 |
| 6.7 | Pair the Machine with the Smartphone | 6-5 |
| 6.8 | Start the Lely Control Plus App on the Smartphone | 6-6 |
| 6.9 | Manually control the Machine | 6-7 |
| 6.10 | Drive the Machine to the Charging Station | 6-10 |
| 6.11 | Set Feed Options | 6-11 |
| 6.11.1 | Edit Feed Groups and set Feed Push Power | 6-11 |
| 6.11.2 | Assign Feed Groups | 6-12 |
| 6.12 | Modify Actions of an existing Route | 6-13 |
| 6.13 | Make a Backup | 6-13 |
| 6.14 | Copy a Backup File from the Smartphone to a PC | 6-13 |
| 6.15 | Copy a Backup File from a PC to the Smartphone | 6-14 |
| 6.16 | Create a Day Planning | 6-14 |
| 6.17 | Put the Machine into Operation | 6-15 |
| 6.18 | Pause the Machine | 6-15 |
| 6.19 | Take the Machine out of Operation | 6-16 |
| 6.20 | Disconnect the Smartphone from the Machine | 6-16 |
| 6.21 | Manually start a Route | 6-16 |
| 6.22 | Reset the Emergency Stop Button | 6-16 |
| 6.23 | Drive the Machine when the Bumper is blocked | 6-17 |
| 6.24 | Hoist the Machine | 6-18 |
| 7 | Maintenance | 7-1 |
| 7.1 | Introduction | 7-1 |
| 7.2 | Preventive Maintenance Schedule | 7-1 |
| 7.3 | Maintenance Procedures | 7-1 |
| 7.3.1 | Examine the Charging Station | 7-1 |
| 7.3.2 | Clean the Charging Strips and the Charging Electrodes | 7-2 |
| 7.3.3 | Examine and Clean the Ultrasonic Sensor(s) | 7-4 |
| 7.3.4 | Clean the Machine | 7-5 |
| 7.3.5 | Examine the Skirt | 7-5 |
| 7.3.6 | Adjust the Ultrasonic Sensor Height | 7-6 |
| 7.3.7 | Examine the Drive Wheels | 7-8 |
| 7.3.8 | Calibrate the Wheels | 7-8 |
| 7.3.9 | Test the Emergency Stop Button | 7-9 |

| | | |
|-----------|--|-------------|
| 7.3.10 | Examine and replace the metal Strips | 7-9 |
| 7.3.11 | Test the Inductive Sensors | 7-12 |
| 7.3.12 | Test the Barn Door Control Sensors | 7-13 |
| 7.3.13 | Set the Gyroscope Target Temperature | 7-14 |
| 8 | Troubleshooting | 8-1 |
| 8.1 | Alarm Handling | 8-1 |
| 8.2 | Create a Robot Log | 8-2 |
| 8.3 | Troubleshooting Tables | 8-2 |
| 8.3.1 | Troubleshooting Table Juno Vehicle | 8-2 |
| 8.3.2 | Troubleshooting Table Juno Charging Station | 8-5 |
| 8.4 | Reset the Machine when it is connected to the Charging Station | 8-5 |
| 9 | Diagrams | 9-1 |
| 9.1 | Dimensions Feed Pusher | 9-1 |
| 9.2 | Dimensions Charging Station | 9-2 |
| 10 | CE Questionnaire Barn Door Supplier | 10-1 |
| 11 | Disposal | 11-1 |
| 12 | WEEE | 12-1 |
| 13 | Declaration of Conformity | 13-1 |
| 13.1 | EC Declaration of Conformity – Feed Pusher | 13-1 |
| 13.2 | UKCA Declaration of Conformity – Feed Pusher | 13-2 |
| 13.3 | EC Declaration of Conformity – Door Control Box | 13-3 |
| 13.4 | UKCA Declaration of Conformity – Door Control Box | 13-4 |

Index

1 Lely Juno

1.1 The Lely Juno Feed Pusher

The Juno Feed Pusher is a battery-driven vehicle that pushes the forage towards the feed fence of the barn. This gives the cows better access to more fresh food through the day. The rotating lower part of the side of the feed pusher pushes the forage against the feed fence while the machine drives along the feed alley.

The information in this manual is for operators. The operator uses the information to operate the feed pusher. The operator also uses the information to do maintenance.

The operator must read the operating instructions for daily operation and for the setup of a day planning. He must also read the maintenance and troubleshooting sections for preventive and basic corrective maintenance instructions.

The operator should refer to the description and the operation section for background information. The operator must also read and understand the safety instructions in the section 'Safety'.

1.2 Intended Use

The Juno is designed as an autonomous driving machine to push cattle feed towards the feed fence in a barn.

The feed pusher has been built exclusively for pushing cattle feed lying on the ground of a barn with a level concrete floor (= proper use). Usage going beyond that does not constitute proper use. The manufacturer is not liable for damage resulting from improper use; the operator only bears the risk.

Intended use also implies that the instructions and rules prescribed by the manufacturer are obeyed.



INTENTIONALLY BLANK

5.4303.8558.0 A

2 Safety

2.1 Introduction

The Juno Feed Pusher is an automated machine. Therefore it is of the utmost importance to obey all safety instructions.

2.2 Signal Icons

Note the use of the signal words DANGER, WARNING and CAUTION with the safety messages. The signal word for each message uses the following guidelines:



Danger
Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Warning
Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Caution
Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Notice
Is used to address practices not related to physical injury e.g. property damage.



Tip
Indicates information that may help the reader, but not hazard related.

2.3 Safety Instructions

YOU are responsible for the SAFE operation and maintenance of your machine. YOU must make sure that you and anyone else who is going to operate, maintain or work in the vicinity of the machine knows all the related SAFETY information in this manual.

YOU are the key to safety. Good safety practices protect you and the people around you. Make these practices a working part of your safety program. Make sure that EVERYONE who operates, maintains or works near the machine obeys the safety precautions. Do not risk injury or death by ignoring good safety practices.

- Owners must train operators before they operate the machine. This training must be repeated at least annually.
- The operator must read, understand and obey all safety and operating instructions in the manual.
- A person who has not read and understood all safety and operating instructions is not permitted to operate the machine.
- Do not modify the equipment in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment and persons.
- Only use approved spare parts and make sure that they are only installed by authorized technicians.

5.4303.8558.0 A



The hazards in the operating zone and working area pose a risk of fatal injury to unauthorized persons.

Unauthorized persons who do not satisfy the requirements described herein are not aware of the hazards in the work area. Unauthorized persons are therefore at risk of serious or fatal injury.

- ***Keep unauthorized persons away from the operating zone and work area.***
- ***If in doubt, approach unauthorized persons and ask them to leave the operating zone and work area.***
- ***Stop work as long as unauthorized persons are within the operating zone and work area.***

2.3.1 General Safety

- An authorized technician must install the machine and its optional components.
- Read and understand the manual and all safety signs before you connect power supplies to operate, maintain or adjust the machine.

- Only trained persons are permitted to operate the machine.
- A first-aid kit must be available near the machine. Store in a highly visible place.
- A carbon dioxide or foam fire extinguisher must be available near the machine. Store in a highly visible place.
- Install all protective covers before you operate the machine.
- Wear the correct protective clothing and equipment.
- When the buzzer is defect, make sure it is being repaired before putting the machine into operation again.
- When a part on the machine is broken or missing, take the machine out of operation. Make sure the part is repaired before you put the machine into operation again.
- Disconnect and isolate the electrical power supply, before you clean or do maintenance on the machine.
- Do not stand or sit on the machine (not when it is standing still and not when it is driving).
- Know the emergency medical center number for your area.
- Contact your nearest Lely service provider if you have any questions.
- Review safety related items with all operators frequently (annually).

2.3.2 Electrical Safety

- Only an authorized electrician must install the electrical power supply and grounding for the charging station of the Juno.
- Make sure the electrical power supply and grounding meet local rules and regulations.
- Replace any damaged electrical lines, conduits, switches and components immediately.
- Switch the power OFF with the OFF button before you start to work on the system.
- Pull the plug from the socket before you start to work on the charging station.

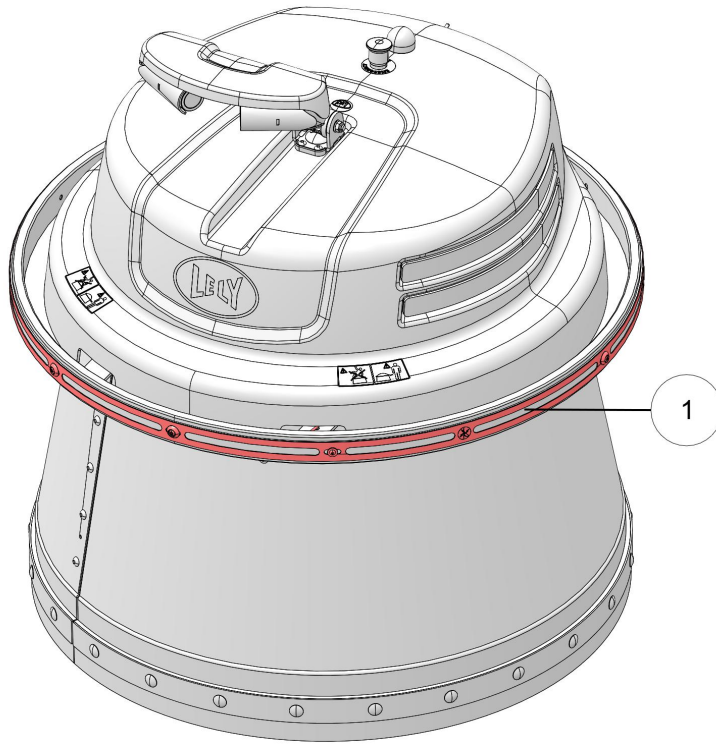
2.3.3 Operating Safety

- Read and understand this manual and all safety signs before you connect power supplies to operate, maintain or adjust the machine.
- Only trained persons are permitted to operate the machine.
- Make sure all covers are installed before you operate the machine.
- Make sure the feed alley entrance(s) are marked to make people aware of the presence of the machine.
- Make sure the machine, when travelling, has sufficient free space around the machine (recommended min. 50 cm (20 in)).
- Make sure the 'Restricted area warning plate' is installed at narrow passages if the free space around the machine is between:
 - the minimum required free space of 20 cm (7.9 in) and
 - the free space of 35 cm (13.8 in).



- Operation of the machine shall be supervised if non-authorized people, especially young children, remain near the machine.
- If the machine drives in a dark (unlit) area during the route, for example outside, it is mandatory to have the designated Lely Juno LED beacon installed on the machine or to provide the route with sufficient light in order to see the machine.
- Remote operation of the smartphone or tablet by remote desktop software (such as, but not limited by, Teamviewer) is strictly forbidden to avoid dangerous situations. Make sure the machine is in your line of sight.
- Make sure you have a clear overview of the machine when you manually drive it.
- Keep hands, feet, hair and clothing away from all moving parts.
- Never touch the bumper when the machine is in operation to avoid an electric shock.
- Review safety related items with all operators frequently (annually).
- Make sure the slope of the floor in the driving direction is no more than 8.5° (15 cm per 100 cm) when the machine travels (skirt lifted). For further specifications regarding slopes, contact your local Lely service provider.
- The machine weighs approximately 635 kg (1400 lb). Always use the correct hoisting equipment when you hoist the machine. Refer to the manual that comes with the hoisting eye for correct hoisting of the machine.
- Do not tow the machine to prevent damage to the machine electronics by power dissipation.
- The manual of the hoisting eye must be stored with the hoisting eye. If the manual of the hoisting eye is lost contact your local Lely service provider.
- Contact your nearest Lely service provider if you have any questions.

5.4303.8558.0 A



j2_2022_tech_doc.asm.0.01

Figure 3. Area with electric pulse

KEY: 1. Bumper with electric pulse


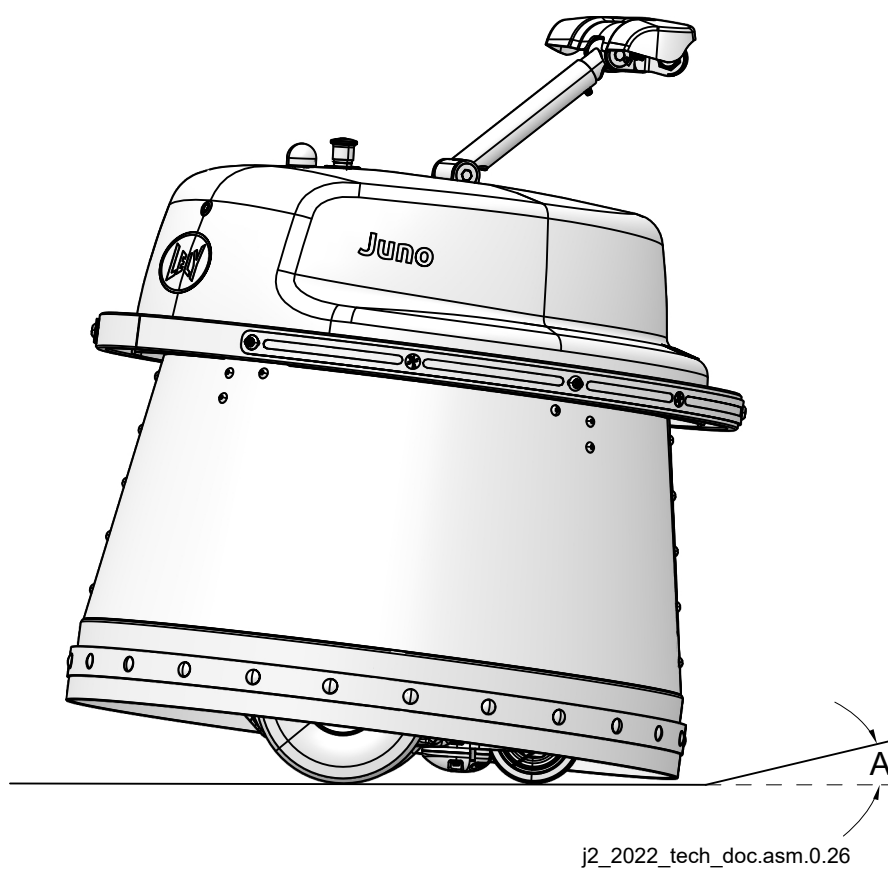


Figure 4. Maximum slope in the driving direction when the machine travels (skirt lifted)

KEY:
A: 8.5°

2.4 Safety Decals

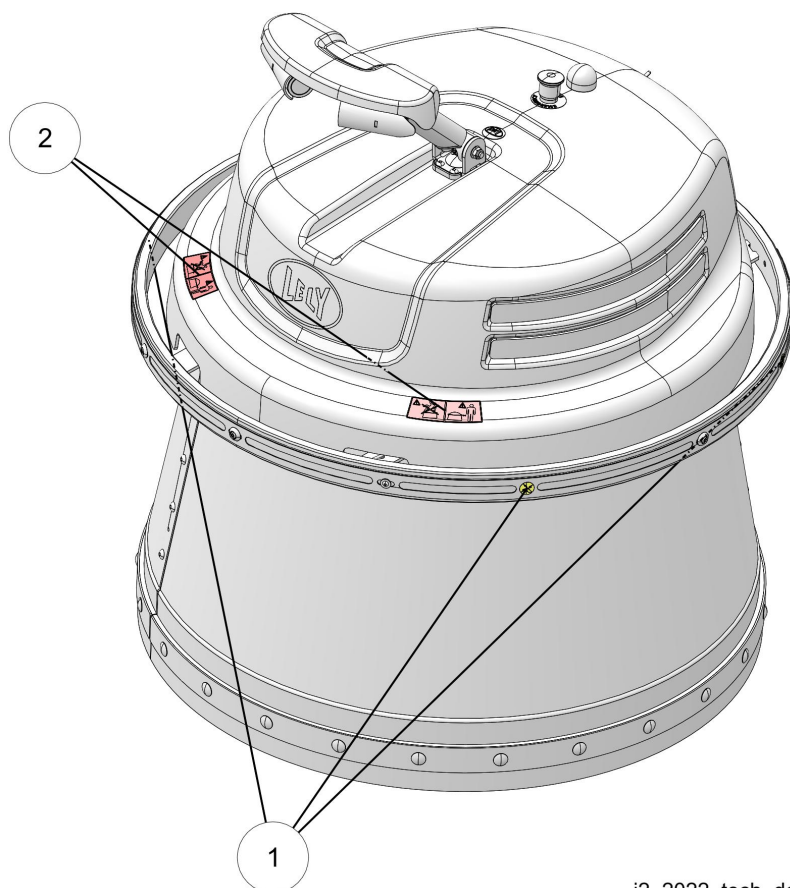2.4.1 Position of the Safety Decals



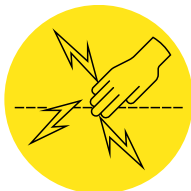
j2_2022_tech_doc.asm.0.02

Figure 5. Position of the safety decals

KEY: 1. 'Electric shock - area with electric pulse' decal - 2. 'Do not sit on the vehicle' and 'keep safe distance' decal

2.4.2 Explanation of Safety Decals

General safety messages appear in this safety messages section. Specific safety messages are in applicable parts of this manual when potential hazards may occur if the instructions or procedures are not followed.

| No. | Decal | Explanation |
|-----|---|---|
| 1 |  | Caution: Risk for electric shock Keep away from the bumper during operation of the machine. |

| | | |
|---|--|--|
| 2 | | <p>Warning: Risk of falling or being crushed</p> <p>Unmanned moving vehicle. Do not sit on the machine. Keep safe distance.</p> |
| | | <p>Warning: Restricted area</p> <p>Only persons who are authorized and have read and understood all applicable safety instructions are permitted to enter the area.</p> <p>Located at narrow passages where the free space around the machine is between:</p> <ul style="list-style-type: none"> • the minimum required free space of 20 cm (7.9 in)* and • the free space of 35 cm (13.8 in). <p>* Except 'Wall mounted charging'.</p> |
| | | <p>Caution: Unmanned moving vehicles</p> <p>Only persons who are authorized and have read and understood all applicable safety instructions are permitted to enter the area.</p> <p>Located at the entrance of the farm where the machine moves.</p> |

2.4.3 Installation of Safety Decals

1. Make sure that the installation surface is clean and dry.
2. Make sure that the temperature of the mounting surface is not less than 5 °C (41 °F).
3. Find the correct position for the decal before you remove the backing paper.
4. Remove a small part of the cover paper.
5. Put the decal in the correct position on the installation surface and carefully push the small part of exposed adhesive surface of the decal onto the installation surface.
6. Slowly remove the cover paper and attach the rest of the decal to the installation surface.
7. Puncture small air pockets in the decal with a pin and use the cover paper to smoothen the decal.

2.4.4 Maintenance of Safety Decals

Safety decals show important and useful information that will help you to safely operate and maintain the machine.

Obey the instructions below to make sure that all the decals stay in the correct position and condition.

- Keep the safety decals clean and legible at all times. Clean the safety decals with soap and water. Do not use mineral spirits, abrasive cleaners or other similar agents that may damage the safety decals.
- Replace safety decals that are missing or that are illegible.
- Safety decals can be purchased from your local Lely service provider.

2.5 Safety Devices

2.5.1 Emergency Stop Button

An emergency stop button is installed on top of the machine. When the button is pushed, the machine immediately stops operation. To reset the emergency stop button, pull the button upwards. To resume operation the alarm must be cleared from the user interface and the pause button must be pushed.

2.5.2 Pause Button

A pause button is installed on the machine. When the pause button is pushed while the machine is in operation, the machine goes into pause mode:

- The machine stops.
- The LED light in the pause button turns on.
- The operational sound of the machine is turned off.
- The user interface on the smartphone displays the status 'Paused'.

When the pause button or the button in the app on the smartphone is pushed shortly while the machine is in pause mode, the machine goes back into work mode:

- The machine goes back into operation.
- The LED light in the pause button turns off.
- The operational sound of the machine is turned on.

When the button in the app on the smartphone is pushed for 5 seconds while the machine is in pause mode, a popup appears on the screen **Are you sure to go out of operation?** confirm this and the machine goes out of operation.

The pause button can be operated remotely with the app on the smartphone, except when an emergency stop occurred.

If an alarm occurs, the LED in the pause button blinks. The alarm must be confirmed with the app on the smartphone.

| Status of the machine | LED status of the pause button |
|-----------------------|--------------------------------|
| Start up | Blink |
| Out of operation | On |
| Paused | On |
| In operation | Off |
| Alarms | Blink |

2.5.3 Bumper

The machine has a bumper that stops the vehicle immediately when it hits an object that is at least 60 cm above floor level.

If the machine hits a solid object the bumper sensors are activated and the machine stops driving. After 30 seconds the machine tries to continue its route. If the bumper is still activated the machine waits again 30 seconds. The machine repeats this cycle maximum 5 times. If the bumper is still activated after 5 cycles an alarm is generated and the machine goes out of operation. To resume operation the cause of the alarm must be resolved and the pause button must be pushed. If the bumper is not activated anymore, the machine resumes operation automatically.

When the machine is in operation the bumper has an electric pulse on it (optional) to make sure cows do not block the vehicle.

2.5.4 Bumper Sensors



*Electrical hazard.
Risk for electric shock.
Keep away from the bumper during operation of the machine.*

When the cover is opened the bumper sensors are activated and the machine stops driving. An alarm is generated and the machine goes out of operation. To resume operation the cover must be closed and the pause button must be pushed.

2.5.5 Buzzer

A buzzer is installed on the machine. The buzzer alerts persons and cows when the vehicle starts to move, moves or when an alarm occurs.

The beep lengths and beep frequencies of the buzzer are:

| Operational state of the Juno | Beep frequency buzzer |
|-------------------------------|------------------------------|
| Normal operation | Once per 2 seconds (default) |
| A critical alarm occurred | 3 short beeps every minute |

2.5.6 Software Controlled Charging System

The operational software of the machine controls the charging system. This allows to keep the machine connected to the charging station when it is not moving, even if the battery is fully charged. The software prevents overcharging the battery and keeps it fully charged until the next operation.

2.5.7 Overload Protection

The drive motors are protected against overload. If the current is high for a long time the overload protection operates and stops the machine to prevent overheating. An alarm message is also generated.

2.5.8 Barn Door Control (optional)



The barn door control unit works with Android only.

When the machine drives from one barn to another, it communicates with the barn door control unit to open/close the barn door(s).

Lely is not responsible for the barn door. The customer needs to arrange permission for the barn door manufacturer to connect the barn door to the Lely barn door control system via the 'CE questionnaire barn door supplier' (see chapter CE Questionnaire Barn Door Supplier).

2.5.9 Shock System (optional)



*Electrical hazard.
Risk for electric shock.
Keep away from the bumper during operation of the machine.*



The maximum amount of energy the electric pulse on the bumper transfers is 15 mJ (at 500 R). This does not harm cows or humans.



The shock system meets the standard EN IEC 60335-2-76 for electric fence energizers.

The shock system makes sure the cows do not block the machine. Cows are deterred from touching the machine by an electric pulse on the bumper. The power energizer generates the electric pulse on the bumper. The shock system is on when the machine is in operation. When the machine is out of operation the shock system is off.

| Machine status | Shock system status |
|---------------------------------------|---------------------|
| In operation + machine is driving | On |
| In operation + an alarm is active | On |
| In operation + machine is charging | Off |
| In operation + pause button is pushed | Off |

| Machine status | Shock system status |
|---|---------------------|
| Out of operation | Off |
| In operation, charging + safety bumper is activated | On |

2.5.10 LED Beacon (optional)



Unmanned moving vehicle.

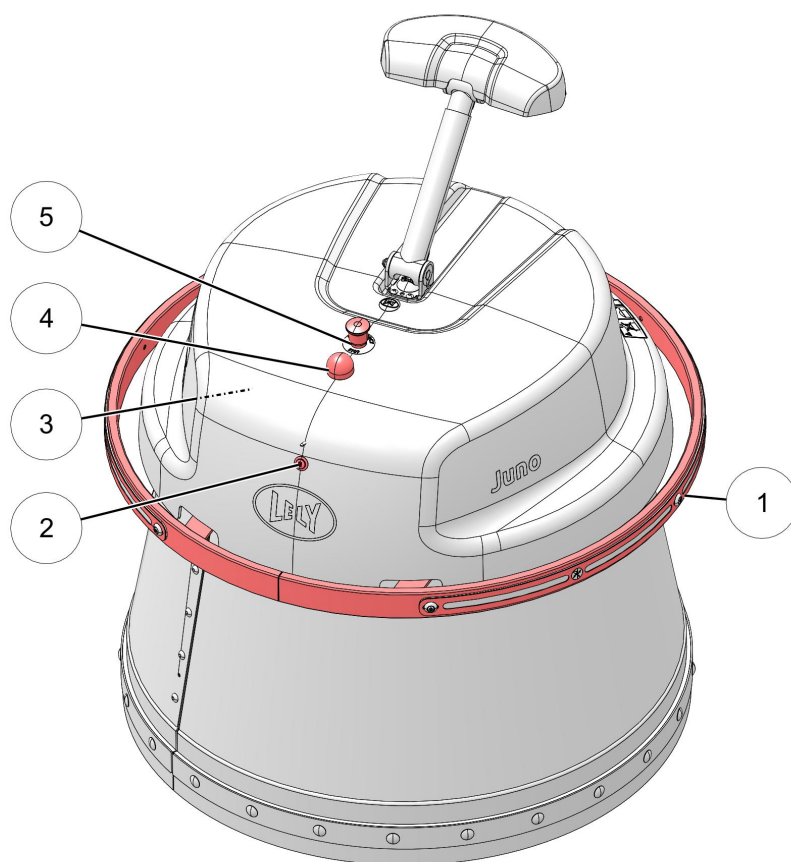
Risk of falling or being crushed.

If the machine drives in a dark (unlit) area during the route, for example outside, it is mandatory to have the designated Lely Juno LED beacon installed on the machine or to provide the route with sufficient light in order to see the machine.

The machine is optionally fitted with a LED beacon.

If the machine drives in a dark (unlit) area during the route, for example outside, it is mandatory to have the designated Lely Juno LED beacon installed on the machine or to provide the route with sufficient light in order to see the machine.

The LED beacon is on when the machine is in operation. When the machine is at the charging station the LED beacon is switched off.



j2_2022_tech_doc.asm.0.03

Figure 6. Position of the safety devices

KEY: 1. Bumper with electric pulse (optional) - 2. Pause button - 3. Buzzer (underneath the cover) - 4. LED beacon (optional) - 5. Emergency stop button



INTENTIONALLY BLANK

5.4303.8558.0 A

3 Specifications

3.1 Feed Pusher

3.1.1 Dimensions and Weight

- Diameter: 110 cm (43.3 in).
- Height: 115 cm (45.3 in).
- Weight: 635 kg (1400 lb).
- Rotating part height: 630 – 670 mm (24.8 in – 26.4 in) depending on skirt setting.

3.1.2 Battery

- Number of batteries: 1.
- Weight: 19.9 kg (43.9 lb).
- Nominal voltage: 12 V.
- Capacity: 55 Ah.
- Spare capacity: 120 min.
- Length: 254 mm (10.0 in).
- Width: 174 mm (6.9 in).
- Height including battery terminals: 194 mm (7.6 in).
- Height excluding battery terminals: 173 mm (6.8 in).

3.1.3 Operation

- Maximum driving speed: 200 mm/s.
- Maximum driving time without charging: 1 hr.
- Maximum driving distance: 1 km (0.6 mi).
- Route programming: with app on smartphone.
- Routing outside barn: strip follow.
- Routing inside barn: ultrasound follow, straight drive, feed fence follow, strip follow, strip reset.
- Charger docking: strip follow.
- Maximum slope in driving direction with skirt lifted: 8.5° (15 cm per 100 cm).
- Maximum travel slope transverse to driving direction with skirt lifted: 2.9° (5 cm per 100 cm).
- Maximum slope in driving direction with skirt down: 5.7° (10 cm per 100 cm).
- Maximum feed push slope: contact your local Lely service provider.
- Ultrasound maximum height: 1.55 m (61.0 in).
- Ultrasound maximum arm angle: 60°.

- Ultrasound minimum height: 1.10 m (43.3 in).
- Ultrasound maximum distance to feed fence or wall: 2.5 m (8.2 ft).
- Ultrasound minimum distance to feed fence or wall: 0.6 m (2.0 ft).
- Minimum free space around the machine when travelling: 0.5 m (19.7 in).
- Minimum time charging at charger: 60%.
- Minimum night charge time: 2 hr.
- Maximum recommended straight drive distance: 5 m (16.4 ft).
- Allowed working temperature: -20 to +50 °C (-4 to +122 °F).
- Noise emission : < 70 dB.

3.1.4 Miscellaneous

- Drive: 2x electric motor.
- Number of wheels: 3.
- Determination of direction of motion: using gyroscope.
- Determination of distance to feed fence: using ultrasonic sensor.
- Determination of distance travelled: field-oriented control (FOC).
- Calibration points: end of straight metal strips with at least 1 m (3.3 ft) of length.

3.2 Charging Station

3.2.1 Dimensions and Weight

Charging station

- Width: 37.5 cm (14.7 in).
- Depth: 25 cm (9.8 in).
- Height: 66 cm (25.9 in).
- Weight excluding floor column: 17 kg (37.5 lb).
- Weight including floor column: 59 kg (130.1 lb).

Floor column

- Width: 45 cm (17.7 in).
- Depth: 30 cm (11.8 in).
- Height: 170 cm (66.9 in).
- Weight: 42 kg (92.6 lb).

3.2.2 Battery Charger

- Type: Impulse-II Smart L 12/20 (9-1190-8002-0).

- Input voltage range and frequency: 180 - 250 VAC 45 – 65 Hz.
- Output voltage: 15.2 – 17 VDC.
- Max. charge current: 20 A.
- Safety features: Reverse polarity (fuse). Output short circuit. Over temperature.
- Weight: 2.4 kg (5.3 lbs).
- Dimensions (h x w x d): 99 x 219 x 65 mm (3.9 x 8.6 x 2.6 in).

3.2.3 Smartphone Requirements

- 100 MB available storage space.

iPhone® model names

- iPhone X
- iPhone 8
- iPhone 8 Plus
- iPhone 7
- iPhone 7 Plus
- iPhone SE
- iPhone 6s
- iPhone 6s Plus
- iPhone 6
- iPhone 6 Plus
- iPhone 5s
- iPhone 5c
- iPhone 5

Android phone

- Android 5.0 or higher.



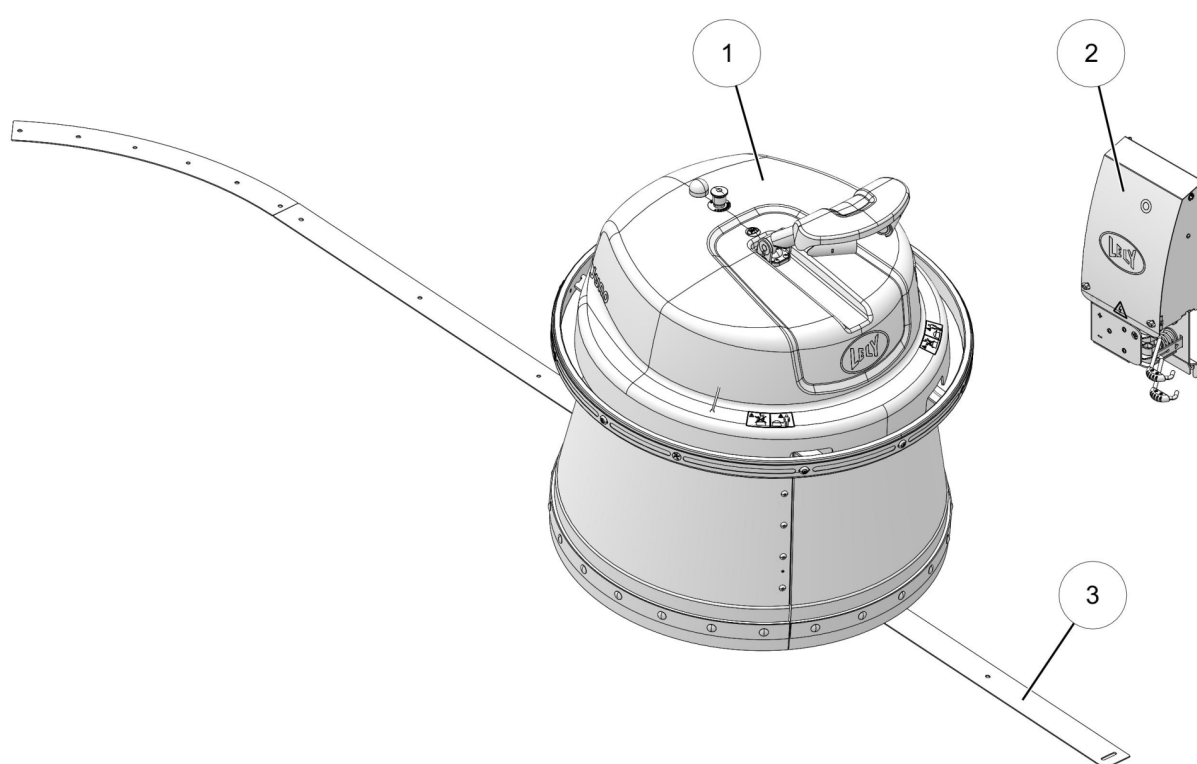
INTENTIONALLY BLANK

5.4303.8558.0 A

4 Description and Operation

4.1 Introduction

This chapter describes the parts of the feed pusher. It also explains how the parts work together to push the feed towards the feed fence.



5.4303.8558.0 A

Figure 7. Main components

KEY: 1. Feed pusher - 2. Charging station - 3. Metal guiding strip

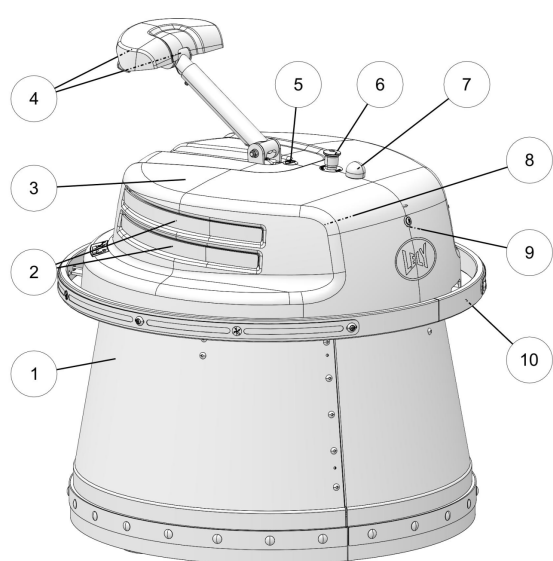
4.2 Component Description

4.2.1 Feed Pusher Vehicle


The machine has the following main components:

- Cover.
- Skirt.

- Steel weight block.
- Driving mechanism.
- Power system.
- Control system.
- Shock system (optional).



j2_2022_tech_doc.asm.0.04

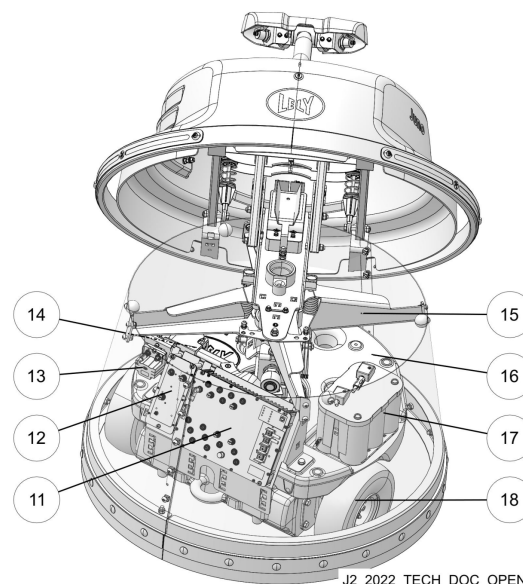

J2_2022_TECH_DOC_OPEN-01-010

Figure 8. Component overview

KEY: 1. Skirt - 2. Charging strips - 3. Cover - 4. Ultrasonic sensors - 5. Hoisting eye point cover - 6. Emergency stop button - 7. LED beacon - 8. Buzzer (underneath cover) - 9. Pause button - 10. Bumper with shock strip (optional) - 11. VIOB - 12. VCB - 13. Gyroscope - 14. Actuator - 15. Frame - 16. Steel weight block - 17. Battery - 18. Right drive wheel

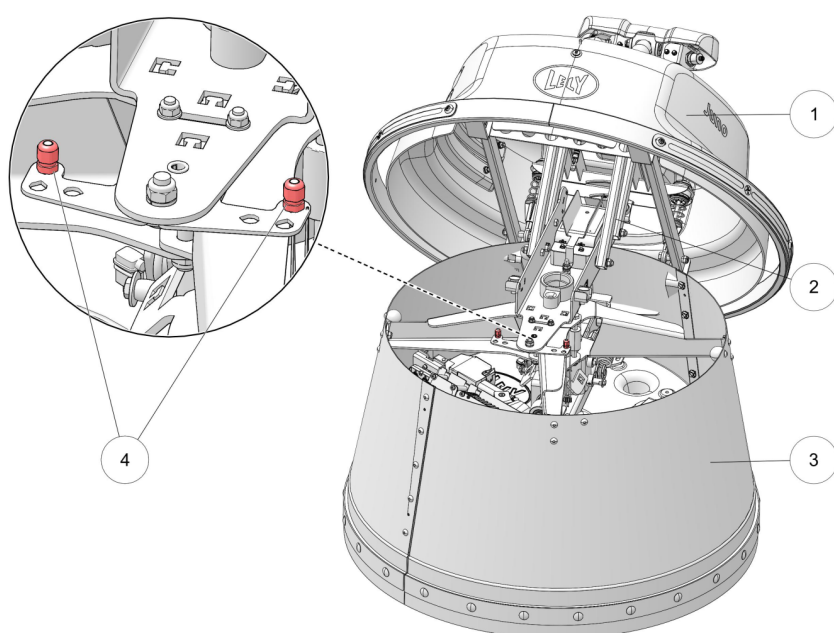
4.2.2 Covers

The machine has:

- Cover.
- Cover opening mechanism.
- Bumper sensors.
- Skirt.

The cover is installed on the opening mechanism that is attached to the frame of the machine. The cover has bumper sensors that stop operation of the machine immediately when the bumper is activated.

The skirt is the rotating surface on the lower section of the machine. The skirt rotates and pushes the forage towards the feed fence while the machine drives along the feed alley.



J2_2022_TECH_DOC_OPEN-01-002

Figure 9. Covers and bumper sensors

KEY: 1. Cover - 2. Cover opening mechanism - 3. Skirt - 4. Bumper sensors

4.2.3 Carriage

The carriage has:

- Frame.
- Steel weight block.

The frame is attached to a steel weight block. The frame is adjustable for feed pushing at the left or right side of the machine. The steel block weighs 416 kg (917 lbs) which makes sure the machine has sufficient mass to push the forage.

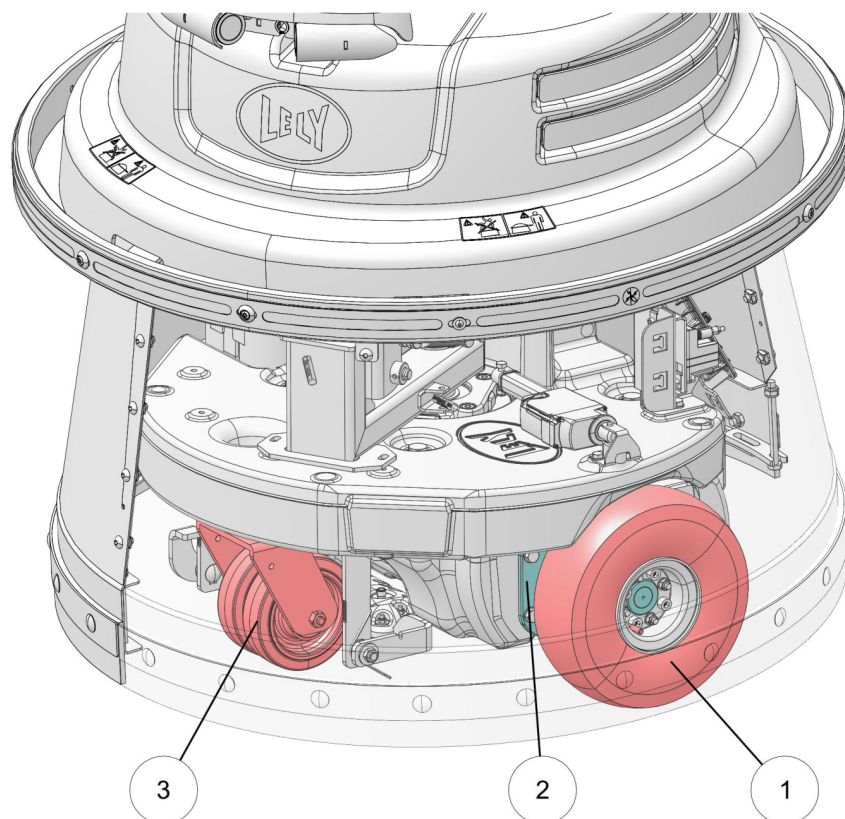
4.2.4 Driving Mechanism

The drive motors, that are attached to the steel weight block, drive the two wheels on the side. The vehicle has no steering wheel. The front swivel wheel is a support wheel. Its direction is controlled by difference in rotation speed of the left and right drive motor.

The driving mechanism has the following parts:

- Drive motors with gear box (left and right).
- Drive wheels (left and right).
- Front swivel wheel.

The drive motors get input from the VIOB.



j2_2022_tech_doc.asm.0.07

5.4303.8558.0 A

Figure 10. Driving mechanism

KEY: 1. Left drive wheel - 2. Motor plate left drive motor - 3. Front swivel wheel

4.2.5 Power System

NOTICE

Do not cover the vent ports of the battery.

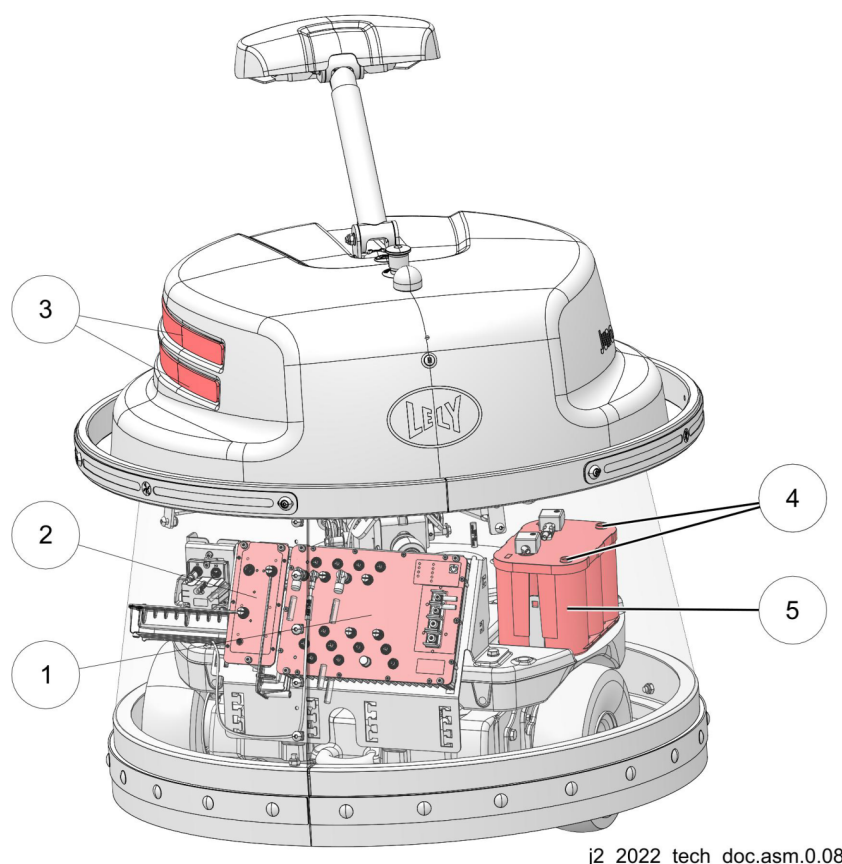
The power system stores and distributes the electrical power for the driving mechanism and the control system. The power supply is a single 12V battery.

Charging takes place at the charging station. The charging process is controlled by the VIOB. The VCB can start or stop the charging process.

The power system has the following primary parts:

- Battery.
- Charging strips.
- VIOB.

- VCB.



5.4303.8558.0 A

Figure 11. Power system

KEY: 1. VIOB - 2. VCB - 3. Charging strips - 4. Battery vent ports - 5. Battery

4.2.6 Safety System

The machine has a safety system to:

- Protect people and animals against mechanical hazards by a set of safety devices that stop the machine immediately when hit or opened:
 - Emergency stop button.
 - Pause button.
 - Bumper with bumper witch.
- Warn people and animals by a buzzer.
- Warn people and animals by a LED beacon (optional).
- Ensure that a fault in the hardware or software does not lead to hazardous situations:
 - Software controlled charging station.
 - Overload protection of the drive motors.

- Fuse.
- Protect people during maintenance:
 - Maintenance-free battery.

4.2.7 Control System

The control system has the following parts:

- Vehicle control box (VCB).
- Vehicle input/output box (VIOB).
- Ultrasonic sensor(s).
- Gyroscope.
- Inductive sensor (2x).
- Lely Control Plus app.

All the parts work together to keep the machine on the correct route.

VCB

The VCB hosts the management software and communicates with the VIOB.

VIOB

The VIOB is the interface between the VCB and the sensors and actuator on the machine.

Ultrasonic Sensor(s)

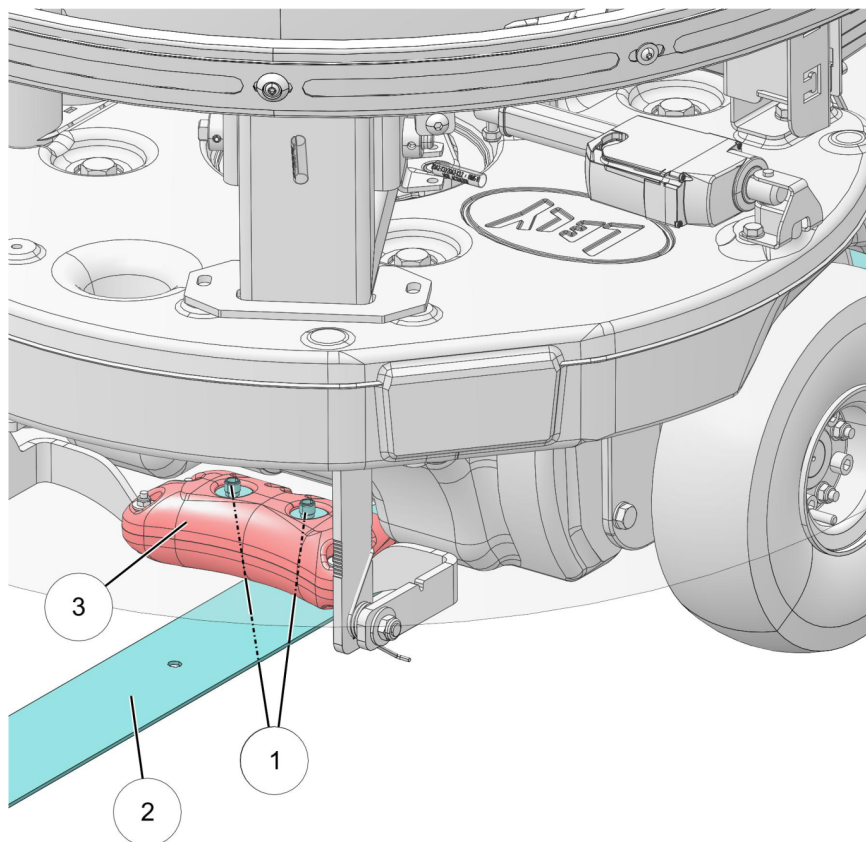
The ultrasonic sensor(s) make sure the machine follows the wall or fence at a pre-determined distance. The sensors get input from and send outputs to the VIOB.

Gyroscope

The gyroscope measures the turning angle. This information is used to find the correct direction.

Inductive sensors

The inductive sensors can detect and follow pre-installed metal strips on the floor. This makes it possible to drive from one barn to another and ensures accuracy of the programmed routes.



j2_2022_tech_doc.asm.0.09

Figure 12. Inductive sensors

KEY: 1. Inductive sensors - 2. Metal guiding strip - 3. Protective casing

Lely Control Plus app

Lely control Plus is the application for mobile devices to operate the machine via a bluetooth connection.

4.2.8 Shock System (optional)



*Electrical hazard.
Risk for electric shock.
Keep away from the bumper during operation of the machine.*

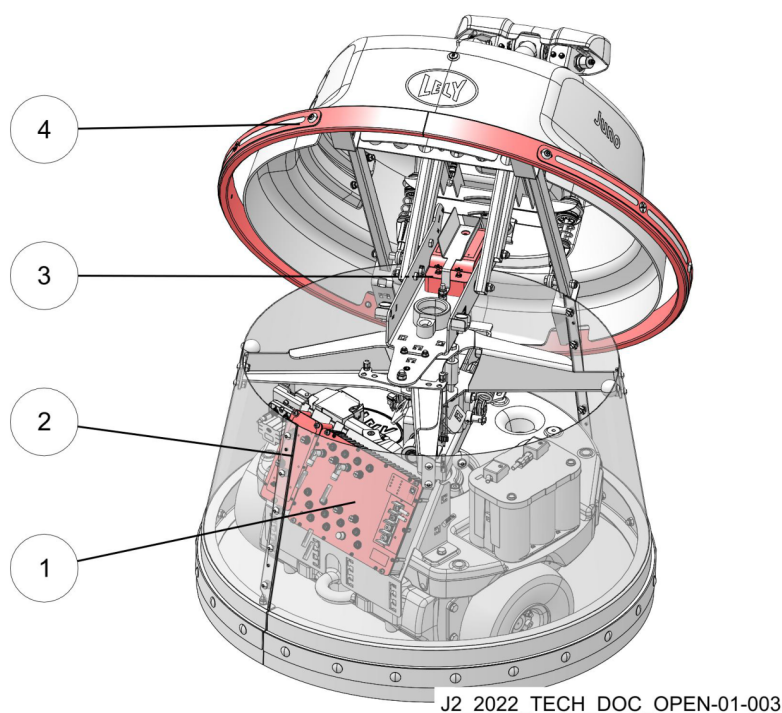


The maximum amount of energy the electric pulse of the bumper transfers is 15mJ (at 500R). This does not harm cows or humans.



The shock system meets the standard EN IEC 60335-2-76 for electric fence energizers.

The shock system makes sure the cows do not block the machine. Cows are deterred from touching the machine by an electric pulse on the bumper. The power energizer generates the pulse on the bumper. The pulse is on when the machine is in operation. When the machine is out of operation the shock system is off. The power energizer is connected to the VIOB, gets its input from the VCB and sends output to the bumper.



5.4303.8558.0 A

Figure 13. Shock system

KEY: 1. VIOB - 2. VCB - 3. Power energizer - 4. Bumper with electric pulse

4.2.9 Skirt Lift and Rotation System

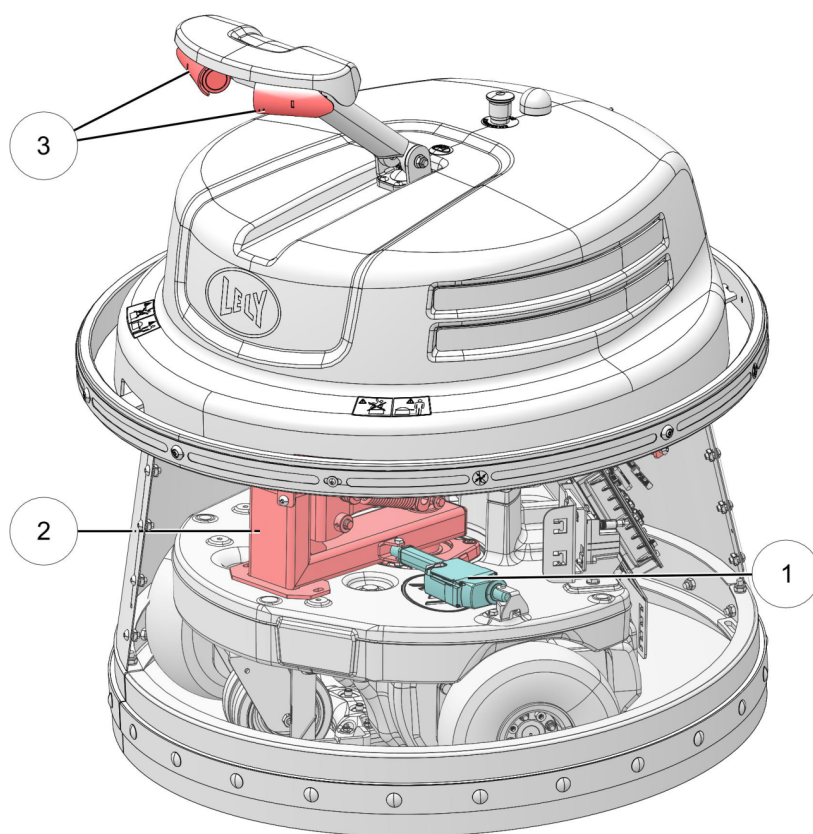
The skirt lift and rotation system has:

- Electric actuator (optional).
- Skirt lift and rotation mechanism.

The skirt lift and rotation system rotates the skirt to the lifted middle position or to the left or right feed push position. In order to push feed at the left and right side of the machine, the machine must be equipped with a second ultrasonic sensor (optional). In the middle position the skirt is lifted from the ground. This is useful for instance to avoid contamination of the skirt when the machine drives from one barn to another. An electric actuator (optional) adjusts the rotation mechanism of the machine to the preferred position.

Requirements for driving the machine with lifted skirt

- The surface where the machine drives on in skirt lift mode must be even.
- The skirt lift mode must only be used in areas where it is necessary.



j2_2022_tech_doc.asm.0.11

Figure 14. Skirt lift and rotation mechanism

KEY: 1. Electric actuator - 2. Skirt lift and rotation mechanism - 3. Ultrasonic sensors

4.2.10 Charging Station

The charging station is the start and end point for all routes in the day planning. The machine can be left permanently connected to the charging station. This keeps the battery in good condition. The VCB continuously examines the voltage of the battery. It is not possible to overcharge the battery.

The charging station has a 20 A electronic battery charger. The battery charger electrodes are at the front near the bottom of the charging station.

The charging station can be installed in the barn in two ways:


- Wall-mounted.
- Floor-mounted (optional).

If it is not possible to install the charging station to the wall, an optional floor column can be supplied.

Battery charger

The 20 A electronic battery charger has two indicator LEDs on the upper right side. The meaning of the LEDs are:

| Status | Charging LED (yellow) | Power LED (green) | Description |
|-------------------|-----------------------|-------------------|--------------------------------|
| Normal operation. | OFF | OFF | Power disconnected. |
| | OFF | ON | Powered, no battery connected. |
| | ON | ON | Powered, battery connected. |
| Error. | Blinking | Blinking | – |

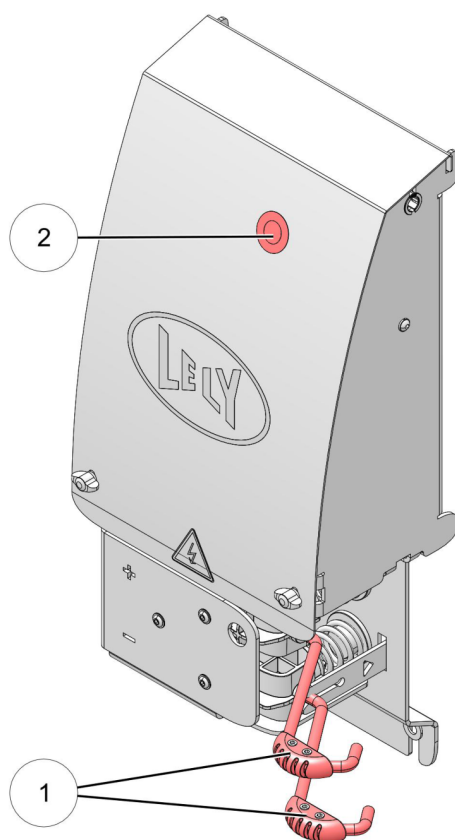

5-4303-0485-0-01-001

Figure 15. Charging station

KEY: 1. Charging electrodes - 2. Indicator LEDs

4.3 User Interface

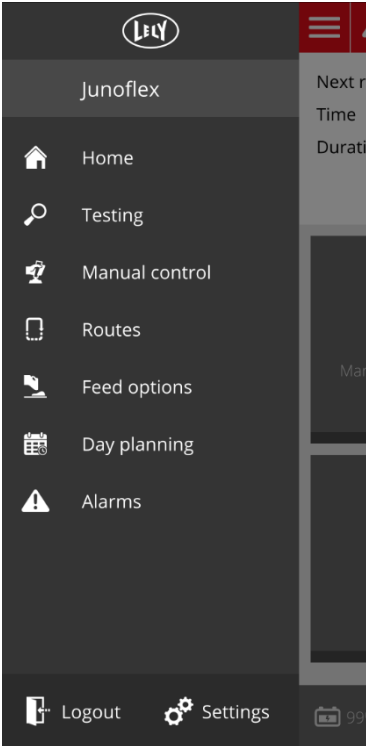
4.3.1 Main Menu



The main menu can be accessed from the dashboard with button



The machine is operated with a smartphone. The smartphone communicates with the software via bluetooth.

| Display | Description |
|--|---|
|  | <p>The main menu on the smartphone has the following items:</p> <ul style="list-style-type: none"> • Home. • Testing. • Manual control. • Routes. • Feed options. • Day planning. • Alarms. • Logout. • Settings. |











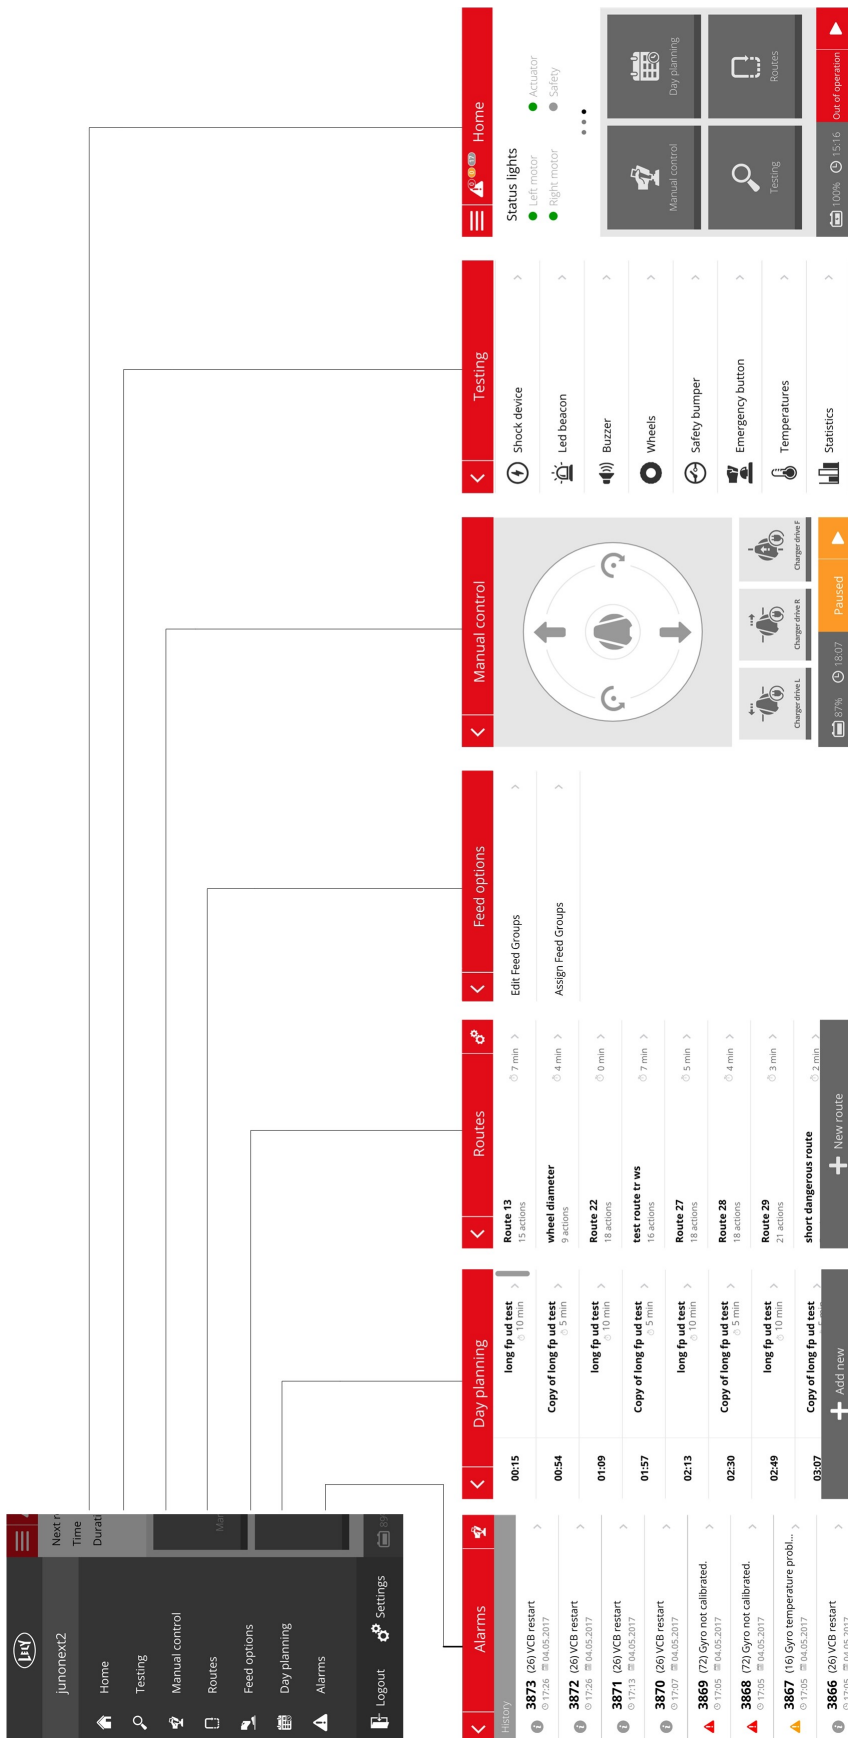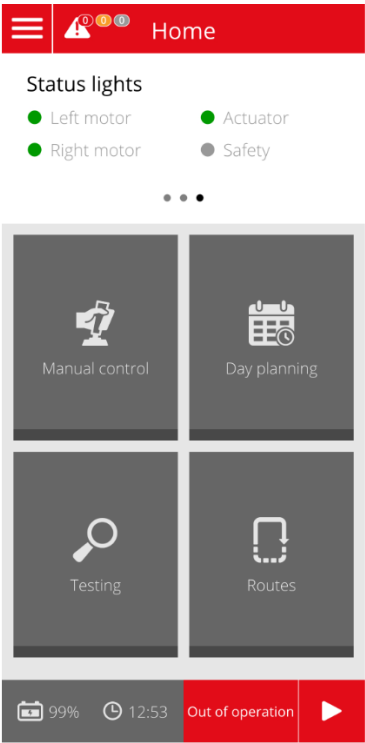
Figure 16. Main menu items of the user interface
Description and Operation






















4.3.2 Home

The home screen is used for daily operation of the machine. You can operate the machine in automatic mode using a day planning and in manual mode. Button  must be used to put the machine into operation. Button  must be used to pause the machine. When the pause button is pushed for 5 seconds the machine goes out of operation.




| Display | Description |
|--|---|
|  | <p>The home screen displays when the machine drives the next route, the time and the battery status.</p> <p>On the home screen you can access the following menus:</p> <ul style="list-style-type: none"> • Manual control: to manually control the machine. • Day planning: to access the day planning. • Testing: to access the test menu. • Routes: to choose which route must be followed. <p>Buttons</p> <ul style="list-style-type: none"> •  to put the machine into operation. •  to pause the machine (take the machine temporary out of operation). • When the machine is in paused state and button  is pushed for 1 second the machine will go into operation again. • When the machine is in paused state and button  is pushed for 5 seconds the machine will go out of operation. • Button  to go to the main menu. |

4.3.3 Testing

The menu **Testing** gives the possibility to test parts of the machine and to read out values that give information about the performance of the machine. Sensors that require calibration can be calibrated in this menu.

| Display | Description |
|---|--|
| <div> <div><</div> <div>Testing</div> </div> <div> <div></div> <div>Power management</div> <div>></div> </div> <div> <div></div> <div>Motors</div> <div>></div> </div> <div> <div></div> <div>Ultrasound sensors</div> <div>></div> </div> <div> <div></div> <div>Induction sensors</div> <div>></div> </div> <div> <div></div> <div>Gyroscope</div> <div>></div> </div> <div> <div></div> <div>Pause button</div> <div>></div> </div> <div> <div></div> <div>Electric actuator</div> <div>></div> </div> <div> <div></div> <div>Buzzer</div> <div>></div> </div> <div> <div></div> <div>Wheels</div> <div>></div> </div> <div> <div></div> <div>Safety bumper</div> <div>></div> </div> <div> <div><</div> <div>Testing</div> </div> <div> <div></div> <div>Pause button</div> <div>></div> </div> <div> <div></div> <div>Electric actuator</div> <div>></div> </div> <div> <div></div> <div>Buzzer</div> <div>></div> </div> <div> <div></div> <div>Wheels</div> <div>></div> </div> <div> <div></div> <div>Safety bumper</div> <div>></div> </div> <div> <div></div> <div>Emergency button</div> <div>></div> </div> <div> <div></div> <div>Temperatures</div> <div>></div> </div> <div> <div></div> <div>Statistics</div> <div>></div> </div> <div> <div></div> <div>Barn door</div> <div>></div> </div> <div> <div></div> <div>Machine info</div> <div>></div> </div> | <p>The menu Testing has read out and test possibilities for the following machine items:</p> <ul style="list-style-type: none"> • Power management. • Motors. • Ultrasound sensors. • Induction sensors. • Gyroscope. • Pause button. • Electric actuator. • Led beacon. • Buzzer. • Wheels. • Safety bumper. • Emergency button. • Temperatures. • Statistics. • Barn door. • Machine info. <p>Buttons</p> <ul style="list-style-type: none"> • Button  to return to the home screen. |

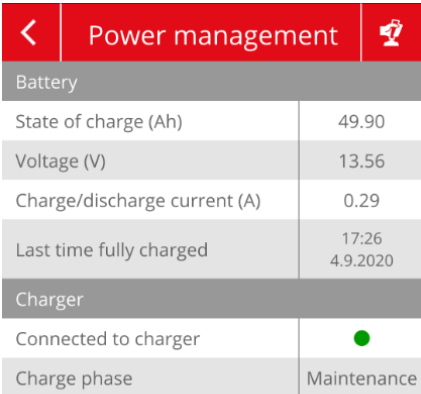4.3.3.1 Power Management




| Display | Description |
|---|--|
|  | <p>The menu Power management gives status information about the battery and the charger.</p> <p>Battery</p> <ul style="list-style-type: none"> • State of charge (Ah): the amount of amperes the battery is currently charged with. Maximum 55 Ah. • Voltage (V): the current voltage of the battery. • Charge/discharge current (A): the amount of amperes the battery supplies when it discharges or absorbs when it is charging. • Last time fully charged: date and time of the moment the battery was charged 100% for the last time. <p>Charger</p> <ul style="list-style-type: none"> • Connected to charger: when the battery is connected to the charger correctly a green indicator (●) is displayed. • Charge phase. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |

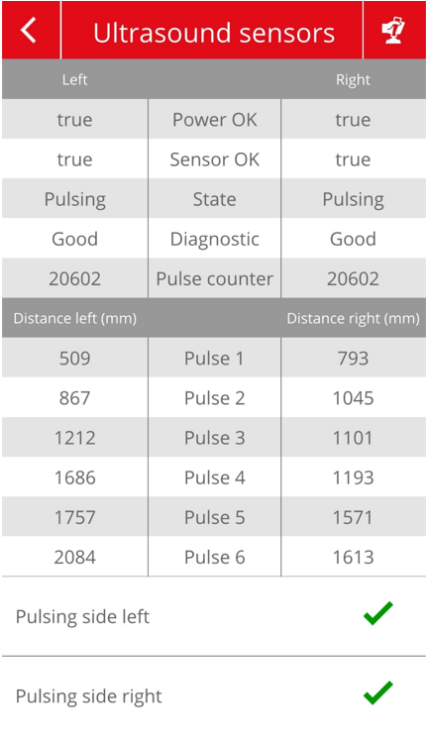4.3.3.2 Motors













| Display | Description | | | | | | | | | | | | | | | | | | |
|--|-----------------------|-------|-------|-----|--------------|-----|----|-------------|---|-----|-------------|-----|-----|-----------------------|-----|-----|---------------------|-----|---|
| <div><div><div><</div><div>Motors</div><div></div></div><table><tr><th>Left</th><th></th><th>Right</th></tr><tr><td>0.0</td><td>Speed (mm/s)</td><td>0.0</td></tr><tr><td>-0</td><td>Speed (rpm)</td><td>1</td></tr><tr><td>0.0</td><td>Current (A)</td><td>0.0</td></tr><tr><td>0.0</td><td>Test peak current (A)</td><td>0.1</td></tr><tr><td>0.0</td><td>Driven distance (m)</td><td>0.0</td></tr></table><div><div><div>L</div><div></div><div></div><div></div></div><div><div>R</div><div></div><div></div><div></div></div><div></div></div></div> | Left | | Right | 0.0 | Speed (mm/s) | 0.0 | -0 | Speed (rpm) | 1 | 0.0 | Current (A) | 0.0 | 0.0 | Test peak current (A) | 0.1 | 0.0 | Driven distance (m) | 0.0 | <p>The menu Motors gives actual status information about the left and right drive motor.</p> <ul style="list-style-type: none">• Speed (mm/s): the actual drive speed of the left and right motor in millimeters per second.• Speed (rpm): the actual drive speed of the left and right motor in revolutions per minute.• Current (A): the actual electric motor current for the left and right motor in amperes.• Test peak current (A): peak current for the test run. Each time test restarted previous values are cleared.• Driven distance (m): the driven total distance for the left and right motor in meters. <p>Buttons</p> <ul style="list-style-type: none">• to return to the menu Testing.• to enter the menu Manual control. |
| Left | | Right | | | | | | | | | | | | | | | | | |
| 0.0 | Speed (mm/s) | 0.0 | | | | | | | | | | | | | | | | | |
| -0 | Speed (rpm) | 1 | | | | | | | | | | | | | | | | | |
| 0.0 | Current (A) | 0.0 | | | | | | | | | | | | | | | | | |
| 0.0 | Test peak current (A) | 0.1 | | | | | | | | | | | | | | | | | |
| 0.0 | Driven distance (m) | 0.0 | | | | | | | | | | | | | | | | | |

5.4303.8558.0 A




4.3.3.3 Ultrasound Sensors

| Display | Description |
|--|---|
|  | <p>The menu Ultrasound sensors gives actual status information about the left and right ultrasound sensor.</p> <ul style="list-style-type: none"> • Power OK: power check on both sides of the machine. • Sensor OK: correct working of sensors checked on both sides of the machine. • State: indicates if the sensors are pulsing or not. • Diagnostic: checks if the pulses are received in a correct way. • Pulse counter: the total amount of pulses which are received are shown for both sides of the machine. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |




4.3.3.4 Induction Sensors

| Display | Description | | | | | | | | | | | | | | |
|---|---|---|--------------------|---|---------------------|---|-----------------------------|-----|------------------------------|-----|--------------------------------|-----|---------------------------------|-----|--|
| <div> <div> <div><</div> <div>Induction sensors</div> <div>  </div> </div> <table> <tr> <td>Strip status</td><td></td></tr> <tr> <td>Sensor status left</td><td></td></tr> <tr> <td>Sensor status right</td><td></td></tr> <tr> <td>Reading value left (0-1024)</td><td>215</td></tr> <tr> <td>Reading value right (0-1024)</td><td>200</td></tr> <tr> <td>Calibrated value left (0-1024)</td><td>215</td></tr> <tr> <td>Calibrated value right (0-1024)</td><td>216</td></tr> </table> </div> | Strip status |  | Sensor status left |  | Sensor status right |  | Reading value left (0-1024) | 215 | Reading value right (0-1024) | 200 | Calibrated value left (0-1024) | 215 | Calibrated value right (0-1024) | 216 | <p>The menu Induction sensors gives actual status information about the left and right induction sensor.</p> <ul style="list-style-type: none"> • Strip status: the status indicator turns to green when the induction sensors detect a strip on the floor. This happens if both induction sensors read a value less than 700. • Sensor status left: the status indicator turns to green when the left induction sensor detects a strip on the floor. This happens if the left sensor reads a value less than 700. • Sensor status right: the status indicator turns to green when the right induction sensor detects a strip on the floor. This happens if the right sensor reads a value less than 700. • Reading value left (0 - 1023): <ul style="list-style-type: none"> • 1023: no strip detection. • 0: maximum strip detection. • Reading value right (0 - 1023): <ul style="list-style-type: none"> • 1023: no strip detection. • 0: maximum strip detection. • Calibrated value left. • Calibrated value right. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |
| Strip status |  | | | | | | | | | | | | | | |
| Sensor status left |  | | | | | | | | | | | | | | |
| Sensor status right |  | | | | | | | | | | | | | | |
| Reading value left (0-1024) | 215 | | | | | | | | | | | | | | |
| Reading value right (0-1024) | 200 | | | | | | | | | | | | | | |
| Calibrated value left (0-1024) | 215 | | | | | | | | | | | | | | |
| Calibrated value right (0-1024) | 216 | | | | | | | | | | | | | | |





4.3.3.5 Gyroscope

| Display | Description | | | | | | | | | | | | | | | | | | | | | | |
|--|----------------------------|-------|-----------------------------------|-------|-------------------------------|-------|--|-------|--------------------|----------------------|---------------------|----------------|-----------------|------------------|-----------------------------------|----------------|--|-----------------|--|----------------|-------------------------------------|------------------|--|
| <div> <div> <div><</div> <div>Gyroscope</div> <div></div> </div> <table> <tr> <td>Gyroscope temperature (°C)</td><td>44.90</td></tr> <tr> <td>Target gyroscope temperature (°C)</td><td>45.00</td></tr> <tr> <td>Outside oven temperature (°C)</td><td>31.50</td></tr> <tr> <td></td><td>x y z</td></tr> <tr> <td>Absolute angle (°)</td><td>354.53 357.23 180.21</td></tr> <tr> <td>Angular speed (°/s)</td><td>0.00 0.00 0.00</td></tr> <tr> <td>Gyro bias (°/s)</td><td>359.97 0.04 0.03</td></tr> <tr> <td>Accelerations (m/s²)</td><td>0.13 0.02 0.01</td></tr> <tr> <td>Accelerations bias (m/s²)</td><td>0.37 0.03 10.35</td></tr> <tr> <td></td><td>roll pitch yaw</td></tr> <tr> <td>Gravitational Based Orientation (°)</td><td>-0.31 2.76 -0.01</td></tr> </table> </div> | Gyroscope temperature (°C) | 44.90 | Target gyroscope temperature (°C) | 45.00 | Outside oven temperature (°C) | 31.50 | | x y z | Absolute angle (°) | 354.53 357.23 180.21 | Angular speed (°/s) | 0.00 0.00 0.00 | Gyro bias (°/s) | 359.97 0.04 0.03 | Accelerations (m/s ²) | 0.13 0.02 0.01 | Accelerations bias (m/s ²) | 0.37 0.03 10.35 | | roll pitch yaw | Gravitational Based Orientation (°) | -0.31 2.76 -0.01 | <p>The menu Gyroscope gives actual status information about the gyroscope.</p> <ul style="list-style-type: none"> • Gyroscope temperature: the actual temperature of the gyroscope in degrees Celsius. • Target gyroscope temperature: the set target temperature of the gyroscope in degrees Celsius. • Outside oven temperature: the temperature outside the oven of the gyroscope in degrees Celsius. When this temperature exceeds the gyroscope target temperature, the gyroscope switches off. • Absolute angle. • Angular speed: the turning speed of the machine in degrees per second. • Gyro bias. • Accelerations: the acceleration of the machine in meters per second squared. • Accelerations bias. • Gravitational Based Orientation: the position of the machine relative to its normal (vertical) axis (Yaw), transverse axis (Pitch) and longitudinal axis (Roll). In general to determine the machine position relative to the level surface. This is used to determine if the brake of the machine must be activated on slopes. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |
| Gyroscope temperature (°C) | 44.90 | | | | | | | | | | | | | | | | | | | | | | |
| Target gyroscope temperature (°C) | 45.00 | | | | | | | | | | | | | | | | | | | | | | |
| Outside oven temperature (°C) | 31.50 | | | | | | | | | | | | | | | | | | | | | | |
| | x y z | | | | | | | | | | | | | | | | | | | | | | |
| Absolute angle (°) | 354.53 357.23 180.21 | | | | | | | | | | | | | | | | | | | | | | |
| Angular speed (°/s) | 0.00 0.00 0.00 | | | | | | | | | | | | | | | | | | | | | | |
| Gyro bias (°/s) | 359.97 0.04 0.03 | | | | | | | | | | | | | | | | | | | | | | |
| Accelerations (m/s ²) | 0.13 0.02 0.01 | | | | | | | | | | | | | | | | | | | | | | |
| Accelerations bias (m/s ²) | 0.37 0.03 10.35 | | | | | | | | | | | | | | | | | | | | | | |
| | roll pitch yaw | | | | | | | | | | | | | | | | | | | | | | |
| Gravitational Based Orientation (°) | -0.31 2.76 -0.01 | | | | | | | | | | | | | | | | | | | | | | |






4.3.3.6 Pause Button

| Display | Description | | | | | | | | | | |
|---|-------------------|-----|----------------|-----|-------------|-------------------|----------------|-----|----------------|-----|---|
| <div> <div> <div><</div> <div>Pause button</div> <div></div> </div> <table> <tr> <td>Current mode</td><td>Off</td></tr> <tr> <td>Switch counter</td><td>228</td></tr> <tr> <td>Last switch</td><td>09:05 6.9.2021</td></tr> <tr> <td>Current mode A</td><td>Off</td></tr> <tr> <td>Current mode B</td><td>Off</td></tr> </table> </div> | Current mode | Off | Switch counter | 228 | Last switch | 09:05 6.9.2021 | Current mode A | Off | Current mode B | Off | <p>The menu Pause button gives status information about the pause button.</p> <ul style="list-style-type: none"> • Current mode: the actual status of the pause button: <ul style="list-style-type: none"> • On: pause button active (Current mode A and B On). • Off: pause button not active (Current mode A and B Off). • Error: one Current mode is On, one Current mode is Off. • Switch counter: the total amount of times the pause button was pushed. • Last switch: the date and time of the last moment that the pause button was pushed. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |
| Current mode | Off | | | | | | | | | | |
| Switch counter | 228 | | | | | | | | | | |
| Last switch | 09:05 6.9.2021 | | | | | | | | | | |
| Current mode A | Off | | | | | | | | | | |
| Current mode B | Off | | | | | | | | | | |

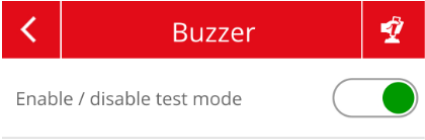4.3.3.7 Electric Actuator




| Display | Description | | | | | | | | | | | | |
|---|------------------------|------|---------------|--------|----------|--------|-----------------------|-----|-------------------|--------|------------------|---|---|
| <div data-bbox="164 409 592 465">  Electric actuator  </div> <table border="1" data-bbox="164 465 592 745"> <tr> <td>Total number of cycles</td><td>7058</td></tr> <tr> <td>Current (0-5)</td><td>0.07 A</td></tr> <tr> <td>Position</td><td>Middle</td></tr> <tr> <td>Encoder value (0-404)</td><td>206</td></tr> <tr> <td>Test peak current</td><td>0.07 A</td></tr> <tr> <td>Select direction</td><td>-</td></tr> </table> <div data-bbox="172 813 587 869" style="background-color: #808080; color: white; text-align: center; padding: 5px; margin-top: 20px;"> Calibrate </div> | Total number of cycles | 7058 | Current (0-5) | 0.07 A | Position | Middle | Encoder value (0-404) | 206 | Test peak current | 0.07 A | Select direction | - | <p>The menu Electric actuator gives actual status information about the actuator. Also you can adjust the feed push position of the skirt or lift the skirt to the middle position in this menu.</p> <ul style="list-style-type: none"> • Total number of cycles: the total amount of times the actuator has adjusted the position of the skirt. • Current: actual current on the actuator in amperes. • Position (Left-Middle-Right): the actual position of the skirt / actuator. • Encoder value (0 - 404): <ul style="list-style-type: none"> • 0: fully closed (0 mm). • 404: fully open (150 mm). • Test peak current: peak current from the moment the actuator was started from the test menu in amperes. <p>Buttons</p> <ul style="list-style-type: none"> • Button Calibrate to calibrate the actuator. •  to return to the menu Testing. •  to enter the menu Manual control. |
| Total number of cycles | 7058 | | | | | | | | | | | | |
| Current (0-5) | 0.07 A | | | | | | | | | | | | |
| Position | Middle | | | | | | | | | | | | |
| Encoder value (0-404) | 206 | | | | | | | | | | | | |
| Test peak current | 0.07 A | | | | | | | | | | | | |
| Select direction | - | | | | | | | | | | | | |

4.3.3.8 Buzzer




| Display | Description |
|---|---|
|  | <p>In the menu Buzzer you can switch the buzzer on or off for test purposes.</p> <ul style="list-style-type: none"> • Enable / disable test mode: <ul style="list-style-type: none"> •  Buzzer currently on. •  Buzzer currently off. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |

5.4303.8558.0 A




4.3.3.9 Wheels

| Display | Description |
|---|---|
|  | <p>The menu Wheels gives actual status information on the drive wheels:</p> <ul style="list-style-type: none"> • Driven distance left (km): the total amount of kilometers driven by the left wheel. • Driven distance right (km): the total amount of kilometers driven by the right wheel. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |




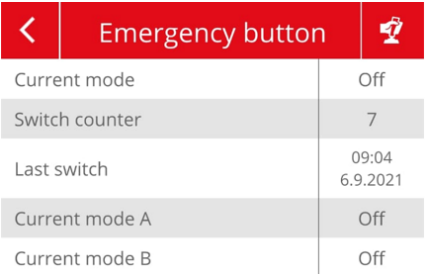4.3.3.10 Safety Bumper

| Display | Description | | | | | | | | | | |
|--|-------------------|-----|----------------|-----|-------------|-------------------|----------------|-----|----------------|-----|---|
| <div> <div> <div><</div> <div>Safety bumper</div> <div>  </div> </div> <table> <tr> <td>Current mode</td><td>Off</td></tr> <tr> <td>Switch counter</td><td>161</td></tr> <tr> <td>Last switch</td><td>10:43 3.9.2021</td></tr> <tr> <td>Current mode A</td><td>Off</td></tr> <tr> <td>Current mode B</td><td>Off</td></tr> </table> </div> | Current mode | Off | Switch counter | 161 | Last switch | 10:43 3.9.2021 | Current mode A | Off | Current mode B | Off | <p>The menu Safety bumper displays the status of the safety bumper and the amount of times it was activated.</p> <ul style="list-style-type: none"> • Current mode: <ul style="list-style-type: none"> • On: safety bumper is activated. The bumper is pushed towards the machine. • Off: safety bumper is deactivated. The bumper is released. • Switch counter: the amount of times the safety bumper is activated during its lifetime. • Last switch: the date and time of the last moment that the safety bumper was activated. • Current mode A: <ul style="list-style-type: none"> • On: safety bumper is activated. The bumper is pushed towards the machine with sensor A activated. • Off: safety bumper is activated or deactivated. Sensor A is deactivated. • Current mode B: <ul style="list-style-type: none"> • On: safety bumper is activated. The bumper is pushed towards the machine with sensor B activated. • Off: safety bumper is activated or deactivated. Sensor B is deactivated. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |
| Current mode | Off | | | | | | | | | | |
| Switch counter | 161 | | | | | | | | | | |
| Last switch | 10:43 3.9.2021 | | | | | | | | | | |
| Current mode A | Off | | | | | | | | | | |
| Current mode B | Off | | | | | | | | | | |

4.3.3.11 Emergency Button


| Display | Description |
|---|--|
|  | <p>The menu Emergency button displays the status of the emergency stop button and the amount of times it was activated.</p> <ul style="list-style-type: none"> • Current mode: <ul style="list-style-type: none"> • On: the button is currently activated. • Off: the button is currently not activated. • Switch counter: the amount of times the emergency stop button is activated during its lifetime. • Last switch: the date and time of the last moment that the emergency button was pushed. • Current mode A: <ul style="list-style-type: none"> • On: Emergency stop button is currently activated with contact A of the button activated. • Off: emergency stop button is deactivated or activated. Contact A is not activated. • Current mode B: <ul style="list-style-type: none"> • On: Emergency stop button is currently activated with contact B of the button activated. • Off: emergency stop button is deactivated or activated. Contact B is not activated. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |

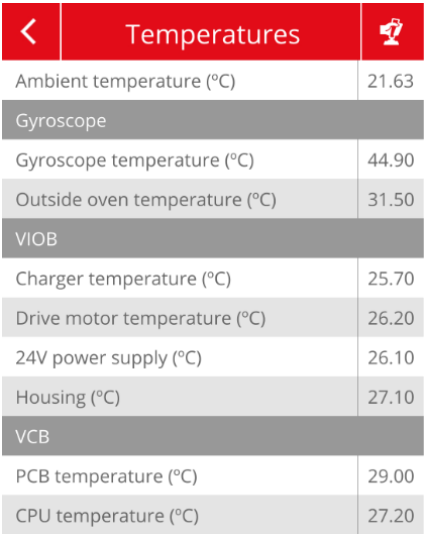

4.3.3.12 Temperatures

| Display | Description |
|---|---|
|  | <p>The menu Temperatures gives actual status information on the ambient temperature and the temperatures of:</p> <ul style="list-style-type: none"> • The gyroscope. • The VIOB. • The VCB. • Ambient temperature: the temperature in the direct environment of the machine. <p>Gyroscope</p> <ul style="list-style-type: none"> • Gyroscope temperature (°C): the actual gyroscope temperature in degrees Celcius. • Outside oven temperature (°C). <p>VIOB</p> <ul style="list-style-type: none"> • Charger temperature. • Drive motor temperature. • 24V power supply (°C). • Housing (°C). <p>VCB</p> <ul style="list-style-type: none"> • PCB temperature (°C). • CPU temperature (°C). <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |

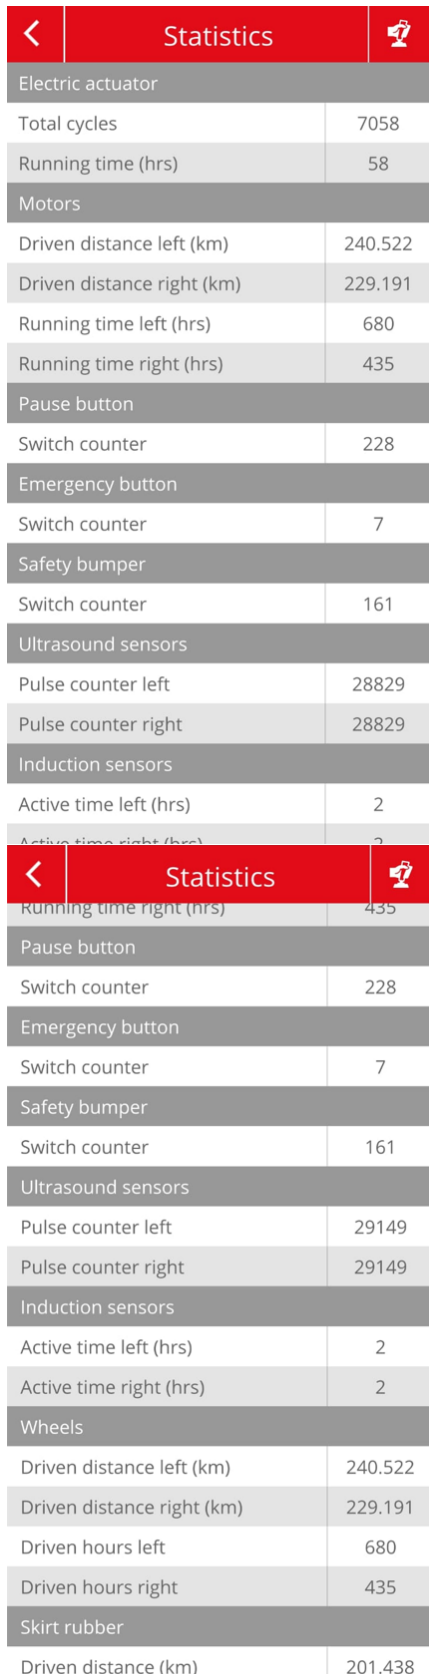


5.4303.8558.0 A

4.3.3.13 Statistics

| Display | Description |
|---|--|
|  <p>The screenshot shows the 'Statistics' menu with a red header and a list of machine metrics. The metrics are grouped into sections: Electric actuator, Motors, Pause button, Emergency button, Safety bumper, Ultrasound sensors, Induction sensors, Wheels, and Skirt rubber. Each section has a title bar and a list of metrics with their corresponding values.</p> | <p>The menu Statistics counts values for the following machine items:</p> <ul style="list-style-type: none"> • Electric actuator. • Motors. • Pause button. • Ultrasound sensors. • Induction sensors. • Wheels. • Skirt rubber. <p>Electric actuator</p> <ul style="list-style-type: none"> • Total cycles: the total amount of cycles the actuator has adjusted the feed push direction or lifted the skirt since the last reset action. • Running time (hrs): the total time the actuator was moving in hours. <p>Motors</p> <ul style="list-style-type: none"> • Driven distance left (km): the total amount of kilometers the left drive motor has travelled since the last reset action. • Driven distance right (km): the total amount of kilometers the right drive motor has travelled since the last reset action. • Running time left (hrs): the total amount of time the left motor has run since the last reset action. • Running time right (hrs): the total amount of time the right motor has run since the last counter reset action. <p>Pause button</p> <ul style="list-style-type: none"> • Switch counter: the total amount of times the pause button was pushed since the last counter reset action. <p>Ultrasound sensors</p> <ul style="list-style-type: none"> • Pulse counter left: when activated, 10 times in 1 second the ultrasound sensor sends out 6 ultrasound pulses. The reflected pulses are counted. • Pulse counter right: when activated, 10 times in 1 second the ultrasound sensor sends out 6 ultrasound pulses. The reflected pulses are counted. <p>Induction sensors</p> <ul style="list-style-type: none"> • Active time left (hrs): the total time the left induction sensor was in operation in hours since the last reset action. • Active time right (hrs): the total time the right induction sensor was in operation in hours since the last reset action. |

| Display | Description |
|---------|---|
| | <p>Wheels</p> <ul style="list-style-type: none"> • Driven distance left (km): the total distance the left drive wheel has travelled in kilometers since the last reset action. • Driven distance right (km): the total distance the right drive wheel has travelled in kilometers since the last reset action. • Driven hours left: the amount of time the left drive wheel has travelled since the last reset action. • Driven hours right: the amount of time the right drive wheel has travelled since the last reset action. <p>Skirt rubber</p> <ul style="list-style-type: none"> • Driven distance: the distance the skirt rubber has travelled since the last reset action. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |

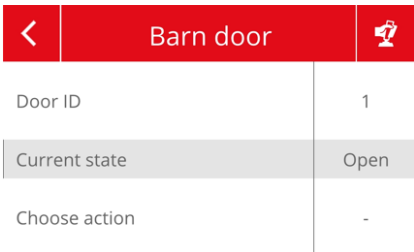4.3.3.14 Barn Door

| Display | Description |
|---|---|
|  <p>The display shows a menu titled "Barn door" with a back arrow on the left and a manual control icon on the right. Below the title, there are three rows: "Door ID" with the value "1", "Current state" with the value "Open", and "Choose action" with a dash "-".</p> | <p>The menu Barn door gives actual information about the barn door.</p> <ul style="list-style-type: none"> • Door ID: <ul style="list-style-type: none"> • Identification number of the barn door. • Current state: <ul style="list-style-type: none"> • Open: the barn door is currently opened. • Closed: the barn door is currently closed. • Manual: the door is set to manual operation. • Choose action: <ul style="list-style-type: none"> • Open. • Close. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Testing. •  to enter the menu Manual control. |

4.3.4 Machine Info






| Display | Description |
|--|---|
| <p>The screenshot shows the 'Machine info' menu. It has a back arrow on the left and a gyroscope icon on the right. The menu is divided into sections: VCB, VIOB, Gyroscope, VCB hardware, Lely Control Plus App, and Buttons. Each section contains a list of items with their respective values.</p> | <p>The menu Machine info gives all kind of information about software and hardware versions of the VCB, VIOB and the gyroscope.</p> <p>VCB</p> <ul style="list-style-type: none"> • Application version: version of the machine specific software. • Application version date: release date of the machine specific software. • Application installation date: installation date of the machine specific software. • VCB version: VCB software version. • Uboot version: Uboot software version. <p>VIOB</p> <ul style="list-style-type: none"> • VIOB LPC software version name. • VIOB DSP software version name: version of the Digital Processing Software. <p>Gyroscope</p> <ul style="list-style-type: none"> • Application version: the version number of the gyroscope software. <p>VCB hardware</p> <ul style="list-style-type: none"> • Serial number: the serial number of the VCB. <p>Lely Control Plus App</p> <ul style="list-style-type: none"> • Application version: version number of the application. • Application version date: release date of the application version. <p>Buttons</p> <ul style="list-style-type: none"> • to return to the menu Testing. • to enter the menu Manual control. |

4.3.5 Manual Control




You can only control the machine manually when it is out of operation.

| Display | Description |
|---------|---|
| | <ul style="list-style-type: none"> Manually move the machine. <p>Buttons</p> <ul style="list-style-type: none"> to move the machine in all directions. Ribbon buttons: <ul style="list-style-type: none"> Charger drive L: to detect the strip at the charger and to follow it in the left direction towards the charger. Approach the strip at a 45 - 90° angle and make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in). Charger drive R: to detect the strip at the charger and to follow it in the right direction towards the charger. Approach the strip at a 45 - 90° angle and make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in). Charger drive F: to detect the strip at the charger and to follow it towards the charger. Approach the strip in the direction of the strip and make sure the induction sensors are on top of the strip or approach the strip from a max. distance of 30 cm (12 in). Straight forward: to drive the machine straight on. Straight backward: to drive the machine straight backward. Skirt left: to move the skirt of the machine to the left feed push position. Skirt lift: to lift the skirt from the ground. E.g to drive from one barn to another. Skirt right: to move the skirt of the machine to the right feed push position. |





| Display | Description |
|---------|--|
| | <ul style="list-style-type: none">  Ultrasound follow L: to follow a wall or fence at the left side of the machine at a distance of 1.8 meter (5.9 ft) from the wall or fence using ultrasound.  Ultrasound follow R: to follow a wall or fence at the right side of the machine at a distance of 1.8 meter (5.9 ft) from the wall or fence using ultrasound.  Strip follow L: to detect a strip and follow it into the left direction. Approach the strip at a 45 - 90° angle and make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in).  Strip follow R: to detect a strip and follow it into the right direction. Approach the strip at a 45 - 90° angle make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in).  Strip follow F: to detect a strip and to follow it. Approach the strip in the direction of the strip and make sure the induction sensors are on top of the strip or approach the strip from a max. distance of 30 cm (12 in). |

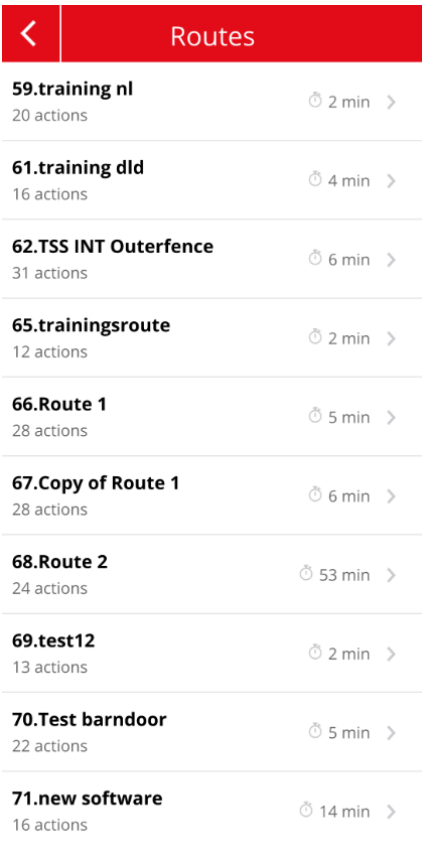4.3.6 Routes



| Display | Description |
|--|--|
|  | <p>The menu Routes displays a list with the available routes for the machine.</p> <p>Behind the route name the average driving time is displayed. When a route is not driven yet the time displayed is 0 minutes.</p> |

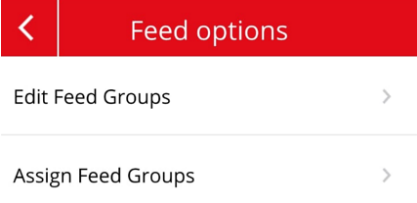4.3.7 Feed Options

The menu **Feed options** is used to create feed groups and to set the feed push power for a feed group. You can assign a feed group to a feed push action in a route. A feed group can only be assigned to feed push actions. A push power is set for each feed group.

| Display | Description |
|---|---|
|  | <ul style="list-style-type: none"> • Edit Feed Groups: push power to assign to a feed group. • Assign Feed Groups: feed push power (feed group) to assign to a feed push action in a route. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the main menu. •  to enter the menu Edit Feed Groups. •  to enter the menu Assign Feed Groups. |

Edit Feed Groups

| Display | Description |
|---|--|
| <div> <div> <div><</div> <div>Edit Feed Groups</div> </div> <div> <div>Default</div> <div>Medium ></div> </div> <div> <div>Type 1</div> <div>Low ></div> </div> <div> <div>Type 2</div> <div>Extra low ></div> </div> <div> <div>Type 3</div> <div>Extra low ></div> </div> <div> <div>+ Add group</div> </div> <div> <div>Cancel</div> <div>Default</div> </div> <div> <div>Name</div> <div>Default</div> </div> <div> <div> <input type="checkbox"/> <div>Extra low</div> <div>Light, dry roughages like hay, straw.</div> </div> <div> <input type="checkbox"/> <div>Low</div> <div>Dry, but more compact roughages like finely cut corn, alfalfa.</div> </div> <div> <input checked="" type="checkbox"/> <div>Medium</div> <div>Compact and wet feed like most silage mixtures.</div> </div> <div> <input type="checkbox"/> <div>High</div> <div>Heavy compacted feeds, long strands mixed in with finely cut feeds or starchy feeds like potato/beans mixed in.</div> </div> <div> <input type="checkbox"/> <div>Extra high</div> <div>Juno pushes at maximum power. Only use this if high is not enough. Increased risk of slip during feed push!</div> </div> </div> </div> | <p>This menu is used to create feed groups and to set the feed push power for each feed group. There are five levels of push power:</p> <ul style="list-style-type: none"> • Extra low: light, dry roughages like hay, straw. • Low: dry, but more compact roughages like finely cut corn, alfalfa. • Medium: compact and wet feed like most silage mixtures. • High: heavy compact feeds, long strands mixed in with finely cut feeds or starchy feeds like potato/beans mixed in. • Extra high: machine pushes feed at maximum power. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the menu Feed options. •  to add a new group and to set the power for this group. |

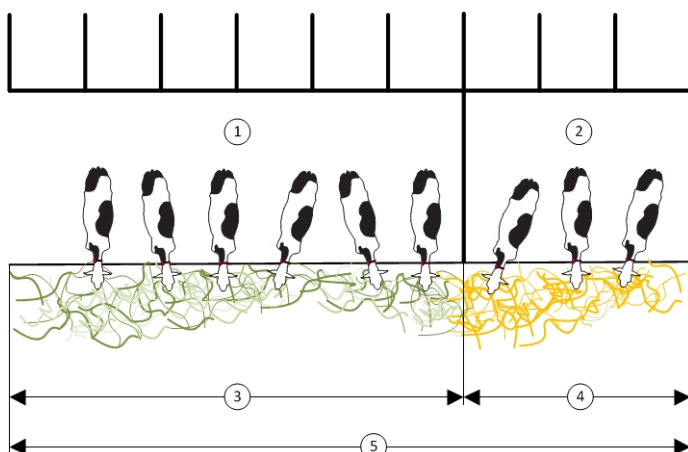


Figure 17. Feed groups and feed push power

KEY: 1. Young stock - 2. Dairy cows - 3. Feed group for young stock - 4. Feed group for dairy cows - 5. Feed push action

Assign Feed Groups





| Display | Description |
|---|--|
| <div> <div><</div> <div>Assign Feed Groups</div> </div> <div> <div>SR1 extra high</div> <div>40 actions</div> <div>0 min ></div> </div> <div> <div>SR1 extra low</div> <div>42 actions</div> <div>0 min ></div> </div> <div> <div>FPI1.2.2 extralow</div> <div>18 actions</div> <div>9 min ></div> </div> <div> <div>FPI 1.2.2 extrahigh</div> <div>18 actions</div> <div>0 min ></div> </div> <div> <div>FPP</div> <div>40 actions</div> <div>1 min ></div> </div> <div> <div>PreMaster1.3</div> <div>47 actions</div> <div>7 min ></div> </div> <div> <div>Robotblocked</div> <div>6 actions</div> <div>2 min ></div> </div> <div> <div>Route 2</div> <div>17 actions</div> <div>4 min ></div> </div> <div> <div>RC1.3.1</div> <div>34 actions</div> <div>15 min ></div> </div> | <p>This menu is used to assign a feed group (with a specific feed push power) to a feed push action in a route.</p> <p>Buttons</p> <ul style="list-style-type: none"> <div><</div> to return to the menu Feed options. <div>+</div> to add a new group and to set the power for this group. |

4.3.8 Day Planning

For daily operation the routes must be set in a day planning. If the machine is put into operation the day planning is switched on and the machine drives the set routes automatically at the set times each day. The

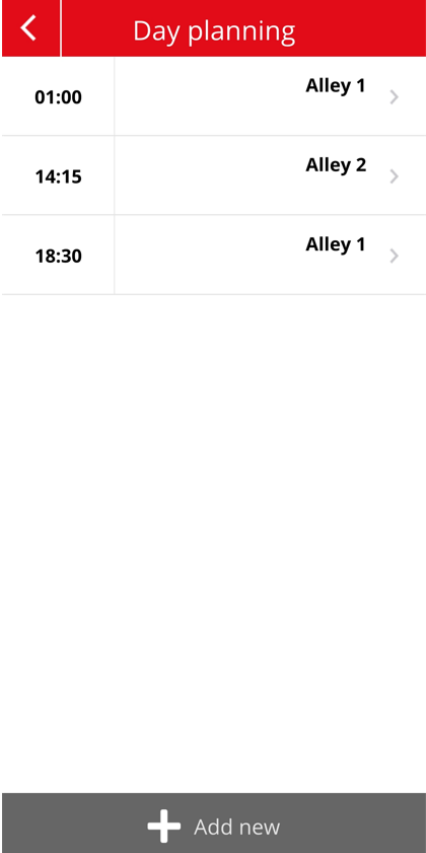machine drives routes in a day planning maximum 40% of the time. The other 60% of the time the machine charges at the charging station.

The display shows the following information:

| Display | Description |
|--|---|
|  | <ul style="list-style-type: none"> • Day planning: start times of set routes. • Names of the set routes. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the home screen or main menu. •  to access the route planned at a certain time in the day planning. •  to add a route to the day planning. |

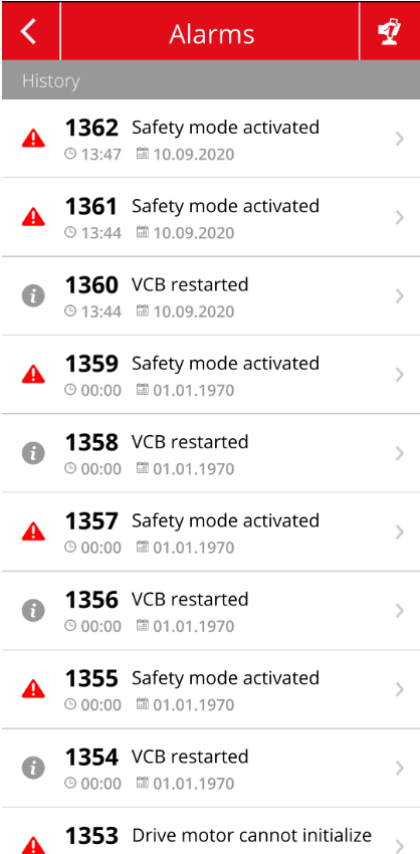



5.4303.8558.0 A

4.3.9 Alarms

The machine monitors itself continuously and informs you about the situation.






Alarm List

The alarm list gives a summary of the history of the alarms received.

| Display | Description |
|--|--|
|  <p>The screenshot shows the 'Alarms' menu with a red header bar containing a back arrow, the title 'Alarms', and a manual control icon. Below the header is a 'History' section. The list of alarms includes:</p> <ul style="list-style-type: none"> 1362 Safety mode activated (Red triangle icon, 13:47, 10.09.2020) 1361 Safety mode activated (Red triangle icon, 13:44, 10.09.2020) 1360 VCB restarted (Grey circle with 'i' icon, 13:44, 10.09.2020) 1359 Safety mode activated (Red triangle icon, 00:00, 01.01.1970) 1358 VCB restarted (Grey circle with 'i' icon, 00:00, 01.01.1970) 1357 Safety mode activated (Red triangle icon, 00:00, 01.01.1970) 1356 VCB restarted (Grey circle with 'i' icon, 00:00, 01.01.1970) 1355 Safety mode activated (Red triangle icon, 00:00, 01.01.1970) 1354 VCB restarted (Grey circle with 'i' icon, 00:00, 01.01.1970) 1353 Drive motor cannot initialize (Red triangle icon) | <p>The alarm list displays three kinds of alarms:</p> <ul style="list-style-type: none"> • Grey: information alarms. • Yellow: non critical alarms. • Red: critical alarms. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the main menu. •  to enter the menu Manual control. •  to go to the selected alarm. |

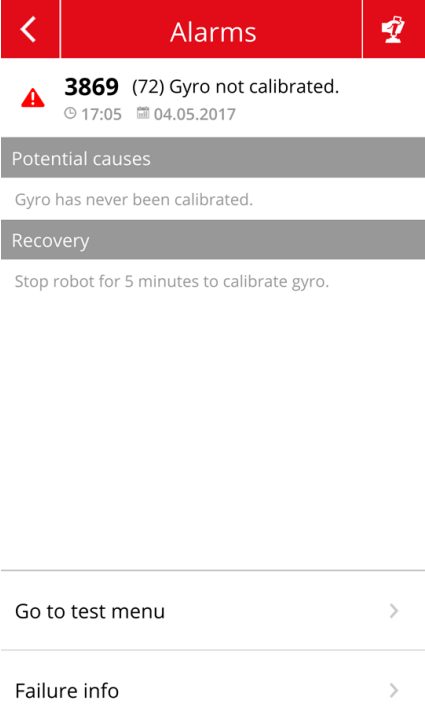

Alarms

The menu **Alarms** explains the alarms received.



| Display | Description |
|--|---|
|  | <p>The alarms display three kinds of information:</p> <ul style="list-style-type: none"> • Kind of alarm. • Potential causes: what causes the alarm. • Recovery: solution for how to handle the alarm. <p>Buttons</p> <ul style="list-style-type: none"> •  to return to the alarm list. •  to enter the menu Manual control. •  Go to test menu. •  Failure info. |

4.3.10 Settings

The menu **Settings** is used to make basic machine settings and backups.

| Display | Description |
|--|--|
| <div> <div> <div><</div> <div>Settings</div> </div> <div> <div>Machine configuration</div> <div>></div> </div> <div> <div>Machine settings</div> <div>></div> </div> <div> <div>Wheels</div> <div>></div> </div> <div> <div>WiFi configuration</div> <div>></div> </div> <div> <div>Backup</div> <div>></div> </div> <div> <div>Logs</div> <div>></div> </div> <div> <div>Software restart</div> <div>></div> </div> <div> <div>Language</div> <div>></div> </div> <div> <div>About</div> <div>></div> </div> </div> | <p>Machine configuration to set:</p> <ul style="list-style-type: none"> • Machine name. <p>Machine settings to set:</p> <ul style="list-style-type: none"> • Shock device working mode. • Led beacon working mode. • Buzzer working mode. • Buzzer beep length (ms). • Gyro target temperature (°C). <p>Wheels: to set the wheel diameter and to calibrate the wheels:</p> <ul style="list-style-type: none"> • Left Wheel diameter. • Right Wheel diameter. • Last time left wheel calibrated. • Last time right wheel calibrated. • Assisted calibration. <p>WiFi configuration</p> <ul style="list-style-type: none"> • SSID. • Password. • Advanced configuration. <p>Backup to:</p> <ul style="list-style-type: none"> • Create backup. • Restore backup. <p>Logs</p> <ul style="list-style-type: none"> • Create log. <p>Software restart</p> <ul style="list-style-type: none"> • Restart VCB • Restart VIOB <p>Language to set:</p> <ul style="list-style-type: none"> • User language. <p>About</p> <p>Buttons</p> <ul style="list-style-type: none"> •  to go back to the main menu. •  to enter the specific setting. |








4.3.10.1 Machine Configuration

| Display | Description |
|---|--|
|  <p>Machine name junoflex-184</p> | <p>Machine configuration:</p> <ul style="list-style-type: none"> • Machine name. <p>Buttons</p> <ul style="list-style-type: none"> •  to go back to the previous menu. |


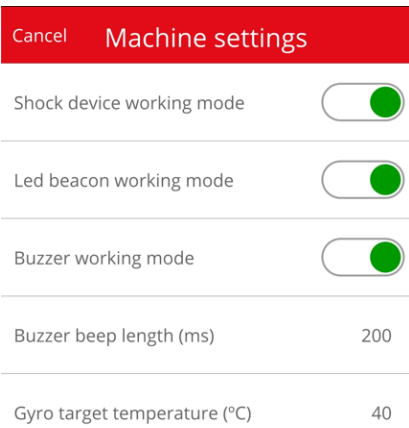

4.3.10.2 Machine Settings



*Unmanned moving vehicle.
Risk of falling or being crushed.
The LED beacon and buzzer must be switched on during operation at all times to ensure safety.*

| Display | Description |
|---|---|
|  <p>Shock device working mode </p> <p>Led beacon working mode </p> <p>Buzzer working mode </p> <p>Buzzer beep length (ms) 200</p> <p>Gyro target temperature (°C) 40</p> | <p>Machine settings:</p> <ul style="list-style-type: none"> • Shock device working mode: to switch the shock device on or off. • Led beacon working mode: to switch the lead beacon on or off. • Buzzer working mode: to switch the buzzer on or off. • Buzzer beep length: to set the beep length of the buzzer. • Gyro target temperature: to set the target temperature of the gyroscope. <p>Buttons</p> <ul style="list-style-type: none"> •  to go back to the previous menu. • : to switch an item on. • : to switch an item off. |

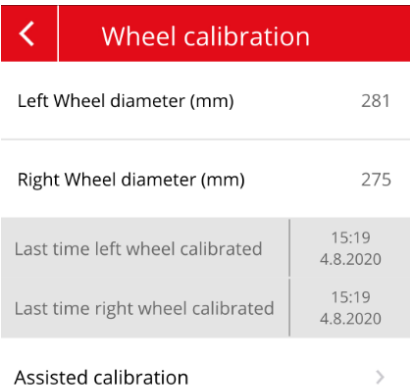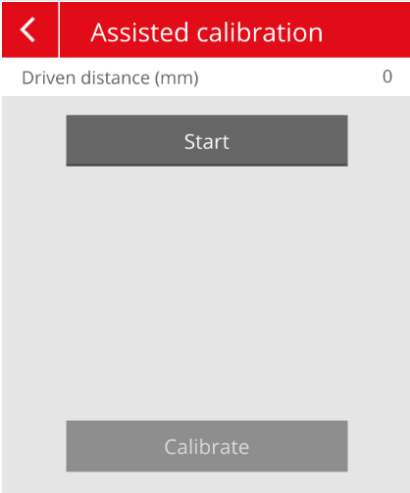4.3.10.3 Wheels

| Display | Description |
|--|--|
|  | Wheels: <ul style="list-style-type: none"> • Left Wheel diameter: the set diameter for the left wheel in mm. • Right Wheel diameter: the set diameter for the right wheel in mm. • Last time left wheel calibrated. • Last time right wheel calibrated. • Assisted calibration: menu to calibrate the wheels. |
|  | Buttons <ul style="list-style-type: none"> • Button  to return to the previous menu. • Start: to start driving to calibrate the wheels. • Stop: to stop driving to calibrate the wheels. • Calibrate: to calibrate the wheels based on the distance driven. |

5.4303.8558.0 A

4.3.10.4 Wifi Configuration




The **WiFi configuration** screen displays the wifi settings and statuses.

| Display | Description |
|---------|--|
| | <ul style="list-style-type: none"> The row of LED indicators at the top of the screen display: <ul style="list-style-type: none"> Router: the status of communication between the robot and the router (green: communication is active). Internet: the status of the internet connection (green: the connection is established). Cloud: the status for connection to the cloud (green: the connection is established). Notif Read: the read status of a notification in the Signals app (green: the notification is read). <p>WiFi configuration</p> <ul style="list-style-type: none"> SSID. Password. Robot S/N. Farm license: licence key for cloud connection. Advanced configuration. <ul style="list-style-type: none"> IP configuration. <ul style="list-style-type: none"> IP address. Subnet mask. Router. Signal Strength. DNS configuration. <ul style="list-style-type: none"> DNS server 1. DNS server 2. |
| | |

4.3.10.5 Backup

| Display | Description |
|---------|---|
| | <p>Backup: menu to create a backup of the routes and settings of the machine.</p> <p>Buttons</p> <ul style="list-style-type: none"> to go back to the previous menu. Create backup: to start creating a backup of the routes and settings of the machine. |































































4.3.10.6 Logs

| Display | Description | | | | | | | | | | | | | | | | | | | | |
|--|------------------------|---------------------|------------------------|---------------------|------------------------|---------------------|------------------------|---------------------|------------------------|---------------------|------------------------|--------------------|------------------------|---------------------|------------------------|---------------------|------------------------|--------------------|------------------------|---------------------|--|
| <div>  Robot Logs </div> <table> <tr> <td>17:04:54 19.08.2020</td><td>Route: 59 Alarm: 52</td></tr> <tr> <td>10:01:58 26.06.2020</td><td>Route: 71 Alarm: 52</td></tr> <tr> <td>16:48:26 08.05.2020</td><td>Route: 71 Alarm: 77</td></tr> <tr> <td>13:32:18 18.04.2020</td><td>Route: 71 Alarm: 52</td></tr> <tr> <td>21:28:21 06.04.2020</td><td>Route: 71 Alarm: 21</td></tr> <tr> <td>17:30:33 06.04.2020</td><td>Route: 71 Alarm: 0</td></tr> <tr> <td>17:22:36 06.04.2020</td><td>Route: 71 Alarm: 77</td></tr> <tr> <td>17:07:41 06.04.2020</td><td>Route: 71 Alarm: 77</td></tr> <tr> <td>15:14:18 06.04.2020</td><td>Route: 70 Alarm: 0</td></tr> <tr> <td>15:30:20 29.01.2020</td><td>Route: 59 Alarm: 52</td></tr> </table> <div> Create log  </div> | 17:04:54 19.08.2020 | Route: 59 Alarm: 52 | 10:01:58 26.06.2020 | Route: 71 Alarm: 52 | 16:48:26 08.05.2020 | Route: 71 Alarm: 77 | 13:32:18 18.04.2020 | Route: 71 Alarm: 52 | 21:28:21 06.04.2020 | Route: 71 Alarm: 21 | 17:30:33 06.04.2020 | Route: 71 Alarm: 0 | 17:22:36 06.04.2020 | Route: 71 Alarm: 77 | 17:07:41 06.04.2020 | Route: 71 Alarm: 77 | 15:14:18 06.04.2020 | Route: 70 Alarm: 0 | 15:30:20 29.01.2020 | Route: 59 Alarm: 52 | <p>Robot Logs: menu to view and create logs of the routes and alarm data of the machine.</p> <p>Buttons</p> <ul style="list-style-type: none">  to go back to the previous menu. Create log: to create a log file. |
| 17:04:54 19.08.2020 | Route: 59 Alarm: 52 | | | | | | | | | | | | | | | | | | | | |
| 10:01:58 26.06.2020 | Route: 71 Alarm: 52 | | | | | | | | | | | | | | | | | | | | |
| 16:48:26 08.05.2020 | Route: 71 Alarm: 77 | | | | | | | | | | | | | | | | | | | | |
| 13:32:18 18.04.2020 | Route: 71 Alarm: 52 | | | | | | | | | | | | | | | | | | | | |
| 21:28:21 06.04.2020 | Route: 71 Alarm: 21 | | | | | | | | | | | | | | | | | | | | |
| 17:30:33 06.04.2020 | Route: 71 Alarm: 0 | | | | | | | | | | | | | | | | | | | | |
| 17:22:36 06.04.2020 | Route: 71 Alarm: 77 | | | | | | | | | | | | | | | | | | | | |
| 17:07:41 06.04.2020 | Route: 71 Alarm: 77 | | | | | | | | | | | | | | | | | | | | |
| 15:14:18 06.04.2020 | Route: 70 Alarm: 0 | | | | | | | | | | | | | | | | | | | | |
| 15:30:20 29.01.2020 | Route: 59 Alarm: 52 | | | | | | | | | | | | | | | | | | | | |



4.3.10.7 Software Restart

| Display | Description |
|---|--|
| <div><div><div><</div><div>Software restart</div></div><div>Restart VCB</div><div>Restart VIOB</div></div> | <div><div>Software restart:</div><div><div>Restart VCB.</div><div>Restart VIOB.</div></div><div>Buttons</div><div><div><div><</div></div><div>to return to the main menu.</div></div></div> |

4.3.10.8 Language

| Display | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|-------|---|---|---------|---|---|--------|---|---|---------|---|---|---------|---|---|--------|---|---|--------|---|---|-------|---|---|----------|---|---|--|
| <div><div>Cancel</div><div>Language</div></div> <table><tr><td>English</td><td></td><td></td></tr><tr><td>Dutch</td><td></td><td></td></tr><tr><td>Turkish</td><td></td><td></td></tr><tr><td>German</td><td></td><td></td></tr><tr><td>Italian</td><td></td><td></td></tr><tr><td>Spanish</td><td></td><td></td></tr><tr><td>Danish</td><td></td><td></td></tr><tr><td>French</td><td></td><td></td></tr><tr><td>Czech</td><td></td><td></td></tr><tr><td>Estonian</td><td></td><td></td></tr></table> | English |  |  | Dutch |  |  | Turkish |  |  | German |  |  | Italian |  |  | Spanish |  |  | Danish |  |  | French |  |  | Czech |  |  | Estonian |  |  | <p>Language: menu to set the language of the user interface of the machine.</p> <p>Buttons</p> <ul style="list-style-type: none"> to go back to the previous menu. to set the preferred language. |
| English |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Dutch |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Turkish |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| German |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Italian |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Spanish |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Danish |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| French |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Czech |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Estonian |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

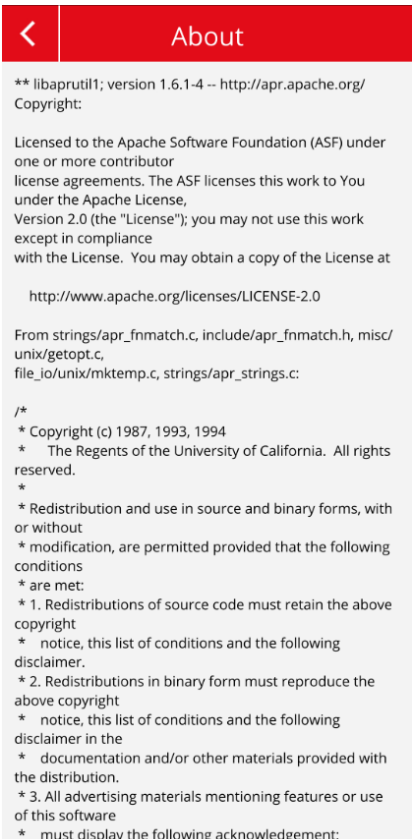4.3.10.9 About

| Display | Description |
|--|---|
|  | <p>About: displays detailed information about the software version.</p> <p>Buttons</p> <ul style="list-style-type: none">  to go back to the previous menu. |

4.3.11 Logout

The menu **Logout** is used to logout from the user interface and to disconnect the smartphone from the machine.

4.4 Operation

4.4.1 Actions, Routes, Day Planning and Manual Control

Actions make a Route

The machine drives through the barn(s) along a programmed route. A route is built up of actions like **Strip follow** or **Turn left**. Refer to the example (see figure 18 on page 4-47). A route always starts with the action **Strip follow**, **Straight drive** or **Wait**.

Automatic Feed Pushing with a Day Planning

The machine pushes the feed each day automatically at the same times if a day planning is set. Routes in a day planning always start and end at the charging station.

Manual Feed Pushing with Manual Control

When **Manual control** is enabled the machine can be driven manually through the barn or the machine can follow a route independent from the day planning. For instance to test a route.

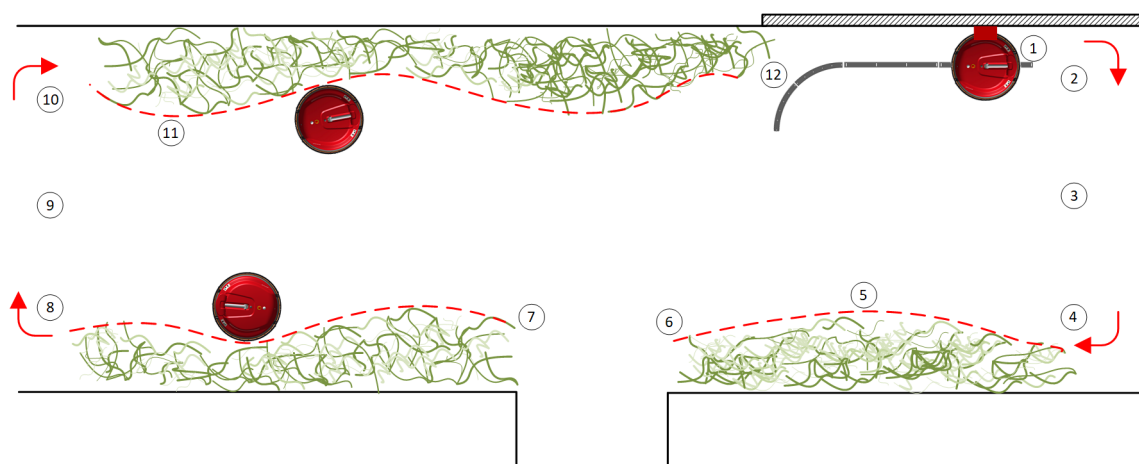


Figure 18. Actions make a route

KEY:

1. Strip follow 2. Turn right 90° 3. Straight drive 4. Turn right 90° 5. Feed push left 6. Straight drive 7. Feed push left 8. Turn right 90° 9. Straight drive 10. Turn right 90° 11. Feed push left 12. Charger drive L

4.4.2 Control System

The control system keeps the vehicle on the correct route. Two sensors on the bottom detect the metal strips on the floor. The built-in ultrasonic sensors makes sure that the machine follows a wall or feed fence at a predetermined distance. An electronic gyroscope guides the machine into the correct direction when a turn is programmed.

Driving distance

The machine measures the number of revolutions of the motors. The measured value is used to calculate the travelled distance. If, due to slip, the actual driving distance is less than calculated it will be corrected the next time. It can only be corrected if the action ends at a reset point (a strip on the floor of the feed alley).

Speed

The number of revolutions is also used to calculate the speed.

Distance to a wall or fence

The ultrasonic sensor sends a pulsed ultrasound wave at the object and then measures the time for the sound echo to return. Knowing the speed of sound, the sensor determines the distance of the machine to a wall, fence or other object. The control software in the VCB uses the ultrasound data along with data coming from other sensors to determine the motor speeds that the VIOB must set.

Direction

The machine has a gyroscope that is used to make the machine turn and to determine the direction the machine must follow. The gyroscope is reset if the machine determines drift during operation.

Obstacles

The machine has a bumper that stops the vehicle immediately when it hits an object that is at least 60 cm above floor level.

If the machine hits a solid object the bumper sensors are activated and the machine stops driving. After 30 seconds the machine tries to continue its route. If the bumper is still activated the machine waits again 30 seconds. The machine repeats this cycle maximum 5 times. If the bumper is still activated after 5 cycles an alarm is generated and the machine goes out of operation. To resume operation the cause of the alarm must be resolved and the pause button must be pushed. If the bumper is not activated anymore, the machine resumes operation.

When the machine is in operation the bumper has an electric pulse on it (optional) to make sure cows do not block the vehicle.

Barn door control

When the machine drives from one barn to another, it communicates with the barn door control unit to open/close the barn door(s).

5 First use

If you use the machine for the first time make sure:

- You have read and understood all operating and safety instructions.
- You know how to handle alarms.
- All components are installed:
 - Charging station.
 - Metal strips.
 - Barn door control system (optional).
 - The sign 'area with unmanned autonomous vehicle'.
 - The sign 'no admittance for unauthorized persons'.
 - The machine itself.
- The Lely Control Plus app is installed on the smartphone.
- The machine is switched ON.
- The machine is paired with the smartphone.
- Routes are programmed for the machine.
- A day planning is created.
- You know how to put the machine into operation and take out of operation.



INTENTIONALLY BLANK

5.4303.8558.0 A

6 Operating Instructions

6.1 Preparation



**Unmanned moving vehicle.
Risk of falling or being crushed.
Do not sit on the vehicle. Keep safe distance.**



**Failure to follow operator instructions could result in death or serious injury.
Only persons who have read and understood the instructions are permitted to enter the working area of the machine.**



**Electrical hazard.
Risk for electric shock.
Keep away from the bumper during operation of the machine.**



The maximum amount of energy the electric pulse of the bumper transfers is 15 mJ (at 500 R). This does not harm cows or humans.



The shock system meets the standard EN IEC 60335-2-76 for electric fence energizers.

This chapter describes how to prepare the machine for operation and how to operate it. To prepare the machine for operation the following actions must be done:

1. Install the Lely Control Plus app on the smartphone.
2. Pair the machine with the smartphone.
3. Connect the machine and the user interface.

4. Create a day planning.

6.2 Install the Lely Control Plus App on the Smartphone

1. On the smartphone go to the App Store® or Play Store.
2. Search for **Lely Control Plus**.
3. Download the Lely Control Plus app.
4. Install the app.

6.3 Rename the Machine on the Smartphone



The name of the machine that is displayed on the smartphone can only be modified by a certified Lely technician.

6.4 Set the Farmer Password



The farmer password must be set by a certified Lely technician.

6.5 Open or Close the Cover



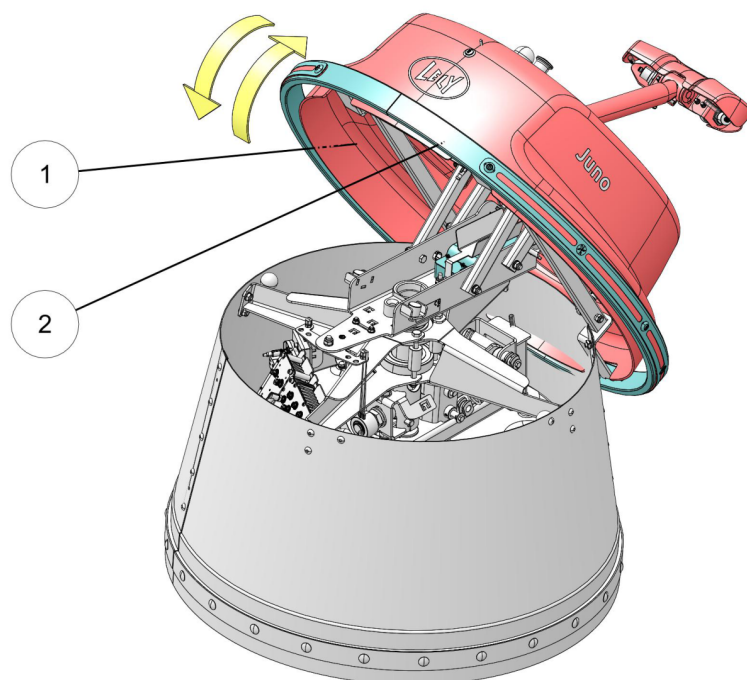
Take the machine out of operation before you open the cover to make sure the machine and its shock system (optional) are deactivated.

Open

1. Take the machine out of operation.
2. At the rear side of the machine, lift the bumper and push it away from you until it locks.

Close

1. At the rear side of the machine, pull the bumper towards you and lower it.



J2_2022_Tech_DOC_OPEN-01-004

Figure 19. Open or close the cover

KEY: 1. Cover - 2. Bumper


6.6 Switch the Machine ON or OFF



If the machine must be switched OFF for a longer period of time, disconnect one of the battery terminals from the battery.

Switch ON

1. Open the cover.
2. At the right top corner of the VIOB, push the power button to switch the machine ON. The machine starts up. This takes approximately one minute.
3. Close the cover.
4. Open the Lely Control Plus app on the smartphone.

5. On the home screen tap the button .

6. The user interface indicates to:

1. Press the pause button.
2. Put the machine into operation (tap start in the user interface).

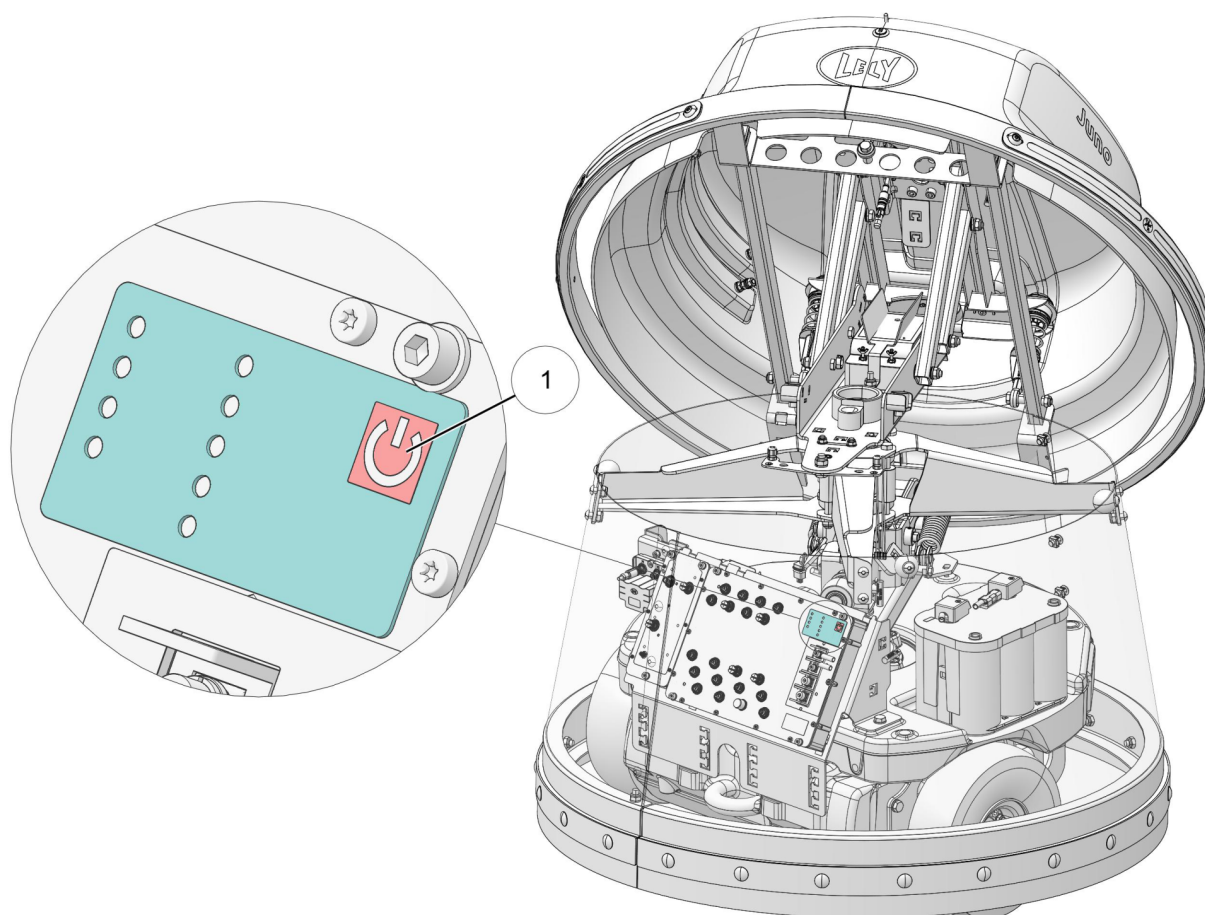


7. **Please wait for motor initialization** is displayed.

8. When you select the next action you want to do in the Lely Control Plus app, the message **Please wait for calibration to finish** is displayed. The gyroscope is calibrated.

Switch OFF

1. Open the cover.
2. At the right top corner of the VIOB, push and hold the power button for 2 seconds to switch the machine OFF.
3. Close the cover.



J2_2022_Tech_DOC_OPEN-01-017

Figure 20. Switch the machine ON or OFF

KEY: 1. Power button

6.7 Pair the Machine with the Smartphone



Make sure the smartphone has bluetooth switched on and location permission for the app is set.



The farmer password must be set by a certified Lely technician.

1. Open the Lely Control Plus app on the smartphone.
2. Tap to search for devices.
3. Tap the machine name in the list of available devices.
4. A message appears on the smartphone display if you want to pair the smartphone with the machine. Confirm.
5. The smartphone connects to the machine. If the smartphone connects to the machine for the first time software is downloaded.
6. Unless the password is remembered, the smartphone asks for the farmer password.

6.8 Start the Lely Control Plus App on the Smartphone



***Unexpected movement of vehicle.
Risk of personal injury.
Make sure the machine is in your line of sight. Remote operation of the
smartphone or tablet by remote desktop software (such as, but not
limited by, Teamviewer) is strictly forbidden to avoid dangerous
situations.***



The first time the machine and the user interface are connected, the Lely service technician must set the farmer password before you can continue.



Make sure you are in the vicinity of the machine when you connect the smartphone to the machine. If the distance is too big, the machine name will not appear in the list on the smartphone display.



Make sure the machine and the smartphone are paired before you start the Lely Control Plus app.




The machine can not be connected to more than 1 smartphone simultaneously.

1. Start the Lely Control Plus app.

If:

- No machine is connected, the **Find machine** screen is displayed.
- A machine is already connected and the home screen is displayed. Tap the back button of the smartphone to enter the **Find machine** screen.



2. In the **Find machine** screen tap  to scan for available machines.
3. Tap the line of the applicable machine to connect to it. When the machine is connected, the home screen is displayed.

6.9 Manually control the Machine



**Unexpected movement of vehicle.
Risk of personal injury.
Make sure you have a clear overview of the machine when you manually drive it.**




The motors of the machine must be active to manually drive the machine. A beep sounds when the motors are activated.



If it is the first time the machine is switched on, push the pause button on the machine before you manually drive the machine. As soon as the indicators for the motors at **Status lights** in the home screen are green it is possible to manually control the machine.







To detect a strip it is recommended to approach it at a 45 - 90° angle.










1. Open the Lely Control Plus app on the smartphone.
2. Take the machine out of operation.
3. On the home screen tap . The screen **Manual control** is displayed.





4. Manually drive the machine with the joystick and the actions displayed on the ribbon:

Joystick

-  to drive forward.
-  to drive backwards.
-  to rotate counter clockwise.
-  to rotate clockwise.

Actions on the ribbon

-  **Charger drive L:** to detect the strip at the charger and to follow it in the left direction towards the charger. Approach the strip at a 45 - 90° angle and make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in).
-  **Charger drive R:** to detect the strip at the charger and to follow it in the right direction towards the charger. Approach the strip at a 45 - 90° angle and make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in).
-  **Charger drive F:** to detect the strip at the charger and to follow it towards the charger. Approach the strip in the direction of the strip and make sure the induction sensors are on top of the strip or approach the strip from a max. distance of 30 cm (12 in).
-  **Straight forward:** to drive the machine straight on.
-  **Straight backward:** to drive the machine straight backward.
-  **Skirt left:** to move the skirt of the machine to the left push position.
-  **Skirt lift:** to lift the skirt from the ground. E.g. to drive from one barn to another.
-  **Skirt right:** to move the skirt of the machine to the right push position.
-  **Ultrasound follow L:** to follow a wall or fence at the left side of the machine at a distance of 1.8 meter (5.9 ft) from the wall or fence using ultrasound.



- 
Ultrasound follow R: to follow a wall or fence at the right side of the machine at a distance of 1.8 (5.9 ft) meter from the wall or fence using ultrasound.
- 
Strip follow L: to detect a strip and follow it into the left direction. Approach the strip at a 45 - 90° angle and make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in).
- 
Strip follow R: to detect a strip and follow it into the right direction. Approach the strip at a 45 - 90° angle and make sure the distance between the strip and the induction sensors is between 30 and 200 cm (12 and 79 in).
- 
Strip follow F: to detect a strip and to follow it in the forward direction. Approach the strip in the direction of the strip and make sure the induction sensors are on top of the strip or approach the strip from a max. distance of 30 cm (12 in).

6.10 Drive the Machine to the Charging Station

NOTICE

Do not drive backwards to the charger. Approach the charger in the forward direction.

1. Open the Lely Control Plus app on the smartphone.
2. Take the machine out of operation.
3. Manually drive the machine to 0.3 - 2 m (1 - 7 ft) from the strip at the charger station.
4. If the machine:

- must follow the strip to the right direction to reach the charger, tap  **Charger drive R.**
- must follow the strip to the left direction to reach the charger, tap  **Charger drive L.**

Or:

5. If the machine must follow the strip in the direction of the strip to reach the charger, manually drive the machine on top of the strip or approach the strip from a max. distance of 0.3 m(1 ft).

6. Tap  **Charger drive F.**

The machine approaches the charging station and stops by itself.

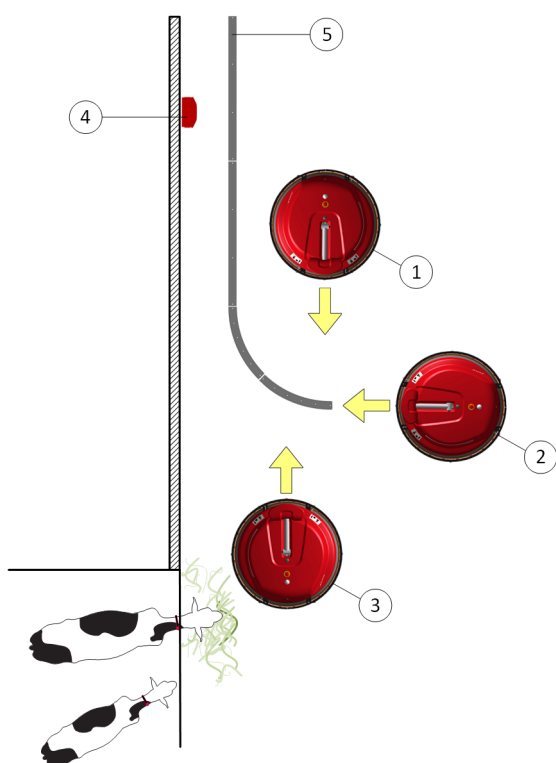


Figure 21. Approach the charger

KEY:

1. **Charger drive R** to approach the charger - 2. **Charger drive F** to approach the charger - 3. **Charger drive L** to approach the charger - 4. Charger - 5. Strip

6.11 Set Feed Options

6.11.1 Edit Feed Groups and set Feed Push Power

1. Open the Lely Control Plus app on the smartphone.

2. On the home screen tap

3. Tap **Feed options**.

4. Tap **Edit Feed Groups**.

5. Tap **Add group** to add a new feed group.

6. Tap the name of the feed group.

7. Tap the group you want to set the feed push power for and select the feed push power:



Default the feed push power is set to **Medium**.

- **Extra low:** light, dry roughages like hay, straw.
- **Low:** dry, but more compact roughages like finely cut corn, alfalfa.
- **Medium:** compact and wet feed like most silage mixtures.
- **High** or **Extra high:** heavy compact feeds, long strands mixed in with finely cut feeds or starchy feeds like potato/beans mixed in.

8. Tap **Save**.

6.11.2 Assign Feed Groups

1. Open de Lely Control Plus app on the smartphone.

2. On the home screen tap .

3. Tap **Feed options**.

4. Tap **Assign Feed Groups**.

5. Tap the name of the route.

6. Tap the feed push action.

7. Tap default en select the feed group.

8. If necessary, tap  **Add new** to add another feed group.

The feed push action is divided into several feed groups.

9. Tap **Save**.

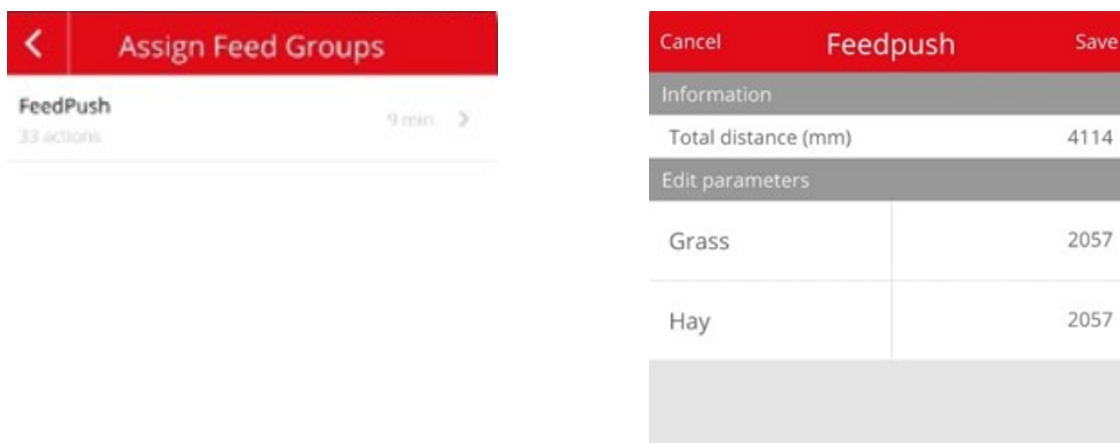



Figure 22. Assign feed groups (feed push powers) to a feed push action

6.12 Modify Actions of an existing Route

1. Open the Lely Control Plus app on the smartphone.

2. On the home screen, tap .

3. Tap **Routes**.

4. Tap the applicable route.

5. Tap the action you want to modify.

6. Tap the parameter that you want to modify.

7. Modify the parameter.

8. Tap **Save**.

6.13 Make a Backup

1. Open the Lely Control Plus app on the smartphone.

2. On the home screen tap .

3. Tap **Settings**.

4. Tap **Backup**.

5. Tap **Create backup**. A backup file (.bkp) of the routes and settings is created and is stored in location /internal storage/LelyControl/JunoNext/backup.

6.14 Copy a Backup File from the Smartphone to a PC

1. Connect the smartphone to a usb port of the PC. Use the data cable of the smartphone to connect.

2. Use the PC to browse to the Lely backup folder on the smartphone: /internal storage/LelyControl/JunoNext/backup.
3. Select the applicable backup file (.bkp).
4. Copy the backup file from the smartphone.
5. Paste the backup file to the PC.

6.15 Copy a Backup File from a PC to the Smartphone

1. Connect the smartphone to a usb port of the PC. Use the data cable of the smartphone to connect.
2. Use the PC to browse to the location of the backup file (.bkp).
3. Copy the backup file from the PC.
4. Paste the backup file to the Lely backup folder on the smartphone: /internal storage/LelyControl/JunoNext/backup.

6.16 Create a Day Planning


NOTICE

The machine must not drive more than 40% of the total time routes from the day planning. It must spend minimum 60% of the total time charging at the charging station of which 2 hours continuously for proper regeneration of the battery.

Create a day planning to plan when the machine drives which route through the barn(s). The machine pushes the feed each day automatically at the set times.

Add routes to the day planning





1. Open the Lely Control Plus app on the smartphone.
2. Take the machine out of operation.

3. On the home screen tap  **Day planning.**

4. Tap  **Add new.**

5. Select the hour and minute on which you want to add a route to the day planning.
6. Tap **Done.**
7. Tap the added route at the set moment in the day planning. The list with available routes is displayed.
8. Tap the route you want the machine to drive at the set time.
9. Tap **Save.** The route is added to the day planning at the set time. If you add multiple routes to the day planning you only need to save once after the last route was added.

Remove routes from the day planning


1. Open the Lely Control Plus app on the smartphone.
2. Take the machine out of operation.
3. On the home screen tap  **Day planning**.
4. Tap and hold the line of the route that you want to remove from the day planning. The line turns to green and the buttons  and  are displayed.
5. Tap . **Day planning entry will be deleted. Are you sure to continue?** appears on the smartphone display.
6. Tap **Yes** to confirm.

6.17 Put the Machine into Operation



**Unexpected movement of vehicle.
Risk of personal injury.**
Make sure the machine is in your line of sight. Remote operation of the smartphone or tablet by remote desktop software (such as, but not limited by, Teamviewer) is strictly forbidden to avoid dangerous situations.


1. Open the Lely Control Plus app on the smartphone.

2. On the home screen tap .


On the smartphone display **In operation** is displayed and the operational status color changes from red to green. The machine drives the routes according to the day planning.

6.18 Pause the Machine

1. Open the Lely Control Plus app on the smartphone.


2. On the home screen tap . Or:
 - Push the pause button on the machine.

On the smartphone display **Paused** is displayed and the operational color changes from green to orange. The machine stops.

3. Tap  on the smartphone or the pause button on the machine to continue operation.


6.19 Take the Machine out of Operation

1. Open the Lely Control Plus app on the smartphone.

2. On the home screen tap button . Or:

- Push the pause button on the machine.


The machine stops.

3. On the smartphone push button  for 5 seconds.

On the smartphone display **Out of operation** is displayed and the operational status color changes from orange to red.

6.20 Disconnect the Smartphone from the Machine

1. Open the Lely Control Plus app on the smartphone.

2. On the home screen tap .


3. Tap  **Logout**. The smartphone disconnects from the machine.

6.21 Manually start a Route



Start a route manually for example when you want to test a route.

1. Open the Lely Control Plus app on the smartphone.

2. On the home screen tap  **Routes**.

3. Tap the route that you want to start manually.

4. The message **Are you sure to play route?** appears on the smartphone display.

5. Tap **Yes** to confirm. The message **Do you want to go in operation after route finished playing?** appears on the smartphone display.

6. Tap **Yes** to confirm or **No** to cancel. The machine drives the manually started route 1 time.

6.22 Reset the Emergency Stop Button

When the emergency button is pushed the machine stops driving immediately and an alarm pops up on the user interface.

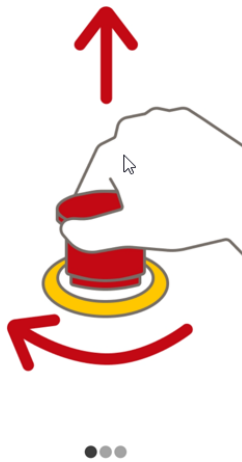
1. Tap button **Mark as solved**.



2. Tap button

3. The user interface indicates to:

1. Release the emergency stop button.
2. Press the pause button.
3. Put the machine into operation (tap button start in the user interface).



6.23 Drive the Machine when the Bumper is blocked

When the bumper is blocked the machine stops driving and an alarm pops up on the user interface.

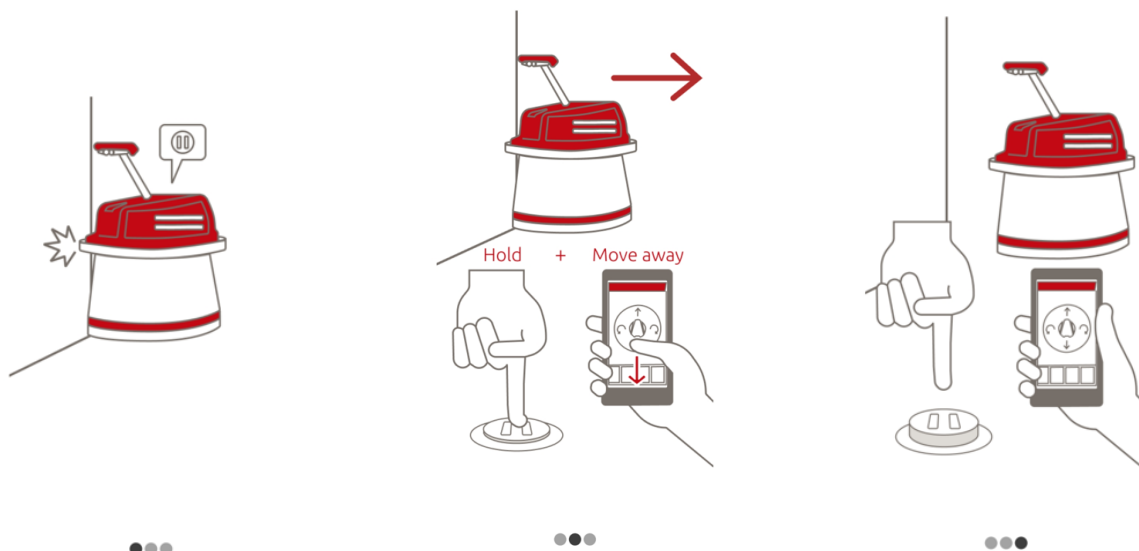
1. Tap button **Mark as solved**.



2. Tap button

3. The user interface indicates to:

1. Press and hold the pause button.
2. Manually drive the machine away till the bumper is released.
3. Continue the route or drive the machine to the charging station.



6.24 Hoist the Machine

⚠ DANGER

**Falling object.
Risk of being crushed.
Use correct and well maintained hoisting equipment.
Never stand under the lifted machine.**

NOTICE

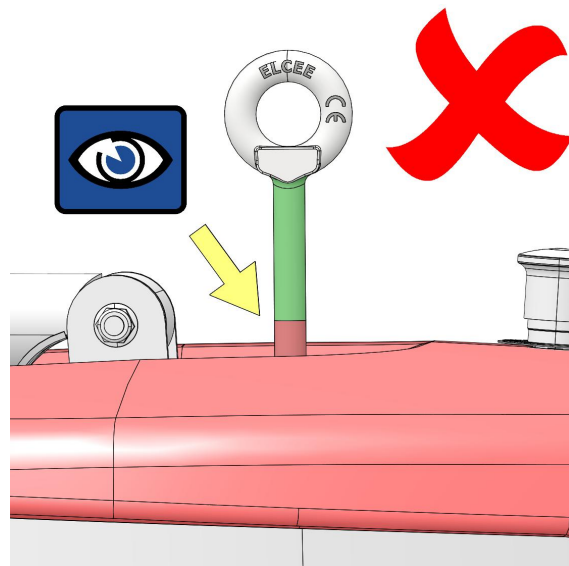
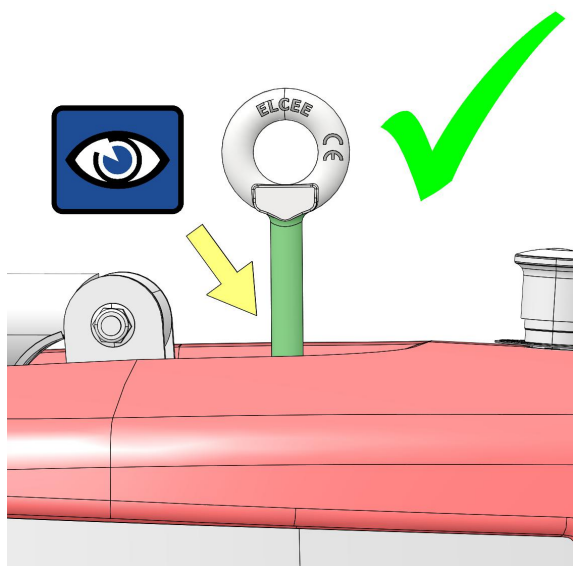
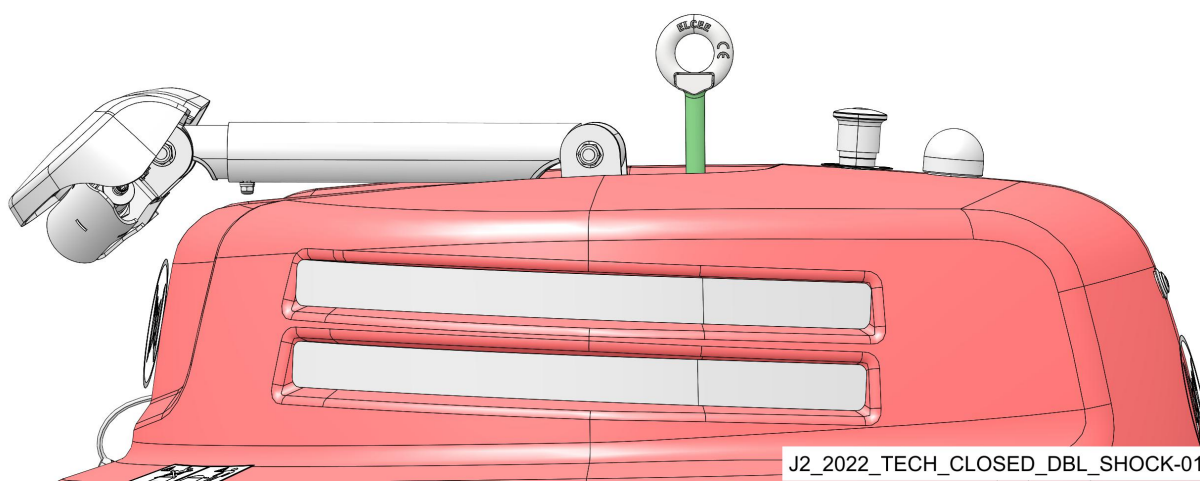
Do not tow the machine to prevent damage to the machine electronics by power dissipation. To hoist the machine is the only proper method to transport the machine when a failure occurs.



The manual of the hoisting eye must be stored with the hoisting eye. The hoisting eye and its manual are typically stored in the charging station. If the manual of the hoisting eye is lost, contact your local Lely service provider.

Install the hoisting eye

1. Remove the black cap from the cover of the machine.
2. Before every use of the hoisting eye, do the necessary safety checks as described in the manual of the hoisting eye. If there are any abnormalities, do not use the hoisting eye and contact your local Lely service provider.
3. Turn the hoisting eye into the machine until the red mark on the hoisting eye is not visible anymore. Only the green marking may still be visible.





INTENTIONALLY BLANK

5.4303.8558.0 A

7 Maintenance

7.1 Introduction

This chapter contains the preventive maintenance schedule and the applicable preventive maintenance procedures for the machine.

7.2 Preventive Maintenance Schedule

| Maintenance Tasks | Frequencies | |
|--|------------------|------|
| | Operating Months | Note |
| Examine the charger. | 3 | |
| Clean the charging strips and the charging electrodes. | 3 | |
| Examine and clean the ultrasonic sensor(s). | 3 | |
| Clean the machine. | 3 | |
| Examine the skirt. | 3 | |
| Adjust the ultrasound sensor height. | 3 | |
| Examine the drive wheels. | 6 | |
| Test the emergency stop button. | 3 | |
| Examine and replace the metal strips. | 3 | |
| Test the induction sensors. | 3 | |

7.3 Maintenance Procedures

7.3.1 Examine the Charging Station

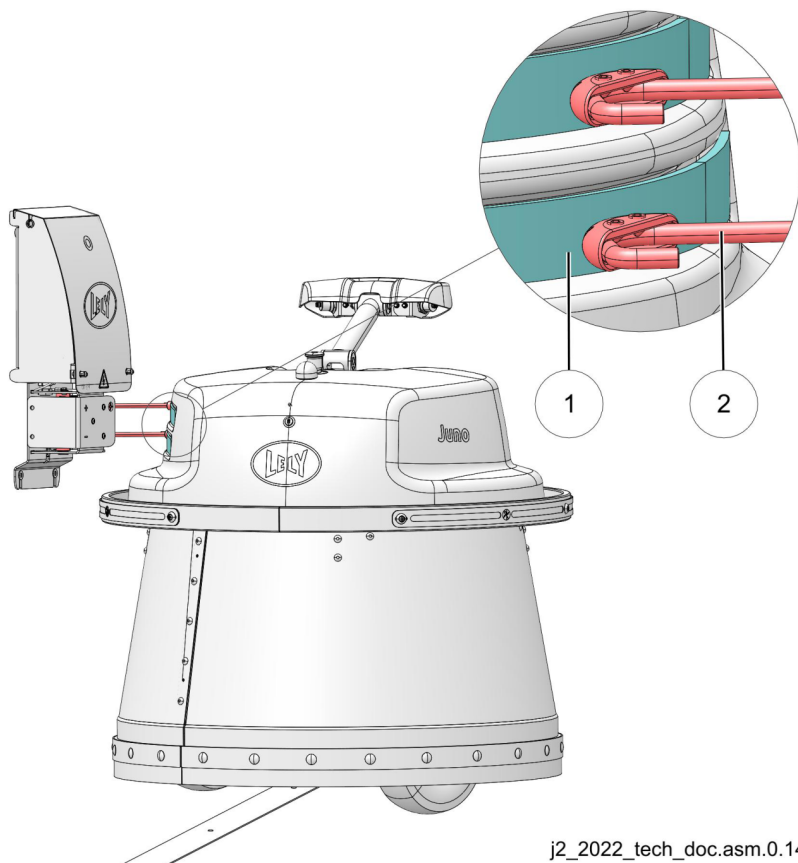
Preparation

1. Take the machine out of operation.
2. Manually drive the machine to a clean and quiet location.

Examine

1. Examine the charging station for dirt and damage. If necessary clean with a moist cloth.
2. Examine the indicator LEDs on the upper right side of the charger. Make sure the LEDs do not blink.
3. Manually drive the machine to the charging station.

4. Examine the charging electrodes (2) slide over the middle of the charging strips (1) when the machine connects to the charger. If the electrodes do not slide over the middle of the strips, call your local Lely service provider.



j2_2022_tech_doc.asm.0.14

Figure 24. Position of the charging electrodes

KEY: 1. Charging strip - 2. Charging electrode

Close-up

1. Manually drive the machine to the charging station.
2. Put the machine into operation.

7.3.2 Clean the Charging Strips and the Charging Electrodes

NOTICE

Make sure that after cleaning the charging electrodes slide over the middle of the charging strips when the machine connects itself to the charging electrodes.

Preparation

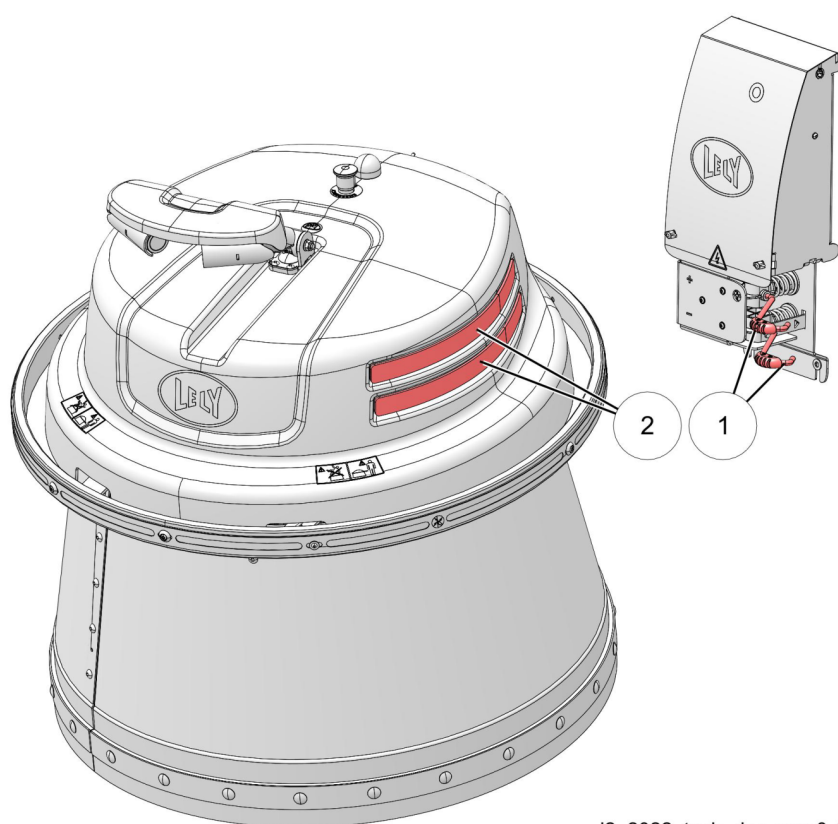
1. Disconnect the main power supply to the charging station.
2. Manually drive the machine to a clean and quiet location.
3. Open the cover of the machine.
4. At the right top corner of the VIOB, push the power button to switch the machine OFF.
5. Close the cover.

Clean

1. Thoroughly clean the charging strips (2) of the machine with sand paper.
2. Thoroughly clean both electrodes (1) of the charging station with a brush or sand paper.

Close-up

1. Connect the charging station to the main power supply.
2. Open the cover of the machine.
3. At the right top corner of the VIOB, push the power button to switch the machine ON.
4. Close the cover.
5. Manually drive the machine to the charging station.
6. Examine the charging electrodes slide over the middle of the charging strips when the machine connects to the charging station.
7. Put the machine into operation.



j2_2022_tech_doc.asm.0.15

Figure 25. Clean the charging strips and the charging electrodes

KEY: 1. Charging electrodes - 2. Charging strips

7.3.3 Examine and Clean the Ultrasonic Sensor(s)

NOTICE

Do not use sharp objects to clean the ultrasonic sensor.

Preparation

1. Take the machine out of operation.
2. Manually drive the machine to a clean and quiet location.

Examine and Clean

1. Clean the ultrasonic sensor(s) with a moist cloth.
2. Examine the angle of the ultrasonic sensor(s). If the angle deviates and the brackets of the ultrasonic sensor(s) are bend or cracked, call your local Lely service provider.

Close-up

1. Manually drive the machine to the charging station.
2. Put the machine into operation.

7.3.4 Clean the Machine

NOTICE

Do not spout water on the body of the machine.

Preparation

1. Manually drive the machine to a clean and quiet location.
2. Open the cover of the machine.
3. At the right top corner of the VIOB, push the power button to switch the machine OFF.
4. Close the cover.

Clean

1. Clean the cover and the skirt with water and a brush.

Close-up

1. Open the cover of the machine.
2. At the right top corner of the VIOB, push the power button to switch the machine ON.
3. Close the cover.
4. Manually drive the machine to the charging station.
5. Put the machine into operation.

7.3.5 Examine the Skirt

Preparation

1. Take the machine out of operation.
2. Manually drive the machine to a clean and quiet location.

Examine

1. Examine the skirt for dirt and damage. If necessary clean the machine.
2. If the skirt is damaged, call your local Lely service provider.

Close-up

1. Manually drive the machine to the charging station.
2. Put the machine into operation.

7.3.6 Adjust the Ultrasonic Sensor Height

NOTICE

The ultrasonic sensor must be at the same height as the centre of the top tube of the feed fence.

Preparation

1. Take the machine out of operation.
2. Manually drive the machine to a location parallel to the feeding fence.

Adjust the angle of the ultrasound sensor

1. Support the ultrasonic sensor manually.
2. Loosen nut (1) (see figure 26 on page 7-6).
3. Put the ultrasonic sensor arm in the correct angle (maximum angle of 60°).
4. Tighten the nut (1).



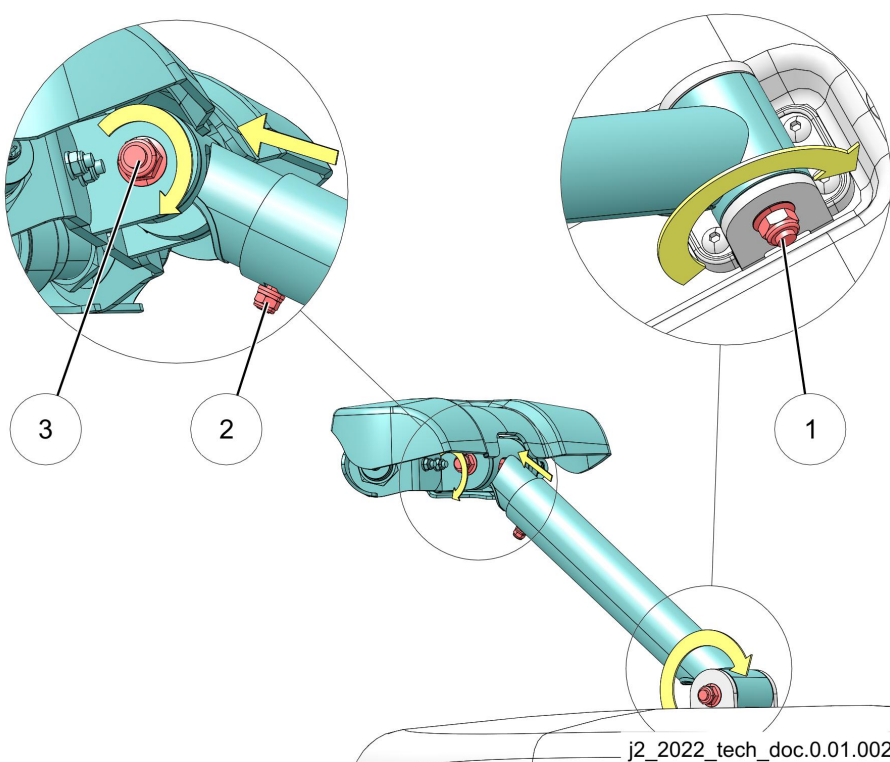
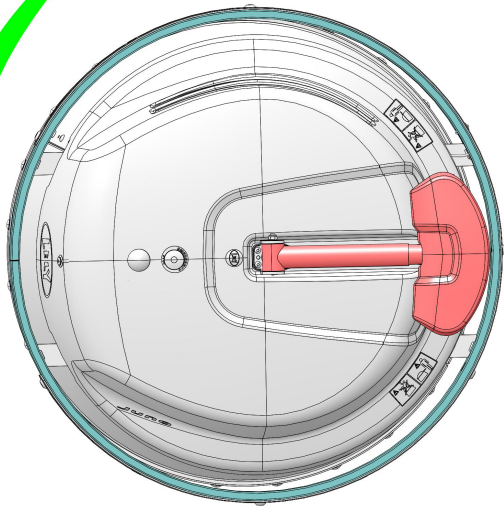


Figure 26. Ultrasound sensor adjustment

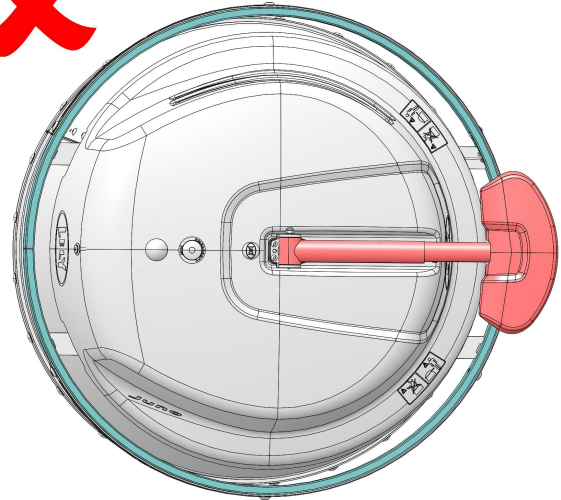


j2_2022_tech_doc.asm.0.20

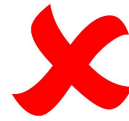

j2_2022_tech_doc.asm.0.21

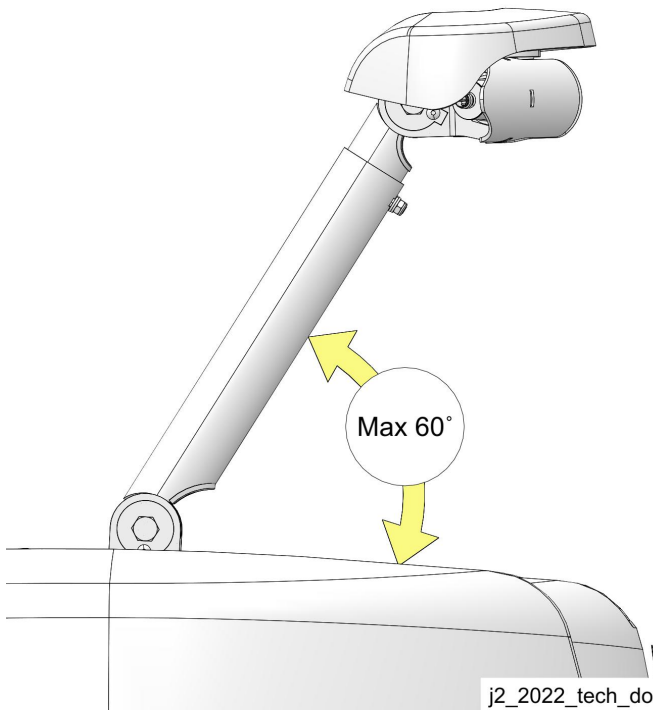5.4303.8558.0 A



j2_2022_tech_doc.asm.0.28

Figure 28. Adjust the ultrasonic sensor arm to an angle of maximum 60°

Adjust the tube length of the ultrasound sensor

1. Support the ultrasonic sensor manually.
2. Loosen nut (2).
3. Put the ultrasonic sensor on the correct length.
4. Tighten the nut (2).

Adjust the angle of the ultrasound sensor head

1. Support the ultrasonic sensor manually.
2. Loosen nut (3).
3. Put the ultrasonic sensor in the correct angle.
4. Tighten the nut (3).

Close-up

1. Manually drive the machine to the charging station.
2. Put the machine into operation.

7.3.7 Examine the Drive Wheels

Preparation

1. Take the machine out of operation.
2. Manually drive the machine to a clean and quiet location.

Examine

1. Open the cover of the machine.
2. Examine the profile of the drive wheels. If the profile is less than 2 mm, call your local Lely service provider for replacement of the tyres.

Close-up


1. Manually drive the machine to the charging station.
2. Put the machine into operation.

7.3.8 Calibrate the Wheels

Preparation

1. Take the machine out of operation.
2. Manually drive the machine to a clean and quiet location with a flat floor.
3. Make sure you have at least 5 m (16 ft) of free driving distance.

Calibrate

1. Tap .
2. Tap **Settings**.
3. Tap **Wheels**.
4. Tap **Assisted calibration**.
5. Tap button **Start**. The machine drives forward.
6. After driving at least 5 m (16 ft), tap button **Stop**. The message **Measure Driven Distance, enter the distance and press calibrate** is displayed.
7. Measure the exact distance the machine has driven (in mm).

8. Tap **Ok**.
9. Tap **Driven distance**.
10. Fill out the driven distance in mm.
11. Tap button **Calibrate**.
12. **Calibration of wheel diameter was successfull** is displayed.
13. Tap **Ok**.
14. Examine the wheel calibration values and the date of calibration. If necessary, repeat the calibration procedure.


Close-up

1. Drive the machine to the charging station.
2. Put the machine into operation.

7.3.9 Test the Emergency Stop Button

While the machine is in operation and drives a route:

1. Push the emergency stop button. The machine must stop immediately.
2. Pull the emergency stop button upwards.
3. On the smartphone display tap **Mark as solved**. The alarm list is displayed.

4. Tap  to go to the home screen.

5. Examine if the user interface indicates to:

1. Release the emergency stop button.
2. Press the pause button.
3. Put the machine into operation (tap start in the user interface).

6. Make sure the status lights of the motors are green.

7. Tap  on the smartphone or the pause button on the machine. The machine continues operation.

7.3.10 Examine and replace the metal Strips



*Sharp, protruding object.
Risk of falling, being cut or damage to the machine.
Make sure the metal strips are properly attached to the floor and do not point upwards at one side.*

NOTICE

The metal strip must be installed in its original place. If the machine does not find the metal strip on the same location it can get lost on the route and generate an alarm.

1. Take the machine out of operation.
2. Manually drive the machine to a clean and quiet location.

Examine

1. Examine if all metal strips in the route are installed correctly to the floor.
2. Determine if you must:
 1. Replace screws.
 2. Replace a metal strip.

Replace Screws

NOTICE

Do not use an impact wrench.



Only the hole (A) in the center is round. The holes B and C are slots to allow the metal strip to shrink and expand a bit with temperature changes. The metal strips are not symmetrical. If (after some time) a hole in the concrete can not be used anymore, you can turn the strip over the long side and drill new holes in the concrete.

If one or more screws must be replaced:

1. Remove all screws of the strip.
2. Turn the strip around over the long side so the holes in the strip do not match the old holes in the floor.
3. Mark the position of the holes. Start to mark the hole in the center (A) of the strip. Mark the slotted holes (B) and (C) in the center of the holes.
4. Drill new holes in the floor with a 10 mm drill and >65 mm deep.
5. Clean the holes.
6. Insert S10 plugs.
7. Use a bit T30 to tighten the metal strip with the screws (BT 6x65). Tighten only with a torque of 20 Nm. It must still be possible that the metal strip can shrink and expand a bit when temperature changes occur.

Replace a metal Strip

NOTICE

Make sure that strips recessed in the floor are installed flush with the floor level or slightly above the floor level. Do not install strips below the floor level.

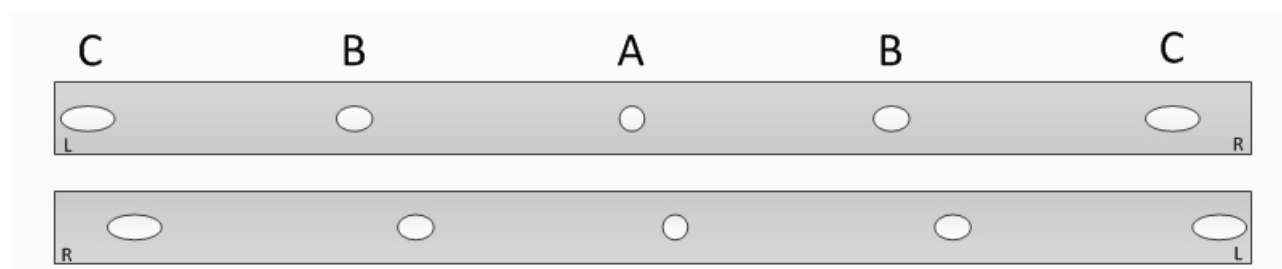


Figure 29. Metal strip holes

KEY:

A: Round hole
B: Slotted hole
C: Slotted hole

NOTICE

If a metal strip sticks out over the edge of a concrete plate (2x2 m) the swivel wheel of the machine will deform the metal strip and the screws will brake due to the tension.

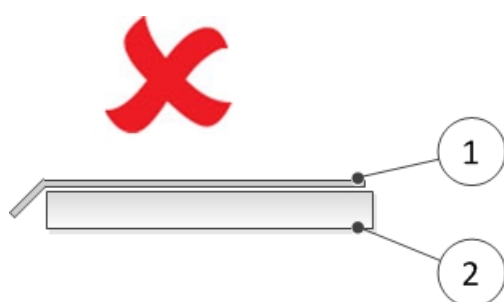


Figure 30. Metal strip positioning (1)

KEY: 1. Metal strip - 2. Concrete plate

1. Remove all screws of the strip.

2. Put the new strip on the floor. If necessary cut the strip with a grinder. Make sure:

- The machine will find the metal strip on the exact same position as the old one.
- The strip does not stick out over the edge of the concrete plate or on other surfaces than concrete plates: leave at least 10 mm of space between two metal strips.

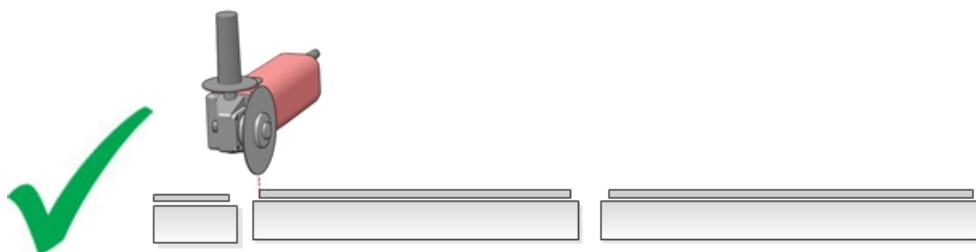


Figure 31. Metal strip positioning (2)

3. Mark the position of the holes. Start to mark the hole in the center (A) of the strip. Mark the slotted holes (B) and (C) in the center of the holes.
4. Drill new holes in the floor with a 10 mm drill and >65 mm deep.
5. Clean the holes.
6. Insert S10 plugs.
7. Use a bit T30 to tighten the metal strip with the screws (BT 6x65). Tighten only with a torque of 20 Nm. It must still be possible that the metal strip can shrink and expand a bit when temperature changes occur.

Close-up


1. Manually drive the machine to the charger.
2. Put the machine into operation.

7.3.11 Test the Inductive Sensors

Preparation

1. Take the machine out of operation.
2. Drive the machine to the charging station.

Test


1. Tap .
2. Tap **Testing**.
3. Tap **Induction sensors**.
4. Examine **Strip status**, **Sensor status left** and **Sensor status right**. The status indicators must be green.
5. If one of the indicators is not green, call your local Lely service provider.

Close-up

1. Put the machine into operation.

7.3.12 Test the Barn Door Control Sensors

Connect to the barn door control unit

1. Open the Lely Control Plus app on the smartphone.
2. In the **Find machine** screen tap  to scan for available devices.
3. Tap the line of the applicable barn door to connect to it. When the machine is connected, the automatic door screen is displayed.

Test the sensors

1. In the Lely Control Plus app go to **Testing**. Four test items are displayed:
 - **Manual mode**.
 - **Induction sensor**.
 - **Relay 1**.
 - **Relay 2**.
2. Open and close the door with the Lely Control Plus app. Examine in the **Testing** menu if at:
 - **Relay 1** the status indicator turns to green when the door opens.
 - **Relay 2** the status indicator turns to green when the door closes.
 - **Induction sensor** the status indicator turns to green when the door is open.
3. Turn the Manual mode switch on the barn door control unit to the manual mode position. Examine in the **Testing** menu if the status indicator at **Manual mode** turns to green.
4. Turn the Manual mode switch on the barn door to the automatic mode position.

7.3.13 Set the Gyroscope Target Temperature

NOTICE

Only change this setting if the gyroscope does not calibrate properly.

On the smartphone:

1. Connect your smartphone to the machine.
2. In the main menu tap **Settings**.
3. Tap **Machine settings**.
4. Tap **Gyro target temperature**.

NOTICE

The applicable target temperature of the gyroscope is about 15 degrees higher than the average maximum outside temperature for that period.

5. Select the applicable temperature.
6. Tap **Save**.

8 Troubleshooting

8.1 Alarm Handling

Critical Alarms

When the machine is in operation and a critical alarm occurs:

- An alarm message is displayed on the smartphone.
- The led in the pause button on the machine blinks.
- An alarm signal sounds.
- On the home screen the alarm is indicated with a red mark.

To recover the critical alarm:

1. Tap the alarm indication at the top of the home screen to go to the alarm list.
2. Tap the critical alarm.
3. Do the recovery action that is displayed on the smartphone at **Recovery**.
4. Tap button **Mark as solved**. The alarm list is displayed.



5. Tap button to go to the home screen.

6. At the top of the screen, swipe two times to the left to display the status lights.

7. Make sure the status lights of the motors are green.



8. Tap on the smartphone or the pause button on the machine. The machine continues operation.

Non-critical Alarms and Notifications

When a non-critical alarm or a notification occurs:

- An alarm signal sounds.
- The alarm or notification is added to the alarm list. The machine tries to continue its route.
- On the home screen the alarm or notification is indicated with a mark:
 - Non-critical alarm: orange.
 - Notification: grey.

To read out the non-critical alarm or notification:



1. In the main menu tap .
2. Tap **Alarms**. The alarm list is displayed.
3. Tap the alarm or notification.
4. Do the recovery action that is displayed on the smartphone at **Recovery**.
5. Tap button **Mark as solved**. The alarm list is displayed.

T4C InHerd — Signals App (optional)

When a critical alarm occurs a push notification is sent to the T4C InHerd Signals app too.

To access the alarm notification in the Signals app:



1. Open the Signals app.
2. The alarm is displayed in the signals app at the top of the list.
3. Tap the line of the alarm to read the alarm. In the Lely Control Plus app you can mark the alarm as solved. In the **WiFi configuration** screen is displayed if the alarm notification is read in Signals.

8.2 Create a Robot Log

Preparation

1. Take the machine out of operation.

Create Log

1. Tap .
2. Tap **Settings**.
3. Tap **Logs**.
4. Tap **Create log**.
5. **Waiting for log to be created** is displayed.
6. The created log is displayed in a green line at the top of the page **Robot Logs**.
7. Tap the line of the log file.
8. Tap  to download the log file to the smartphone. This can take up to 10 minutes.
9. When it is required, find the log file in the lelycontrolplus folder on the smartphone and send it to your local Lely service provider.

Close-up

1. Drive the machine to the charging station.
2. Put the machine into operation.

8.3 Troubleshooting Tables

8.3.1 Troubleshooting Table Juno Vehicle

| Symptom | Possible cause | Action |
|---|---|--|
| The smartphone does not connect to the machine / connection lost. | The farmer password is not set on the smartphone. | 1. Ask the Lely service provider for the password. |
| | The smartphone is not paired with the machine. | 1. Make sure bluetooth of the smartphone is switched on. |

| Symptom | Possible cause | Action |
|-------------------------------------|---|--|
| | | <p>2. Examine in the bluetooth settings of the smartphone if the machine is paired.</p> <p>Refer to the user manual of the smartphone.</p> |
| | The machine is switched OFF. | 1. Switch ON the machine. |
| | The distance between the smartphone and the machine is too big. | 1. Move the smartphone towards the machine and try to connect. |
| | Location permission is turned off. | 1. Set location permission. |
| The vehicle does not move. | The machine is switched OFF. | <p>1. Switch ON the machine.</p> <p>2. Put the machine into operation.</p> |
| | The route is blocked. | 1. Remove the blockage. |
| | The battery is low. | <p>1. Drive the machine to the charging station.</p> <p>2. Charge for one hour.</p> |
| | The fuse is blown. | 1. Call your local Lely service provider. |
| | The power supply is not connected. | 1. Connect the power supply. |
| | The emergency stop button is pushed. | <p>1. Reset the emergency stop button.</p> <p>2. Put the machine into operation.</p> |
| The vehicle does not start a route. | The emergency stop button is pushed. | <p>1. Reset the emergency stop button.</p> <p>2. Put the machine into operation.</p> |
| | The bumper is activated. | 1. Make sure the bumper has no contact with any object. |
| | The route is blocked. | 1. Remove the blockage. |
| | No route is programmed. | 1. Call your local Lely service provider. |

| Symptom | Possible cause | Action |
|--|--|---|
| | Day planning is not set. | 1. Create a day planning. |
| The machine swings. | The gyroscope is drifting. | 1. Call your local Lely service provider. |
| | The ultrasonic sensor does not function correctly. | 1. Clean the ultrasonic sensor. 2. Test the ultrasonic sensor. |
| | Broken/worn tires. | 1. Call your local Lely service provider. |
| The machine does not stop at the charging station. | The charging strips or electrodes do not make contact. | 1. Clean the charging strips and the charging electrodes. |
| | No power supply. | 1. Make sure the charging station is connected to the power supply. |
| | Springs that hold the electrodes are loose. | 1. Call your local Lely service provider. |
| The machine does not follow the guide strip. | The induction sensor arm is tilted because of feed underneath the machine. | 1. Remove feed. |
| | | 1. Call your local Lely service provider. |
| The machine is 'searching' the fence when driving Ultrasound drive left . | Position of the ultrasound arm is not correct. | 1. Adjust the ultrasonic sensor arm. |
| | | 1. Call your local Lely service provider. |
| The skirt does not rotate smoothly. | The rubber skirt is worn out. | 1. Call your local Lely service provider. |
| The machine has problems with pushing feed to the fence. | The action Ultrasound drive left is programmed instead of Feed push left to push the feed. | 1. Call your local Lely service provider. |
| | Pushing intervals between the programmed routes are too large. | 1. Program new routes with smaller intervals (not more than 25 cm or 9.8 in). |
| | There was too much feed in front of the feed fence during programming of the routes. | 1. Remove the feed and program a new route. |
| | The skirt of the machine does not rotate smoothly. | 1. Call your local Lely service provider. |

| Symptom | Possible cause | Action |
|--|---|--|
| | Feed push power set too high or too low for this feed type. | 1. Set feed push power. |
| While pushing feed, feed is coming under the skirt or the feed alley is not clean. | The skirt is too high. | 1. Call your local Lely service provider. |
| | The skirt is worn. | 1. Call your local Lely service provider. |
| | The action Straight drive backward is too long. | 1. Call your local Lely service provider. |
| | The machine drives over feed. | 1. Call your local Lely service provider. |
| The backup process of the routes does not function. | The software version of the smartphone is not correct. | Make sure the software version on the smartphone is correct. If the version is not correct update the smartphone software. |

8.3.2 Troubleshooting Table Juno Charging Station

| Symptom | Possible cause | Action |
|-------------------|------------------------|---|
| Green LED is off. | Power disconnected. | 1. Connect the power supply. |
| | Battery loader defect. | 1. Call your local Lely service provider. |

8.4 Reset the Machine when it is connected to the Charging Station



Do this procedure to reset the machine when the machine is at the charging station and you can't establish the connection between the smartphone and the machine.

Reset the Machine

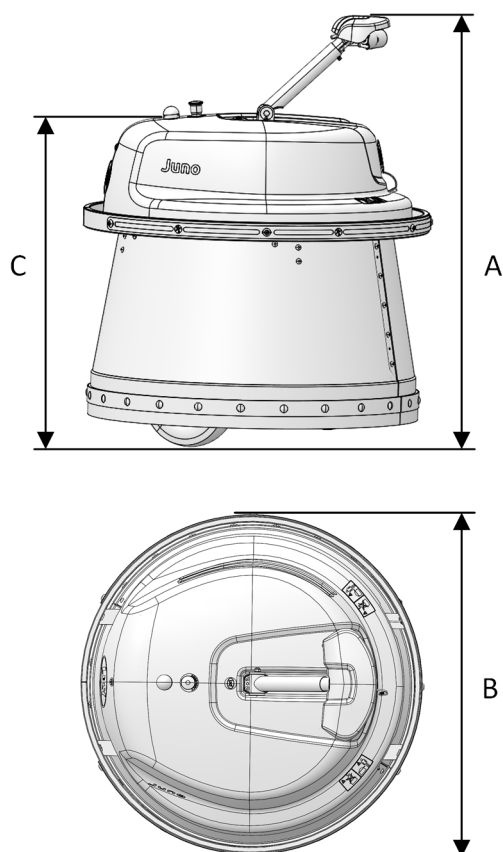
1. Push the emergency stop button.
2. Push and hold the pause button for approximately 5 seconds. A beep sounds and the machine electronics restart.
3. Pull the emergency stop button to deactivate it.

Close-up

1. Start the Lely Control Plus app and connect the smartphone to the machine.
2. Put the machine into operation.

9 Diagrams

9.1 Dimensions Feed Pusher




5.4303.8558.0 A

2022_tech_doc.asm.0.28

Figure 32. Dimensions Juno Feed Pusher

KEY:
A: 1550 mm (61.0 in)
B: 1100 mm (43.3 in)
C: 1000 mm (39.4 in)

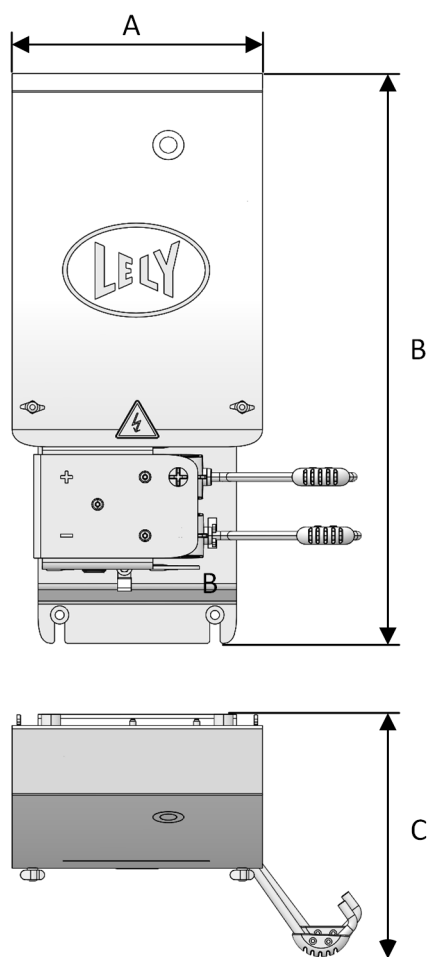9.2 Dimensions Charging Station



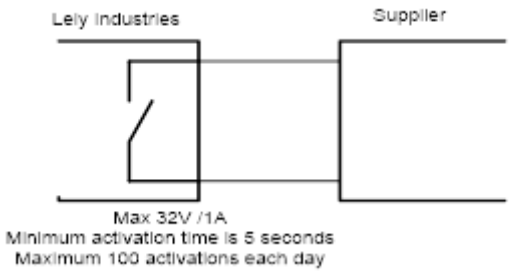
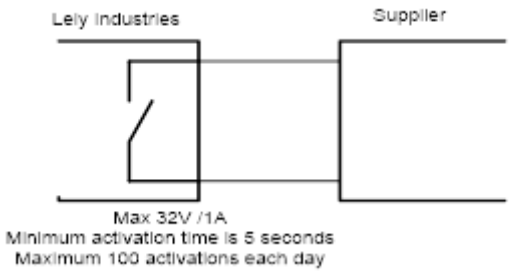
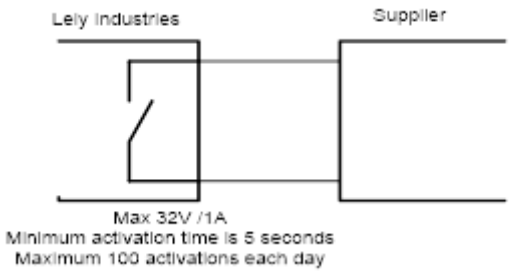
j2_2022_tech_doc.asm.0.27

Figure 33. Dimensions charging station

KEY:
A: 290 mm (11.4 in)
B: 660 mm (26.0 in)
C: 281 mm (11.1 in)

5.4303.8558.0 A

10 CE Questionnaire Barn Door Supplier

| | | | | | | | | | |
|---|--|--|-------------------------|--------------------------------------|----------------|--|----------------|--|----------------|
| Dear potential supplier, The following product has been selected by Lely : | | | | | | | | | |
| Product name | Barn door | | | | | | | | |
| Supplier code/reference | | | | | | | | | |
| Lely code/reference | | | | | | | | | |
| <p>It is our intention to cooperate this barn door with a mobile agricultural robot from Lely Industries N.V. The mobile agricultural robot is covered by the Machine directive 2006/42/EC. Lely Industries N.V. will act as the legal manufacturer for the mobile agricultural robot. As legal manufacturer, safety for all users of the total system is our utmost concern.</p> <p>We will and cannot be the legal manufacturer for the Barn door. Therefor we ask your permission and cooperation to safely integrate this Barn door with our mobile agricultural robot. Thank you for your cooperation.</p> <p>Jan Willem Rodenburg, Product Safety & Compliance Lely Industries N.V.</p> | | | | | | | | | |
| 1 | Please provide us with a CE declaration on the selected product. | | | | | | | | |
| 2 | <table border="1"> <tr> <td> <p>A connection with the system will be made in the following methods:</p>  </td> <td>Allowed? YES/NO*</td> </tr> </table> | <p>A connection with the system will be made in the following methods:</p>  | Allowed? YES/NO* | | | | | | |
| <p>A connection with the system will be made in the following methods:</p>  | Allowed? YES/NO* | | | | | | | | |
| 3 | <p>In order to be able to safely connect to a mobile agricultural robot we require the following mandatory provisions.</p> <table border="1"> <tr> <td>Emergency stop device on the product.</td> <td>YES/NO*</td> </tr> <tr> <td>Lockout / Tagout procedure possible?</td> <td>YES/NO*</td> </tr> <tr> <td>Identified Power switch on control box of the product?</td> <td>YES/NO*</td> </tr> <tr> <td>Barn door in compliance with EN 12453 and EN 60335-1</td> <td>YES/NO*</td> </tr> </table> <p style="text-align: right;">* = Delete as applicable. If no explain in remarks</p> | Emergency stop device on the product. | YES/NO* | Lockout / Tagout procedure possible? | YES/NO* | Identified Power switch on control box of the product? | YES/NO* | Barn door in compliance with EN 12453 and EN 60335-1 | YES/NO* |
| Emergency stop device on the product. | YES/NO* | | | | | | | | |
| Lockout / Tagout procedure possible? | YES/NO* | | | | | | | | |
| Identified Power switch on control box of the product? | YES/NO* | | | | | | | | |
| Barn door in compliance with EN 12453 and EN 60335-1 | YES/NO* | | | | | | | | |
| 4 | <p>Do you foresee additional safety issues not covered by your CE declaration which we must address? Please inform us on risk reducing measures.</p> <table border="1"> <tr> <td>Danger:</td> <td>Risk reducing measure:</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table> | Danger: | Risk reducing measure: | | | | | | |
| Danger: | Risk reducing measure: | | | | | | | | |
| | | | | | | | | | |
| | | | | | | | | | |
| 5 | In case of additional questions, please provide us with a contact: | | | | | | | | |

5.4303.8558.0 A



| | |
|---------------------|-------|
| Additional remarks: | |
| Supplier: | Name: |
| Date: | Sign: |

11 Disposal

Disposing this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Decommissioning and disassembly of the product can be dangerous and must be done only by qualified recycling organizations. All components must be disposed in compliance with the local rules and regulations.

Lubricants and fluids must be disposed correctly to prevent pollution of the environment. Read the safety data sheets of the used lubricants and fluids for correct disposal. All lubricants, chemicals and fluids must be disposed in compliance with the local rules and regulations.



Disposal to sewer of cleaning water with concentrated chemicals may cause damage to health and the environment and must always be prevented.

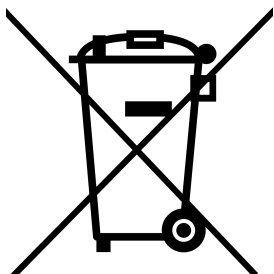
Contact your local authority or local Lely service provider for further details.



INTENTIONALLY BLANK

5.4303.8558.0 A

12 WEEE



This symbol [crossed-out wheel bin WEEE Annex IV] indicates separate collection of electrical waste and electronic equipment in the European countries. We are committed to being a good corporate citizen. As part of that commitment, we strive to maintain an environmentally conscious manufacturing operation

In accordance with the European Union WEEE (Waste Electrical and Electronic Equipment) Directive 2012/19/EC, we would like to notify you that this product might contain regulated materials, which upon disposal, according to the WEEE directive, require special reuse and recycling processing.

For this reason, Lely Industries N.V. has arranged that this product can be recycled at the local recycling/disposal companies to collect and recycle this product at no cost to you.

Additional local legislation may apply.

NOTICE

Please note, only this product itself falls under the WEEE Directive. When disposing of packaging and other related shipping materials we encourage you to recycle these items through the normal channels.



INTENTIONALLY BLANK

5.4303.8558.0 A

13 Declaration of Conformity

13.1 EC Declaration of Conformity – Feed Pusher

EC DECLARATION OF CONFORMITY
EG-KONFORMITÄTSEKTLÄRUNG
DECLARATION DE CONFORMITÉ AUX NORMES DE LA CE
DICHIARAZIONE CE DI CONFORMITÀ
CERTIFICADO DE CONFORMIDAD CEE
DECLARAÇÃO DE CONFORMIDADE CE
DEKLARASJON EU MASKINDIREKTIV
VAATIMUSTENMUKAISUUSVAKUUTUS
EU-KONFORMITETSERKLÄRING
EG-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE
CB – SAMRÆMISYFIRLYSING



ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ Ε.Ε.
DECLARAȚIE DE CONFORMITATE CE
EU MEGFELELŐSÉGI NYILATKOZAT
ES-PROHLÁŠENÍ O SHODĚ
DEKLARACJA ZGODNOŚCI WE
ES – PREHLÁSENIE O ZHODE
VASTAVUS EU DIREKTIIVIDELE
ES ATITIKTIES DEKLARACIJA
ЗАЯВЛЕНИЕ О СООТВЕТСТВИИ НОРМАМ ЕС
EG - POTVRDA O SUKLADNOSTI
ES IZJAVA O SKLADNOSTI

Wij fabrikant

We manufacturer
Der Hersteller
Nous, soussignés, le fabricant
fabbricante
fabricante
producent
valmistaja
produsenten
tillverkare
framleiðandi

Lely Industries N.V.

Cornelis van der Lelylaan 1 • 3147 PB Maassluis • The Netherlands
tel. +31 (0)88 - 12 28 221 • fax +31 (0)88 - 12 28 222
www.lely.com

Εμείς, ο κατασκευαστής
fabricant
gyártó
výrobce
producen
výrobca
tootja
gamintojas
производитель
proizvodač
naziv proizvajalca

verklaren geheel onder eigen verantwoordelijkheid dat de machine:

herewith declare, on our own responsibility, that the machinery:

erklärt hiermit eigenverantwortlich, dass die Maschine:

déclarons que les machines désignées ci-après :

productbeschrijving

description of product
Produktbezeichnung
description du produit
descrizione del prodotto
nombre del producto
designação de produto
produktnavn
tuotenimi
produktnavn
produktnamn
vörulýsing

Lely Juno

περιγραφή του προϊόντος
descrierea produsului
termék megnevezése
označení produktu
opis produktu
označenie výrobku
toote kirjeldus
gaminio aprašymas
наименование изделия
naziv proizvoda

typenummer

model number
Typnummer
numéro de modèle
numero di modello
modelo
número do modelo
modelnummer
mallinnumero
modellnummer
gerðarnúmer

5.4303.0850.X

5.4303.0855.X

5.4303.0860.X

αριθμός μοντέλου
numărul modelului
típus száma
numer modelu
typové číslo
tüübi number
modello numeris
номер модели
broj modela
števila artikla

waarop deze verklaring betrekking heeft, in overeenstemming is met de bepalingen van de volgende Richtlijn(en):

which this declaration refers to, is in accordance with the conditions of the following Directive(s):

worauf sich diese Erklärung bezieht, hergestellt ist gemäß den Bestimmungen der Richtlinie(n):

auxquelles la présente déclaration se rapporte, sont conformes aux dispositions de la ou des directives suivantes :

è conforme alle direttive
de acuerdo con las directivas
de acordo com a directiva
opfylder følgende direktiver
täyttää seuraavien direktiivien vaatimukset
oppfyller følgende direktiver
uppfyller följande direktiv
uppfyllir eftirlitrandi tilskipanir

Machine directive 2006/42/EC
Electromagnetic compatibility 2014/30/EC

conform cu directivele
rendelkezeseknek megfelelelően
podle směrice
zgodny z dyrektywą
v zhode so smernicami
direktiviude järgi
pagal direktyvas
соответствует требованиям директив
po smjernicama
v skladu z direktivo

en in overeenstemming is met de volgende normen of andere normatieve documenten :

and is in conformity with the following standard(s) or other such specifications :

und den folgenden Normen oder vergleichbaren Spezifikationen entspricht:

et aux normes et autres spécifications suivantes :

è conforme alle norme
de acuerdo con las normas
de acordo com as normas
opfylder følgende standarder
täyttää seuraavien standardien vaatimukset
oppfyller følgende standard
uppfyller följande standarder
uppfyllir eftirlitrandi staðla
τήρει τις προδιαγραφές

EN-ISO 12100:2010, EN 60204-1:2018
EN 61000-6-2:2016, EN 61000-6-4:2018

în conformitate cu standardele
megfelel a szabványoknak
odpovídá normám
zgodny z normą
zodpovedá normám
normidele vastavus
atitinka standartus
соответствует стандартам нормам
u skladu sa standardima
v skladu s standardi

handtekening en datum

signature and date
Unterschrift und Datum
signature et date
firma e data
firma y fecha
assinatura e data
underskrift och dato
allekirjoitus ja päiväys
signatur og dato
underskrift och datum
undirskrift og dagsetning

υπογραφή και ημερομηνία
semnătura și data
aláírás és dátum
podpis a datum
podpis i data
podpis a dátum
allkiri ja kuupäev
parašas ir data
подпись и дата
podpis i datum
podpis in datum

Serge Loosveld
Managing Director Feeding
Lely Industries N.V.

A. Mateboer
Competence Director PD
Lely Industries N.V.

15-02-2024

13.2 UKCA Declaration of Conformity – Feed Pusher



We manufacturer

Lely Industries N.V.

Cornelis van der Lelylaan 1 • 3147 PB Maassluis • The Netherlands
tel. +31 (0)88 - 12 28 221 • fax +31 (0)88 - 12 28 222 • www.lely.com

Authorised representative in the UK:

Lely Atlantic Limited • Unit 7 Quartz Point Stonebridgeroad • Coleshill • Birmingham • B46 3JL • United Kingdom

herewith declare, on our own responsibility, that the machinery:

Description of product

Lely Juno

Model number

5.4303.0850.X

5.4303.0855.X

5.4303.0860.X

5.4303.8558.0 A

which this declaration refers to, is in accordance with the conditions of the following Directive(s):

Supply of Machinery (Safety) Regulations 2008 (UK)
Electromagnetic Compatibility Regulations 2016 (UK)

and is in conformity with the following standard(s) or other such specifications :

EN-ISO 12100:2010, EN 60204-1:2018,
EN 61000-6-2:2016, EN 61000-6-4:2018

Signature and date



Serge Loosveld
Managing Director Feeding
Lely Industries N.V.



A. Mateboer
Competence Director PD
Lely Industries N.V.

19-02-2024

13.3 EC Declaration of Conformity – Door Control Box

EC DECLARATION OF CONFORMITY
EG-KONFORMITÄTSEKLRÄUNG
DECLARATION DE CONFORMITÉ AUX NORMES DE LA CE
DICHIARAZIONE CE DI CONFORMITÀ
CERTIFICADO DE CONFORMIDAD CEE
DECLARAÇÃO DE CONFORMIDADE CEE
DEKLARASJON EU MASKINDIREKTIV
VAATIMUSTENMUKAISUUSVAKUUTUS
EU-KONFORMITETSEKLRÆRING
EG-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE
CB – SAMRÆMISYFIRLYSING



innovators in agriculture
ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ Ε.Ε.
DECLARAȚIE DE CONFORMITATE CE
EU MEGFELELŐSÉGI NYILATKOZAT
ES-PROHLÁŠENÍ O SHODĚ
DEKLARACJA ZGODNOŚCI WE
ES – PREHLÁSENIE O ZHODE
VASTAVUS EU DIREKTIIVIDELE
ES ATITIKTIES DEKLARACIJA
ЗАЯВЛЕНИЕ О СООТВЕТСТВИИ НОРМАМ ЕС
EG - POTVRDA O SUKLADNOSTI
ES IZJAVA O SKLADNOSTI

Wij fabrikant

We manufacturer
Der Hersteller
Nous, soussignés, le fabricant
fabbricante
fabricante
producent
valmistaja
produsent
framleiðandi

Lely Industries N.V.
Cornelis van der Lelylaan 1 • 3147 PB Maassluis • The Netherlands
tel. +31 (0)88 - 12 28 221 • fax +31 (0)88 - 12 28 222
www.lely.com

Εμείς, ο κατασκευαστής
fabricant
gyártó
výrobce
producent
výrobca
tootja
gamintojas
производитель
proizvodač
naziv proizvajalca

verklaren geheel onder eigen verantwoordelijkheid dat de machine:
herewith declare, on our own responsibility, that the machinery:
erklärt hiermit eigenverantwortlich, dass die Maschine:
déclarons que les machines désignées ci-après :

productbeschrijving

description of product
Produktbezeichnung
description du produit
descrizione del prodotto
nombre del producto
designação de produto
produktnavn
tuotenimi
produktnavn
produktnamn
vörulysing

Lely Door Control Box

περιγραφή του προϊόντος
descrierea produsului
termék megnevezése
označení produktu
opis produktu
označenie výrobku
toote kirjeldus
gaminio aprašymas
наименование изделия
naziv proizvoda

typennummer

model number
Typnummer
numéro de modèle
numero di modello
modelo
número do modelo
modelnummer
mallinnumero
modellnummer
gerðarnúmer

5.4303.0562.x

Is intended to be used in
combination with Lely Juno.

αριθμός μοντέλου
numărul modelului
típus száma
număr modelu
typové číslo
tüübi number
modelo numeris
номер модели
broj modela
številka artikla

waarop deze verklaring betrekking heeft, in overeenstemming is met de bepalingen van de volgende Richtlijn(en):
which this declaration refers to, is in accordance with the conditions of the following Directive(s):
worauf sich diese Erklärung bezieht, hergestellt ist gemäß den Bestimmungen der Richtlinie(n):
auxquelles la présente déclaration se rapporte, sont conformes aux dispositions de la ou des directives suivantes :

è conforme alle direttive
de acuerdo con las directivas
de acordo com a directiva
opfylder følgende direktiver
täyttää seuraavien direktiivien vaatimukset
opfylder følgende direktiver
uppfyller följande direktiv
uppfyllir eftirlifandi tilskipanir

Low voltage directive 2014/35/EU
Electromagnetic compatibility 2014/30/EU
Radio Equipment Directive 2014/53/EU

conform cu directivele
rendelkezeléseknél megfelelően
podle směrnice
zgodny z dyrektywą
v zohode so smernicami
direktivide järgi
pagal direktyvas
соответствует требованиям директив
po smjernicama
v skladu z direktivo

en in overeenstemming is met de volgende normen of andere normatieve documenten :
and is in conformity with the following standard(s) or other such specifications :
und den folgenden Normen oder vergleichbaren Spezifikationen entspricht:
et aux normes et autres spécifications suivantes :

è conforme alle norme
de acuerdo con las normas
de acordo com as normas
opfylder følgende standarder
täyttää seuraavien standardien vaatimukset
opfylder følgende standarder
uppfyller följande standarder
uppfyllir eftirlifandi staðla
πληροί τις προδιαγραφές

EN 300 328 V2.1.1
EN 60204-1:2006/A1:2009
EN 61000-6-3:2007/A1:2011
EN-IEC 61000-6-2+C11:2005

în conformitate cu standardele
megfelel a szabványoknak
odpovídá normám
zgodny z normą
zodpovedá normám
normidele vastavus
atitinka standartus
соответствует стандартам нормам
u skladu sa standardima
v skladu s standardi

handtekening en datum

signature and date
Unterschrift und Datum
signature et date
firma e data
firma y fecha
assinatura e data
underskrift og dato
allekirjoitus ja päiväs
signatur og dato
underskrift och datum
undirskrift og dagsetning

S. Loosveld
Director Product Development
Lely Industries N.V.

J.W. Rodenburg
Manager Product Safety & Compliance
Lely Industries N.V.

υπογραφή και ημερομηνία
semnătura și data
aláírás és dátum
podpis a datum
podpis i data
podpis a dátum
allkirj ja kuupäev
parašas ir data
подпись и дата
potpis i datum
podpis i datum

20-11-2019

5.4303.8509.9

13.4 UKCA Declaration of Conformity – Door Control Box



We manufacturer

Lely Industries N.V.

Cornelis van der Lelylaan 1 • 3147 PB Maassluis • The Netherlands
tel. +31 (0)88 - 12 28 221 • fax +31 (0)88 - 12 28 222 • www.lely.com

Authorised representative in the UK:

Lely Atlantic Limited • Unit 7 Quartz Point Stonebridgeroad • Coleshill • Birmingham • B46 3JL • United Kingdom

herewith declare, on our own responsibility, that the machinery:

Description of product

Lely Door Control Box

Model number

5.4303.0562.x

Is intended to be used in
combination with Lely Juno.

which this declaration refers to, is in accordance with the conditions of the following Directive(s):

Electrical Equipment (Safety) Regulations 2016 (UK)
Electromagnetic Compatibility Regulations 2016 (UK)
Radio Equipment Regulations 2017 (UK)

and is in conformity with the following standard(s) or other such specifications :

EN 300 328 V2.1.1
EN 60204-1:2006/A1:2009
EN 61000-6-3:2007/A1:2011
EN-IEC 61000-6-2+C11:2005

Signature and date



J.W. Rodenburg
Manager Product Safety & Compliance
Lely Industries N.V.

09-Dec-21

5.4303.8509.9

5.4303.8558.0 A

Index

A

Action 4-46
 Actuator 4-22
 Alarm 4-37, 8-1

B

Backup 4-39, 6-13–6-14
 Barn door 4-29
 Battery 3-1
 Bumper 2-10, 4-25
 Bumper sensor 2-10
 Buzzer 2-10, 4-23

C

Carriage 4-3
 Charger 3-2
 Charging station 3-2, 4-10, 6-10, 7-1–7-2
 Control system 4-6, 4-47
 Cover 4-2, 6-2

D

Day planning 4-36, 4-46, 6-14
 Decommissioning 11-1
 Dimensions 9-1
 Disposal 11-1
 Drive wheel 7-8
 Driving mechanism 4-3

E

Emergency stop button 2-9, 4-26, 6-16, 7-9

F

Feed group 6-11
 Feed push power 6-11

I

Induction sensor 4-19
 Inductive sensor 7-12

L

LED beacon 2-12
 Lely Control Plus 6-2, 6-5–6-6
 Logout 4-46

M

Maintenance 7-1
 Manual control 4-30, 4-46, 6-7
 Motors 4-17

O

Operation 6-15–6-16

P

Pair 6-5
 Password 6-2
 Pause 6-15
 Pause button 2-9, 4-21, 6-15
 Power management 4-16

R

Recycle 11-1
 Route 4-46, 6-13, 6-16

S

Safety 2-1
 Safety decal 2-7
 Safety decals 2-7–2-8
 Safety system 4-5
 Serial number 8
 Settings 4-39
 Shock system 2-11, 4-7
 Skirt 4-2, 4-9, 7-5
 Smartphone 3-3
 Statistics 4-28
 Strip 7-9

T

Temperature 4-27
 Testing 4-14
 Torque loading 7
 Troubleshooting 8-2, 8-5
 Type number 8

U

Ultrasonic sensor 7-4, 7-6
 Ultrasound sensor 4-18
 User interface 4-11

V

Version info.....4-30

W

WEEE12-1

Wheel4-24

Lely Industries N.V.

Cornelis van der Lelylaan 1

NL-3147 PB Maassluis

Tel +31 (0)88 - 12 28 221

Fax +31 (0)88 - 12 28 222

